Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Dpofirs 403040

Dpofirs Mini Voice Changer Sound Card User Manual

Model: 403040 | Brand: Dpofirs

Introduction

The Dpofirs Mini Voice Changer Sound Card is a versatile and portable device designed to modify your voice with various effects and sound changes. It is compatible with a wide range of devices including computers, phones, and tablets, making it ideal for entertainment, gaming, and communication. This manual provides comprehensive instructions for setting up, operating, and maintaining your voice changer.

Product Overview

Key Features

- **Sound Change Variations:** Offers 8 different sound changes including man to woman, woman to man, normal, lolita, baby, youth, king, and witch. Each change can be fine-tuned for additional variations.
- **Built-in Sound Effects:** Includes 8 entertaining sound effects such as applause, kiss, laughter, delight, surprise, fright, crow, and time.
- **Portability:** Small, lightweight, and easy to carry for both indoor and outdoor use.
- **Wide Compatibility:** Compatible with mobile phones, computers, tablets, iOS, Android, and various gaming devices.
- **Plug-and-Play:** No driver program installation required for most uses.

Components

The Dpofirs Mini Voice Changer Sound Card comes with the main unit and necessary connection cables.



Figure 1: Front view of the Dpofirs Mini Voice Changer Sound Card, showing control buttons for sound modes, voice changes, and sound effects.



Figure 2: Close-up view of the 3.5mm audio input/output ports on the voice changer, essential for connecting to various devices.



Figure 3: The Dpofirs Mini Voice Changer Sound Card shown with its included 3.5mm audio cables and USB charging cable.

Setup Instructions

The Dpofirs Mini Voice Changer Sound Card is designed for plug-and-play operation, requiring no driver installation for most devices. Follow these steps to connect your device:

1. **Charging:** Ensure the voice changer is sufficiently charged using the provided USB cable.
2. **Basic Connection:** Connect the voice changer to your mobile phone, tablet, or computer using the appropriate 3.5mm audio cables. The device features 3.5mm interfaces for input and output.
3. **PC Connection:** For use with a PC, an adapter may be required depending on your computer's audio ports.
4. **iOS Device Connection:** For iOS devices, an interface conversion cable (e.g., Lightning to 3.5mm adapter) may need to be purchased separately if your device does not have a 3.5mm jack.
5. **Microphone/Headset Connection:** Plug your microphone into the designated MIC input and your headphones/earphones into the EARPHONE output on the voice changer.

Connection Diagrams



Figure 4: Connection diagram for entertainment use, showing the voice changer connected to a mobile phone and earphones.

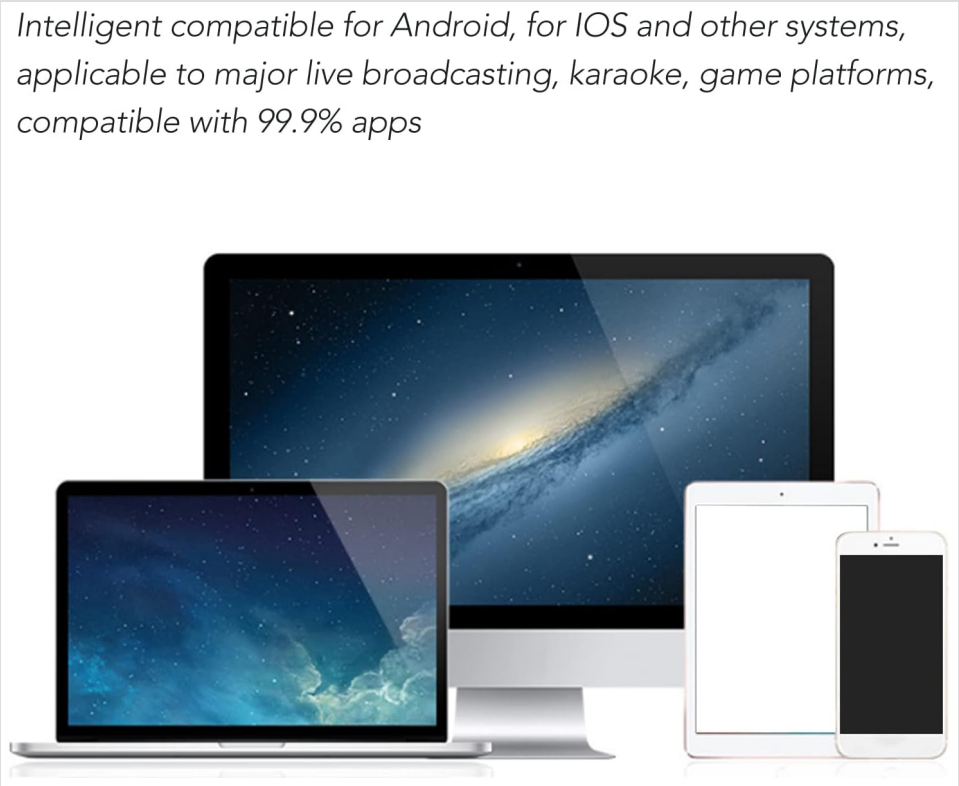

Figure 5: Connection diagram for mobile phone live streaming, illustrating how to connect the voice changer, live mobile phone, accompaniment phone, and earphones.



Figure 6: Connection diagrams for mobile microphone live broadcasting (left) and computer live broadcasting (right), detailing microphone, phone, and computer connections.

Operating Instructions

Once connected, you can begin using your Dpofirs Mini Voice Changer Sound Card to modify your voice and add sound effects.

Voice Change Modes

The device offers 8 primary voice change modes. Use the "Mode" button or dedicated buttons to select your desired voice:

- Man to Woman
- Woman to Man
- Normal
- Lolita
- Baby
- Youth
- King
- Witch

Additionally, the device supports fine-tuning for each voice change, allowing for up to 80 different sound variations. Use the "Fine Tuning" controls to adjust the intensity or specific characteristics of the selected voice.



Figure 7: Visual representation of the male to female and female to male voice changing capabilities of the device.

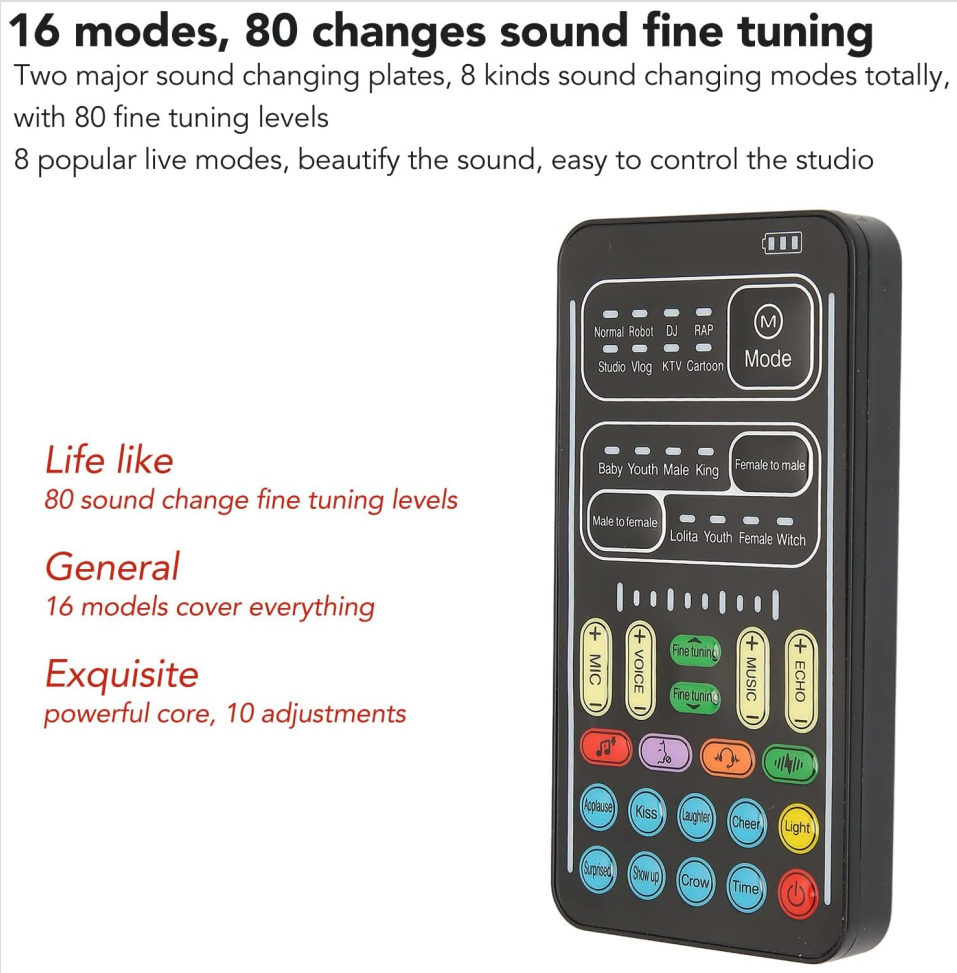

Figure 8: Overview of the 16 sound modes and 80 fine-tuning levels available on the voice changer for diverse sound effects.

Built-in Sound Effects

The sound card includes 8 built-in sound effects to enhance your audio experience. Press the corresponding button on the device to activate each effect:

- Applause
- Kiss
- Laughter
- Delight
- Surprise
- Fright
- Crow
- Time

The LED lights on the device will illuminate to indicate active modes and effects, adding to the interactive experience.



Figure 9: The control panel of the voice changer highlighting buttons for various sound effects and voice modes.

Maintenance

To ensure the longevity and optimal performance of your Dpofirs Mini Voice Changer Sound Card, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the device. Avoid using liquid cleaners or abrasive materials, as they may damage the electronics or finish.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Handle the device with care to prevent drops or impacts, which could damage internal components.
- **Cable Care:** When disconnecting cables, always pull from the plug, not the cable itself, to prevent damage to the wires or connectors.

Troubleshooting

If you encounter issues with your Dpofirs Mini Voice Changer Sound Card, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No sound output or input.	Ensure all cables are securely connected to the correct ports on both the voice changer and your device. Check the volume levels on both the voice changer and the connected device. Verify that the voice changer is sufficiently charged. Test with different cables or earphones/microphone to rule out faulty accessories.

Problem	Possible Cause / Solution
Voice change not working or sounds distorted.	Ensure the correct voice change mode is selected. Adjust the "Fine Tuning" settings to find the optimal sound. Check microphone input levels; too high or too low can cause distortion.
Device not recognized by PC.	For PC use, an adapter may be necessary. Ensure you are using the correct adapter for your computer's audio configuration. Check your computer's sound settings to ensure the voice changer is selected as the input/output device.
No wireless connectivity.	This device is designed for wired connections via 3.5mm audio jacks. It does not support wireless (e.g., Bluetooth) connectivity for voice changing functions. All connections must be physical.
Issues with iOS devices.	If your iOS device lacks a 3.5mm jack, an official Apple Lightning to 3.5mm Headphone Jack Adapter (or similar certified adapter) is required and must be purchased separately. Ensure the adapter is functioning correctly.

Specifications

Feature	Detail
Model Number	403040
Brand	Dpofirs
Package Dimensions	6.3 x 3.74 x 1.3 inches
Item Weight	4.6 ounces
Country of Origin	China
Hardware Interface	USB (for charging), 3.5mm Audio Jack
Audio Output Mode	Surround
Compatible Platforms	iOS, Android, PC, Tablets
Voice Change Modes	8 (with fine-tuning for 80 variations)
Built-in Sound Effects	8

Warranty and Support

For specific warranty information regarding your Dpofirs Mini Voice Changer Sound Card, please refer to the documentation included with your purchase or visit the official Dpofirs website. Warranty terms and conditions may vary by region and retailer.

If you require technical assistance, have questions about product functionality, or need to report an issue, please contact Dpofirs customer support through their official channels. Contact information can typically be found on the product packaging or the brand's official website.

© 2023 Dpofirs. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B2FFV4WN

More documents and user manuals: **https://manuals.plus/**