Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Geepas GO34018

Geepas GO34018 Electric Oven with Convection and Rotisserie User Manual

Model: GO34018 | Brand: Geepas

1. Introduction

This manual provides essential information for the safe and efficient operation of your Geepas GO34018 Electric Oven. Please read these instructions thoroughly before using the appliance and retain them for future reference. This 60-liter electric oven features convection and rotisserie functions, designed for versatile cooking.

2. Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances. This section outlines general safety guidelines. For specific safety information, refer to the full product documentation.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

3. Product Overview and Components

The Geepas GO34018 Electric Oven is a versatile kitchen appliance. Familiarize yourself with its main parts and included accessories.



Figure 1: Front view of the Geepas GO34018 Electric Oven, showing the control panel and oven door.



Figure 2: Angled view of the Geepas GO34018 Electric Oven, highlighting its compact design.



Figure 3: Interior view of the oven with the door open, showing the heating elements and rack positions.

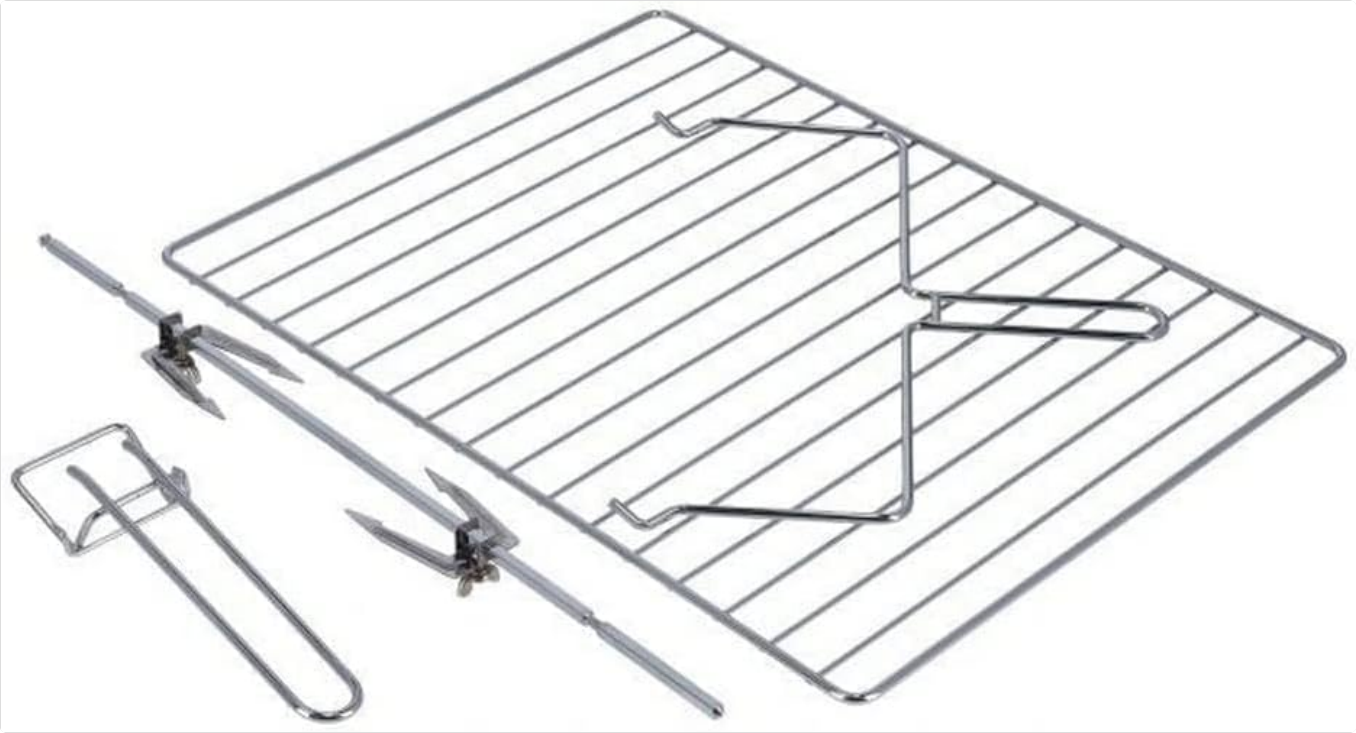


Figure 4: Included accessories: baking rack, rotisserie spit, and rotisserie handle.

Components:

- **Oven Housing:** The main body of the oven.
- **Control Panel:** Located on the right side, featuring knobs for temperature, function, and timer.
- **Glass Door:** Heat-resistant glass door for viewing food during cooking.
- **Heating Elements:** Upper and lower heating elements for even cooking.
- **Interior Light:** For visibility inside the oven.

Included Accessories:

- **Baking Rack:** For placing baking pans or food directly.
- **Baking Tray:** For general baking and roasting.
- **Rotisserie Spit:** For roasting whole chickens or other meats.
- **Rotisserie Handle:** For safely inserting and removing the rotisserie spit.
- **Crumb Tray:** Collects crumbs and drips for easy cleaning.

4. Setup

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash all accessories (baking rack, tray, rotisserie parts) in warm, soapy water, rinse, and dry thoroughly.
3. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 10-15 cm) on all sides and above the oven for proper ventilation. Do not place near flammable materials.
4. **Power Connection:** Ensure the power outlet voltage matches the rating label on the oven. Plug the power cord into a grounded electrical outlet.
5. **First Use Burn-Off:** It is recommended to run the oven empty for approximately 15 minutes at maximum temperature (250°C) with the function set to "Bake" or "Convection Bake" to burn off any manufacturing residues.

A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated during this process.

5. Operating Instructions

The Geepas GO34018 oven features three control knobs: Temperature, Function, and Timer.

Control Panel Overview:

- **Temperature Knob:** Adjusts the cooking temperature from 100°C to 250°C.
- **Function Knob:** Selects the cooking mode:
  - Off
  - Upper Heating Element
  - Lower Heating Element
  - Upper & Lower Heating Elements (Bake)
  - Upper & Lower Heating Elements + Convection
  - Upper Heating Element + Rotisserie
  - Upper & Lower Heating Elements + Convection + Rotisserie
- **Timer Knob:** Sets the cooking time up to 60 minutes or to "Stay On" for continuous operation. The oven will turn off automatically when the timer reaches zero.

General Operation:

1. Place food inside the oven on the baking rack or tray.
2. Close the oven door securely.
3. Turn the **Temperature Knob** to the desired cooking temperature.
4. Turn the **Function Knob** to select the appropriate cooking mode (e.g., "Upper & Lower Heating Elements" for baking, "Convection" for faster, more even cooking, or "Rotisserie" for roasting).
5. Turn the **Timer Knob** to the desired cooking duration. The oven will begin heating. A power indicator light will illuminate.
6. When the timer reaches zero, the oven will automatically switch off, and a bell will sound. If using "Stay On" mode, manually turn the timer knob to "Off" when cooking is complete.
7. Carefully remove cooked food using oven mitts.

Using the Convection Function:

The convection fan circulates hot air, resulting in faster and more even cooking. This is ideal for roasting, baking multiple items, or achieving crispy results. When using convection, you may need to reduce cooking time and/or temperature slightly compared to conventional oven recipes.

- Select a function that includes the convection symbol (e.g., "Upper & Lower Heating Elements + Convection").
- Adjust temperature and time as needed.

Using the Rotisserie Function:

The rotisserie function is perfect for roasting whole chickens, roasts, or other meats, ensuring even browning and self-basting.

1. Secure the food onto the rotisserie spit using the forks. Ensure the food is centered and balanced to prevent uneven rotation.

2. Insert the pointed end of the spit into the rotisserie drive socket on the right side of the oven interior.
3. Rest the square end of the spit onto the rotisserie support on the left side.
4. Select a function that includes the rotisserie symbol (e.g., "Upper Heating Element + Rotisserie" or "Upper & Lower Heating Elements + Convection + Rotisserie").
5. Set the desired temperature and cooking time.
6. Once cooking is complete, use the rotisserie handle to carefully remove the hot spit and food from the oven.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

1. **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Interior Cleaning:** Wipe the interior surfaces with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens can be used, following the product instructions. Ensure all cleaner residue is removed.
3. **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
4. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. Avoid harsh chemicals that could damage the seal.
5. **Accessories:** Wash the baking rack, baking tray, rotisserie spit, and crumb tray in warm, soapy water. They can also be cleaned in a dishwasher if specified by the manufacturer (check product details, though not explicitly stated here, it's a common practice). Rinse and dry thoroughly.
6. **Crumb Tray:** Empty and clean the crumb tray regularly to prevent grease buildup and potential fire hazards.
7. **Do Not Immerse:** Never immerse the main oven unit, power cord, or plug in water or any other liquid.

7. Troubleshooting

If you encounter issues with your Geepas GO34018 Electric Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check circuit breaker. Set the timer knob to a desired time or "Stay On".
Food not cooking evenly.	Incorrect temperature/function; overcrowding; improper rack position.	Verify temperature and function settings. Avoid overcrowding the oven. Try a different rack position or use the convection function.
Rotisserie not rotating.	Rotisserie function not selected; spit not properly seated; food too heavy/unbalanced.	Ensure the function knob is set to a rotisserie mode. Check that the spit is correctly inserted into the drive socket and support. Ensure food is balanced and not exceeding weight limits (refer to full manual for specific limits).

Problem	Possible Cause	Solution
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for initial use. Ensure good ventilation. If smoke persists after initial burn-off, discontinue use and contact support.
Oven door does not close properly.	Obstruction; door hinge issue.	Check for any food debris or accessories obstructing the door. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Geepas customer support.

8. Specifications

Technical details for the Geepas GO34018 Electric Oven:

Feature	Detail
Brand	Geepas
Model Number	GO34018
Capacity	60 Liters
Color	Black
Product Dimensions (L x W x H)	59 x 59 x 56 cm
Item Weight	2 Kilograms
Material	Glass (door)
Special Features	Temperature Control, Convection, Rotisserie
Control Type	Knob
Door Style	Dropdown Door
Included Components	Oven unit, baking rack, baking tray, rotisserie spit, rotisserie handle

9. Warranty and Support

Geepas products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Geepas website.
For technical assistance, troubleshooting beyond this manual, or to inquire about spare parts, please contact Geepas customer support. Have your model number (GO34018) and purchase details ready when contacting support.
Geepas Official Website: www.geepas.com

© 2024 Geepas. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B4X4XD3R

More documents and user manuals: **https://manuals.plus/**