Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TRESKO 600W

TRESKO 600W Infrared Heater User Manual

Model: 600W

1. Important Safety Instructions

Please read this manual carefully before operating the TRESKO Infrared Heater and retain it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the heater is placed on a stable, level surface when used freestanding.
- Do not cover the heater. Covering the heater can cause overheating and fire.
- Keep flammable materials (e.g., curtains, furniture, clothing) at least 1 meter (3 feet) away from the heater.
- Do not use the heater in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Unplug the heater when not in use or before cleaning.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children or individuals with reduced physical, sensory, or mental capabilities.
- This heater is for indoor use only.

2. Product Overview

The TRESKO 600W Infrared Heater provides efficient and comfortable warmth for your indoor spaces. Its sleek design and versatile placement options make it a practical heating solution.

Key Features:

- **Rapid Heating:** Aluminum heating element provides warmth within seconds.
- **Versatile Placement:** Can be used freestanding, wall-mounted, or ceiling-mounted (mounting hardware for wall included).
- **Adjustable Temperature:** Thermostat allows setting temperatures from 5°C to 50°C.
- **Timer Function:** 1 to 24-hour timer for scheduled operation.

- **Safety Features:** Child lock, overheat protection, and frost mode.
- **Quiet Operation:** Suitable for use in bedrooms or quiet environments.
- **Durable Construction:** High-quality safety glass front and perforated metal back.

Components:



Figure 2.1: TRESKO 600W Infrared Heater shown in freestanding configuration with its base feet attached.



Figure 2.2: Detailed view of the heater's side control panel with ON/OFF switch and digital display. Also highlights the aluminum heating element, infrared heat type, absence of dust circulation, and energy-efficient design.

3. Setup and Installation

The TRESKO Infrared Heater offers flexible installation options to suit your needs.

3.1 Freestanding Setup

1. Carefully unpack the heater and all accessories.
2. Attach the provided feet to the base of the heater using the screws. Ensure they are securely fastened for stability.
3. Place the heater on a firm, level surface, ensuring adequate clearance from walls and flammable objects (minimum 1 meter).

3.2 Wall-Mounted Installation

A wall mounting bracket is included for secure wall installation.

1. Choose a suitable wall location, ensuring it is structurally sound and free from electrical wires or plumbing. Maintain minimum 1 meter clearance from flammable materials.
2. Mark the drilling points for the wall bracket using the bracket as a template.
3. Drill holes and insert appropriate wall plugs (if necessary, depending on wall material).
4. Securely fasten the wall bracket to the wall.
5. Carefully hang the heater onto the wall bracket, ensuring it is firmly seated and level.



Figure 3.1: The TRESKO Infrared Heater shown mounted on a wall in a living room setting, demonstrating its discreet integration.



Figure 3.2: The heater shown freestanding, highlighting its 600W maximum power, overheat protection, even heat distribution, and easy assembly. A close-up inset shows the wall mounting bracket.

4. Operating Instructions

Familiarize yourself with the control panel for optimal use of your TRESKO heater.

4.1 Control Panel Overview



Figure 4.1: Detailed view of the heater's control panel, illustrating various buttons and display icons for temperature, timer, and mode settings.

- **ON/OFF Switch:** Located on the side of the heater to power the unit on or off.
- **Display:** Shows current temperature, timer settings, and active modes.
- **Temperature Adjustment Buttons (Up/Down):** Used to set the desired temperature (5°C to 50°C).
- **Mode Button:** Cycles through different operating modes (e.g., Heating Mode, Frost Mode, Comfort Mode, Weekly Mode).
- **Timer Button:** Activates and adjusts the 1-24 hour timer function.
- **Child Lock:** Prevents accidental changes to settings.
- **Window Opening Detection:** Automatically pauses heating if a sudden drop in temperature (e.g., open window) is detected.

4.2 Basic Operation

1. Plug the heater into a suitable electrical outlet (220-240V AC, 50Hz).
2. Turn on the main ON/OFF switch located on the side of the unit. The display will illuminate.

3. Use the temperature adjustment buttons to set your desired room temperature. The heater will automatically maintain this temperature.
4. To turn off the heater, switch off the main ON/OFF switch and unplug the unit from the power outlet.

4.3 Advanced Settings (Modes and Timer)

Refer to the control panel diagram (Figure 4.1) for button locations.

- **Mode Selection:** Press the 'Mode' button to cycle through available heating modes. Consult the full manual for detailed descriptions of each mode (e.g., Weekly Mode P1-P5, Comfort Mode, Frost Mode).
- **Timer Function:** Press the 'Timer' button to activate the timer. Use the temperature adjustment buttons to set the desired operating duration (1-24 hours). The heater will automatically switch off after the set time.
- **Child Lock:** Activate the child lock feature to prevent unauthorized changes to settings. Refer to the full manual for specific activation/deactivation steps.

5. Maintenance

Regular maintenance ensures the longevity and efficient operation of your heater.

5.1 Cleaning

1. Always unplug the heater and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.
3. Ensure no water enters the interior of the heater.
4. Do not immerse the heater in water or any other liquid.

5.2 Storage

If storing the heater for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

6. Troubleshooting

If you encounter issues with your TRESKO heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Main switch off.	Check if the power cord is securely plugged in. Ensure the main ON/OFF switch is in the 'ON' position. Check the circuit breaker.
Heater stops working unexpectedly.	Overheat protection activated. Timer function ended. Window opening detection activated.	Unplug the heater, let it cool down for 30 minutes, then plug it back in. Check timer settings. Close windows/doors if window opening detection is active.
Heater is not heating effectively.	Temperature setting too low. Room too large. Obstruction.	Increase the desired temperature setting. Ensure the heater is not covered and there are no obstructions. Consider if the heater's wattage is appropriate for the room size.

Problem	Possible Cause	Solution
Display shows an error code.	Internal malfunction.	Note the error code and consult the manufacturer's support or a qualified technician.

If the problem persists after attempting these solutions, please contact TRESKO customer support.

7. Specifications

Technical details for the TRESKO 600W Infrared Heater.

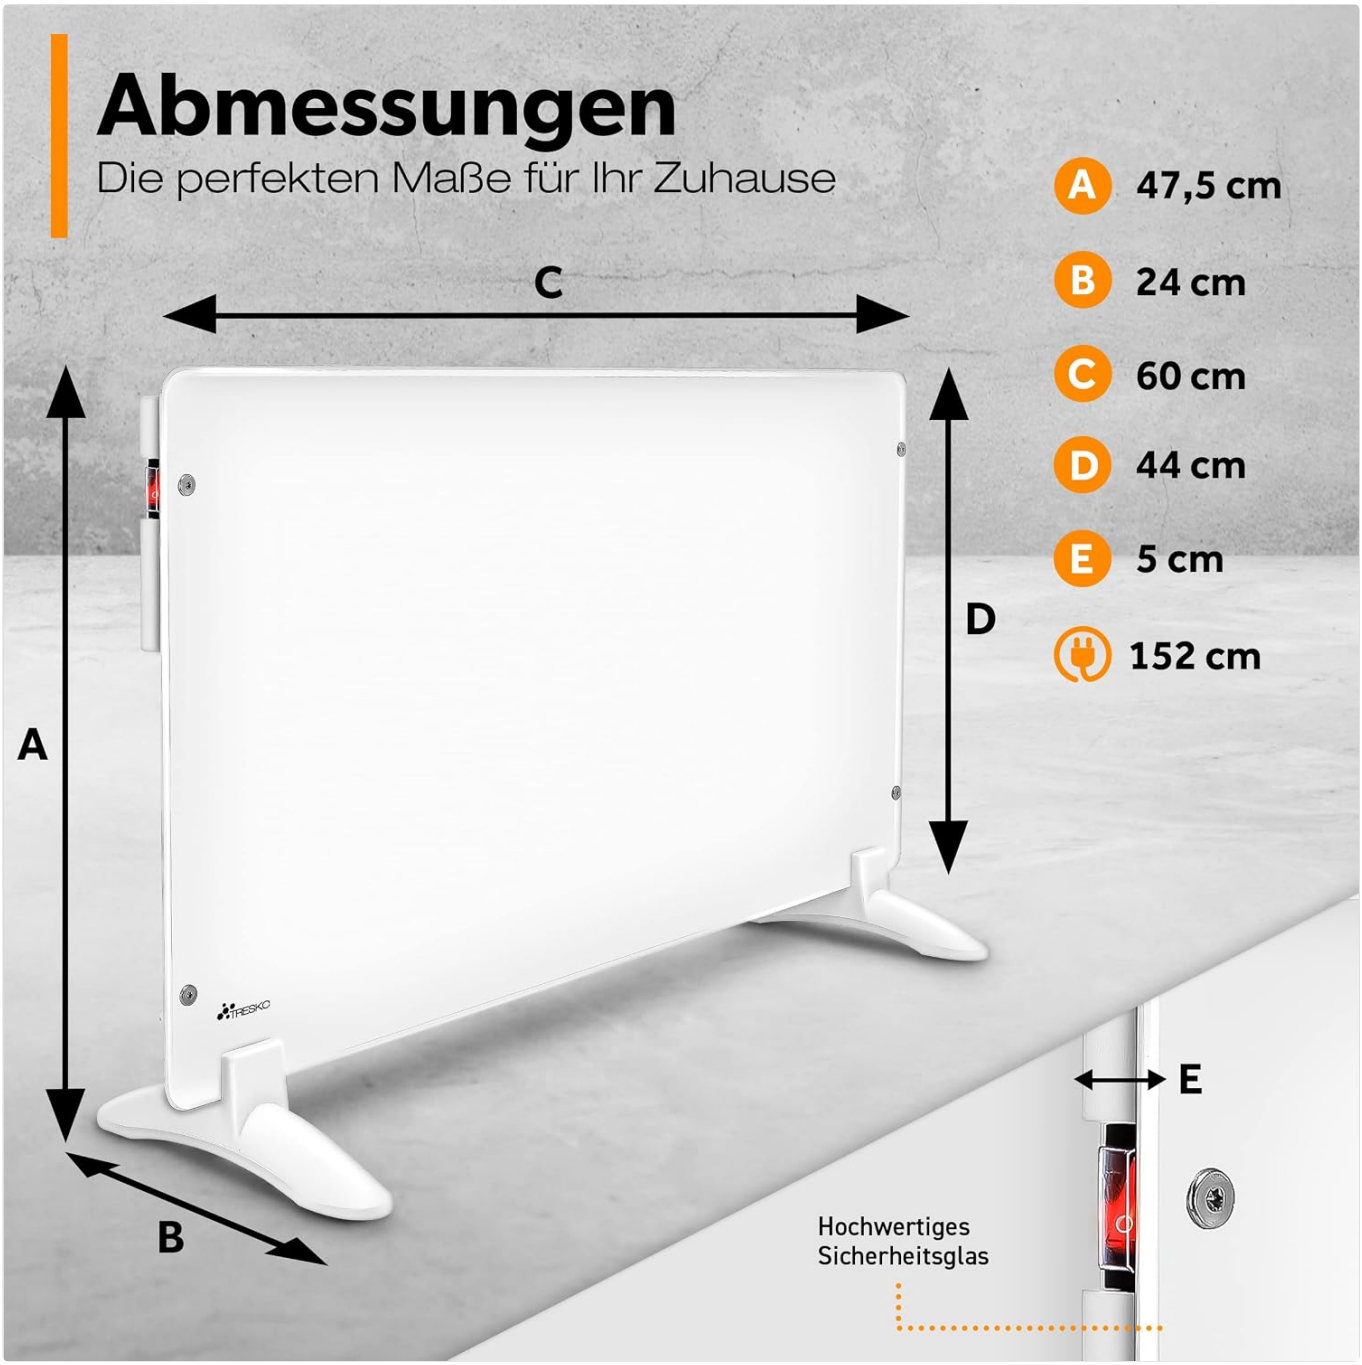

Figure 7.1: Diagram illustrating the dimensions of the TRESKO Infrared Heater.

- **Model:** TRESKO Infrared Heater 600W
- **Power Output:** 600 Watts
- **Voltage:** 220-240V AC

- **Frequency:** 50 Hz
- **Materials:** Glass, Aluminum, Plastic
- **Dimensions (Width x Height x Depth without feet):** 60 cm x 47.5 cm x 5 cm
- **Depth with feet:** 24 cm
- **Cable Length:** 152 cm
- **Heating Method:** Radiant (Infrared)
- **Special Features:** Rapid heating, ON/OFF timer, Portable, Adjustable temperature, Electronic thermostat, Child lock, Overheat protection, Frost mode.
- **Intended Use:** Indoor only

8. Warranty and Support

For warranty information, technical support, or spare parts availability, please refer to your purchase documentation or contact TRESKO customer service directly. Keep your proof of purchase for any warranty claims.
Manufacturer: DWD-Company GmbH & Co. KG
Country of Origin: China

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B5RMRRH3

More documents and user manuals: **https://manuals.plus/**