Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FUNHEE TC-3581B

FUNHEE TC-3581B 3-in-1 Multifunctional Trimmer User Manual

Model: TC-3581B

1. Introduction

The FUNHEE TC-3581B is a versatile 3-in-1 multifunctional hair trimmer designed for precise and effective grooming. It features interchangeable cutting heads to address various facial and body hair needs, including nose hair, ear hair, eyebrows, beard, and sideburns. This manual provides essential information for the safe and efficient use, maintenance, and care of your trimmer.

2. Safety Instructions

- Read all instructions before using the appliance.
- Keep the appliance away from water. Do not immerse the main body in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use attachments supplied with the appliance.
- Do not use the trimmer if the cutting heads are damaged, as this may cause injury.
- Ensure the appliance is fully charged before first use.
- Do not attempt to repair the appliance yourself. Contact customer support for assistance.

3. Product Overview and Components

The FUNHEE TC-3581B trimmer comes with three distinct cutting heads to cater to different grooming requirements:

- **Nose & Ear Hair Trimmer Head:** Features a three-dimensional arch design for safe and effective trimming within the nasal cavity and ears.
- **Eyebrow Trimmer Head with Comb:** Designed for precision trimming of eyebrows, allowing for different lengths with the included comb attachment.
- **Sideburns & Beard Trimmer Head:** For shaping and maintaining sideburns and beards.



Image 3.1: Overview of the FUNHEE TC-3581B 3-in-1 Multifunctional Trimmer and its various uses.

4. Setup

4.1 Initial Charging

Before first use, fully charge the trimmer for approximately 2-3 hours. The trimmer features a built-in battery and a Type-C charging port for convenience.

4.2 Attaching/Detaching Cutting Heads

To attach a cutting head, align the head with the trimmer body and gently twist it clockwise until it locks into place. To detach, twist counter-clockwise and pull the head off.

5. Operating Instructions

Ensure the trimmer is charged and the desired cutting head is securely attached before operation.

5.1 Nose & Ear Hair Trimming

1. Turn on the trimmer.
2. Gently insert the nose & ear hair trimmer head into the nostril or ear canal.
3. Move the trimmer in a circular motion to trim unwanted hair. Avoid inserting too deeply.
4. Clean the head after each use.

5.2 Eyebrow Trimming

1. Attach the eyebrow trimmer head. For desired length, slide the comb attachment onto the head.
2. Turn on the trimmer.
3. Gently move the trimmer against the direction of hair growth to trim eyebrows to the desired length.
4. Remove the comb and clean the head after use.

5.3 Sideburns & Beard Trimming

1. Attach the sideburns & beard trimmer head.
2. Turn on the trimmer.
3. Hold the trimmer at an angle and move it against the direction of hair growth to shape and trim sideburns or beard.
4. Clean the head after use.

6. Charging

The FUNHEE TC-3581B trimmer is equipped with a built-in rechargeable battery and a Type-C charging port. A Type-C charging cable is included.

- Connect the Type-C charging cable to the trimmer's charging port.
- Plug the other end of the cable into a compatible USB power source (e.g., power bank, laptop, mobile charger, wall adapter).
- A full charge takes approximately 120 minutes and provides up to 120 minutes of working time.
- The charging indicator light will show the charging status.



Image 6.1: The FUNHEE TC-3581B Trimmer being charged via its Type-C port.



Image 6.2: The rechargeable design of the trimmer offers a convenient and environmentally friendly charging solution.

7. Cleaning and Maintenance

Regular cleaning ensures optimal performance and hygiene of your trimmer.

1. **Detaching Heads:** Turn the cutting head to the right (counter-clockwise) to easily remove it from the trimmer body.
2. **Rinsing:** The three cutting heads are waterproof. Rinse them under running water to remove any hair residue.

3. **Drying:** Allow the cutting heads to air dry completely before reattaching them to the trimmer body or storing.
4. **Main Body:** Wipe the main body of the trimmer with a clean, damp cloth. Do not rinse the main body under water.
5. **Storage:** Use the equipped storage base to keep all accessories organized and prevent them from being lost. This also helps maintain a clean and tidy grooming area.

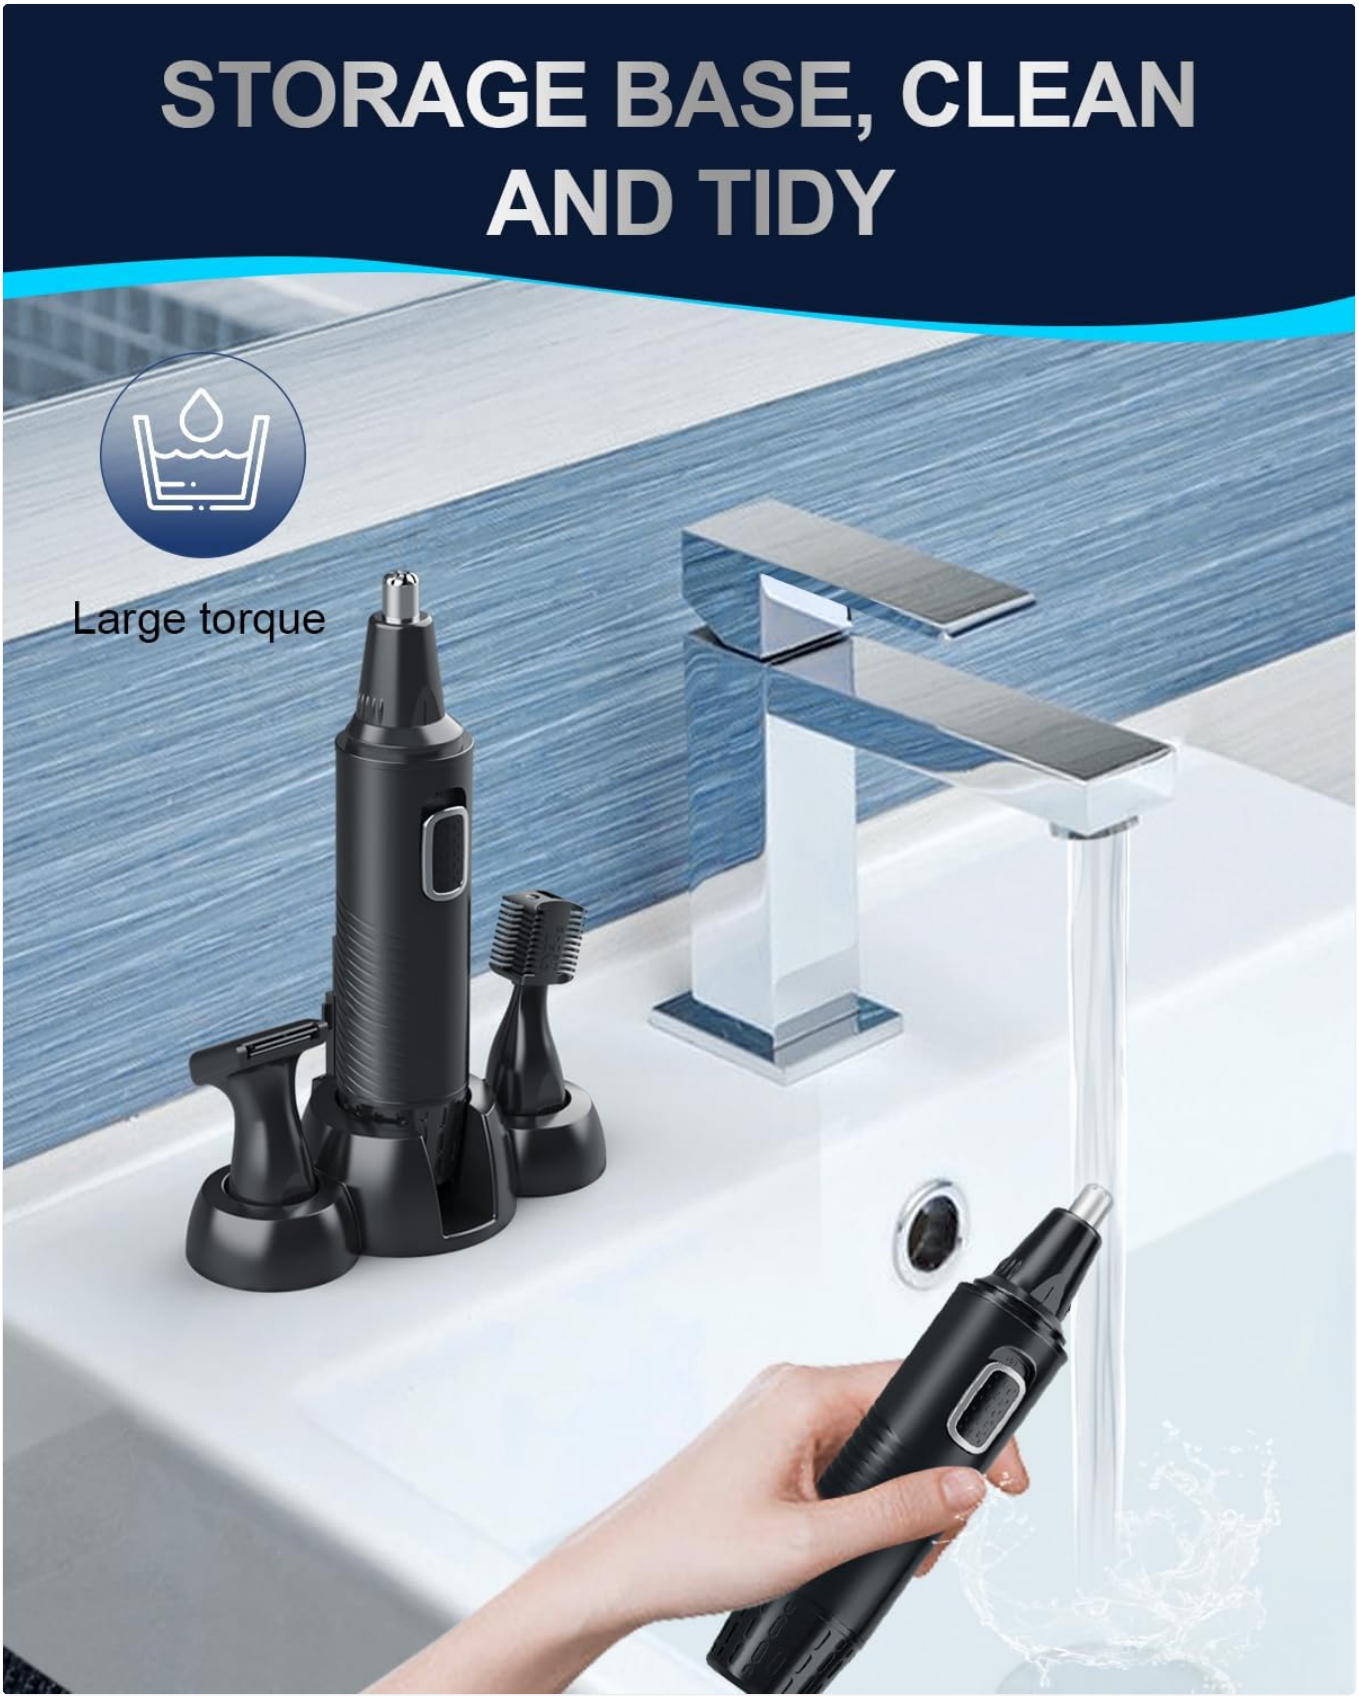

Image 7.1: The washable cutting heads can be easily rinsed under running water, and the storage base keeps components organized.

8. Troubleshooting

8.1 Trimmer Does Not Turn On

- **Battery Low:** If the product does not turn on, the battery may be low. Please try to charge it for approximately 2-3 hours before attempting to turn it on again.
- **Charging Cable/Adapter:** Ensure the Type-C charging cable and power adapter are functioning correctly and securely connected.

If you encounter any other problems or the issue persists, please contact customer support for assistance.

9. Specifications

Feature	Specification
Brand	FUNHEE
Model Name	nose hair trimmer (TC-3581B)
Model Number	TC-3581B
Recommended Product Uses	Nose Hair, Ear Hair, Eyebrows, Beard, Sideburns
Special Features	Rechargeable, 3-in-1 Multifunctional
Power Source	Battery Powered (Built-in)
Charging Type	Type-C
Charging Time	Approx. 120 minutes
Working Time	Approx. 120 minutes
Motor Speed	8500 revolutions per minute
Blade Material	Stainless Steel
Color	Black
Item Weight	200 Grams
UPC	726853399206

10. Warranty and Support

For warranty information or technical support, please refer to the purchase documentation or contact FUNHEE customer service through the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B6H8ZNGX

More documents and user manuals: **https://manuals.plus/**