Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KONKA UDG50QR680ANT

Konka 50 Inch UHD Frameless Smart TV User Manual

Model: UDG50QR680ANT

Introduction

Thank you for choosing the Konka 50 Inch UHD Frameless Smart TV. This manual provides essential information for setting up, operating, and maintaining your television. Please read it thoroughly before using the product to ensure proper and safe operation.

Key Features

- **4K UHD Display:** Offers a screen resolution of 3840×2160 pixels, reproducing original visual details with high fidelity for vivid images.
- **HDR Technology:** Boosts pictorial dynamic range and enhances contrast, generating visual effects that better reflect real-world scenes.
- **Motion Blur Compensation:** Ensures clear visibility of details in every frame, even during high-speed motion.
- **Excellent Surround Sound:** Features DPS professional tuning and large resonance cavities for balanced sound quality and an immersive audio experience.
- **Powerful Quad-Core A55 CPU:** Provides superior performance with extremely short response times for quick operations, whether watching movies or playing games.

Setup

Unpacking the TV

Carefully remove the television and all accessories from the packaging. Retain the packaging materials for future transport or storage.

Assembling the Stand

Place the TV screen-down on a soft, flat surface to prevent scratches. Attach the included stands to the designated slots on the bottom of the TV using the provided screws. Ensure they are securely fastened.







Image: Side profile of the Konka 50 Inch TV, illustrating its slim design and how the stand attaches.

Connecting Peripherals

Connect your external devices such as set-top boxes, gaming consoles, or Blu-ray players to the TV using HDMI or USB cables. Refer to the port labels on the back of the TV for correct connections.

- **HDMI Ports:** For high-definition audio and video input.
- **USB Ports:** For connecting USB storage devices to play media or for service updates.

Initial Power On

Plug the power cable into the TV and then into a wall outlet. Press the power button on the remote control or on the TV itself to turn it on. Follow the on-screen instructions for initial setup, including language selection, network connection, and channel scanning.

Operating Instructions

Remote Control Overview

The included remote control allows you to navigate the TV's features and settings. Insert 2 AAA batteries (not included) into the remote control, ensuring correct polarity.





Image: The Konka Smart TV remote control, featuring dedicated buttons for popular streaming services and essential TV functions.

- **Power Button:** Turns the TV on or off.
- **Number Buttons:** For direct channel selection.
- **Navigation Pad (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Volume +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **Home Button:** Accesses the main smart TV interface.
- **Netflix, YouTube, Google Play Buttons:** Direct access to these applications.

Navigating the Smart TV Interface

Your Konka Smart TV features an intuitive webOS system. Use the remote control's navigation pad to browse through applications, settings, and connected inputs. The home screen provides quick access to your favorite apps and content.



Image: The Konka Smart TV's user interface, showing various app icons and navigation options over a scenic background.

Using Apps and Services

The TV comes pre-installed with popular streaming services like Netflix, Amazon Prime Video, and YouTube. You can access these directly from the home screen or via dedicated buttons on the remote. Ensure your TV is connected to the internet for optimal app performance.

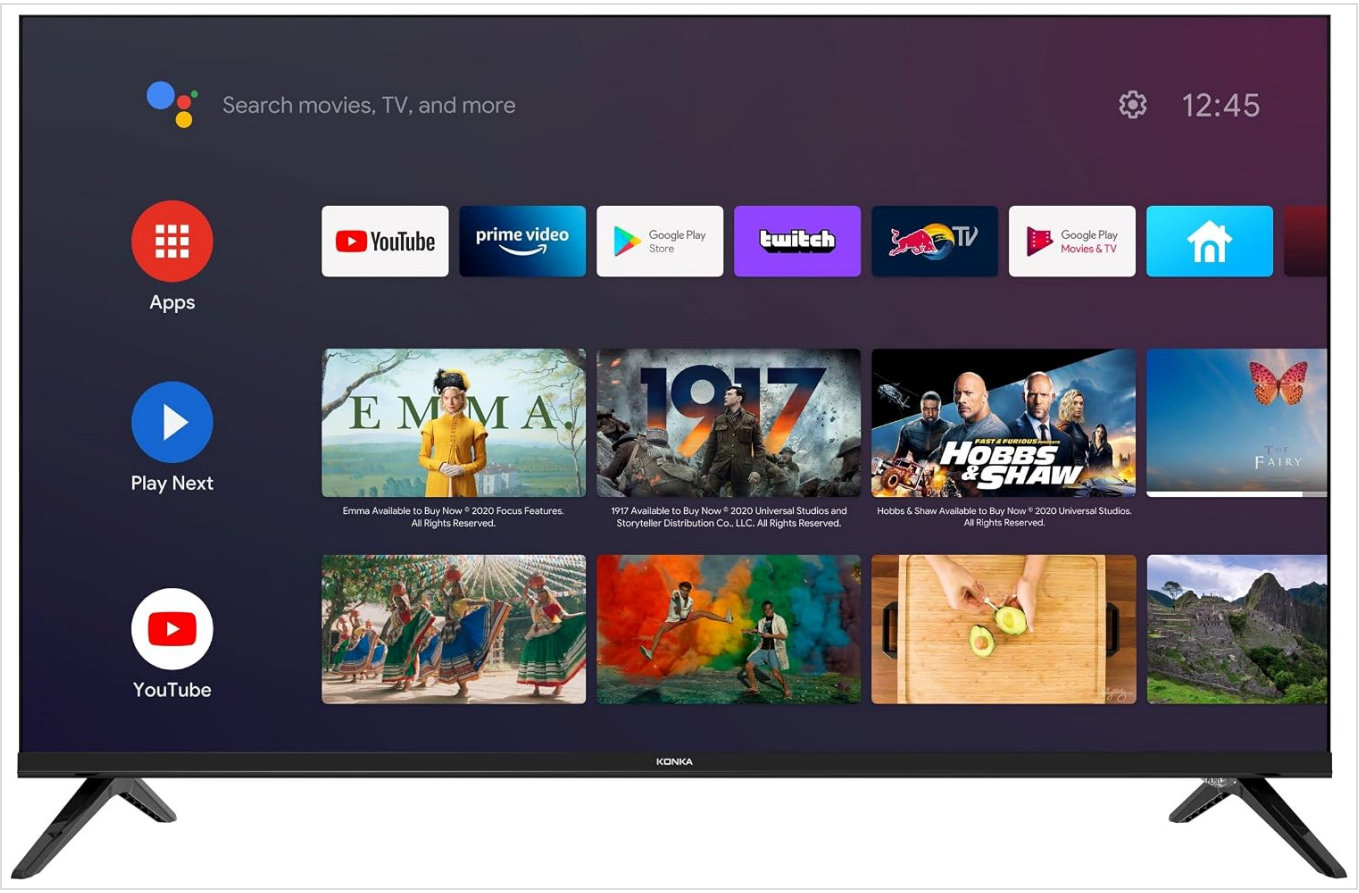

Image: The Konka Smart TV's main screen, showcasing the array of available applications and content categories.

Adjusting Picture and Sound Settings

Access the TV's settings menu to customize picture and sound preferences. You can adjust brightness, contrast, color, and sound modes (e.g., Standard, Movie, Music) to suit your viewing experience.

Maintenance

Cleaning the Screen

To clean the screen, gently wipe it with a soft, dry microfiber cloth. For stubborn marks, lightly dampen the cloth with water or a screen-specific cleaning solution. Avoid using harsh chemicals or abrasive materials.

Software Updates

Periodically check for software updates through the TV's settings menu. Updates can improve performance, add new features, and enhance security. Ensure a stable internet connection during updates.

Troubleshooting

This section addresses common issues you might encounter with your Konka TV. If the problem persists, please contact customer support.

Problem	Possible Solution
No Power	Check if the power cable is securely plugged into the TV and the wall outlet. Try a different outlet.
No Picture/Sound	Verify input source is correct. Check cable connections (HDMI, antenna). Restart connected devices.
Remote Control Not Working	Replace batteries (2 AAA required). Ensure no obstructions between remote and TV.
Poor Picture Quality	Adjust picture settings (brightness, contrast, sharpness). Check source resolution.
No Internet Connection	Check Wi-Fi router. Reconnect to network in TV settings. Restart TV and router.

Specifications

Detailed technical specifications for the Konka 50 Inch UHD Frameless Smart TV (Model: UDG50QR680ANT).

Feature	Detail
Model Name	UDG50QR680ANT
Screen Size	50 Inches (127 cm)
Display Technology	4K UHD
Resolution	3840 x 2160 pixels (4K)
Refresh Rate	60 Hz

Feature	Detail
Product Dimensions (W x D x H)	111.12 x 23.7 x 73.5 cm
Weight	10 kg
Connectivity Technology	USB, HDMI, Wi-Fi
Supported Internet Services	Netflix, Amazon Instant Video, YouTube
Included Components	Power Cable, Remote Control, Stand
Remote Control Batteries	2 AAA batteries (not included)

Warranty and Support

Your Konka TV is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Konka customer service through their official website or the contact information provided in your product documentation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B6R8RSR1

More documents and user manuals: **https://manuals.plus/**