Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Samsung UA32T4380AKXXL

Samsung 32-inch HD Smart LED TV User Manual

Model: UA32T4380AKXXL

1. Introduction

This manual provides essential information for the safe and efficient use of your Samsung 32-inch HD Smart LED TV, model UA32T4380AKXXL. Please read this manual thoroughly before operating your television and retain it for future reference.



Figure 1.1: Front view of the Samsung 32-inch HD Smart LED TV. This image displays the television with its stand, showcasing its slim bezel design and the display quality.

2. Safety Information

To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- **Power Source:** Connect the TV only to an AC power outlet of the specified voltage.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Children:** Supervise children to prevent them from climbing on or playing with the TV.

3. What's in the Box

Carefully unpack the box and ensure all the following items are present:

- 1 x Samsung 32-inch HD Smart LED TV (Model: UA32T4380AKXXL)
- 1 x Power Cord
- 1 x Remote Control (REMOCON)
- 2 x AAA Size Batteries (for remote control)
- User Manual (this document)

Note: Table stand and wall mount are typically sold separately or may require specific installation services. Please check your purchase details.

4. Setup Guide

4.1 Physical Setup

Before connecting any cables, decide whether you will use the TV with its stand or mount it on a wall.

4.1.1 Attaching the Stand (if applicable)

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align the stand base with the corresponding slots on the TV.
3. Secure the stand using the provided screws (if included with the stand).

4.1.2 Wall Mounting (optional)

This TV supports VESA mount standard 600 x 400 mm. Use a compatible wall mount bracket and follow the instructions provided with the wall mount kit. Professional installation is recommended.

4.1.3 Connecting Devices

Your TV features multiple ports for various devices:

- **HDMI Ports (x2):** Connect set-top boxes, Blu-ray players, gaming consoles, or other HDMI-enabled devices.

- **USB Port (x1):** Connect USB storage devices for media playback (Connect Share Movie).
- **Ethernet Port (LAN):** For wired internet connection.
- **Antenna/Cable Input:** For connecting an antenna or cable TV signal.





Figure 4.1: Side view of the TV showing connectivity ports. This image highlights the HDMI, USB, and Ethernet ports for connecting external devices.

4.2 Initial Power On and Smart Setup

1. **Connect Power:** Plug the power cord into the TV and then into a wall outlet.
2. **Power On:** Press the Power button on the remote control or on the TV.
3. **Initial Setup Wizard:** Follow the on-screen instructions to set up your TV. This includes language selection, country, network connection (Wi-Fi or Ethernet), and channel scanning.
4. **Samsung Account:** You may be prompted to sign in or create a Samsung account to access all Smart TV features.

5. Operating Your TV

5.1 Remote Control Overview

Insert the two AAA batteries into the remote control, ensuring correct polarity.



Figure 5.1: Samsung TV remote control. This image shows the layout of the remote control, including power, volume, channel buttons, navigation pad, and dedicated hotkeys for popular streaming services like Netflix and ZEE5.

- **Power Button:** Turns the TV on or off.
- **Source Button:** Selects input sources (HDMI1, HDMI2, TV, USB).
- **Volume (+/-):** Adjusts the volume level.
- **Channel (CH +/-):** Changes TV channels.

- **Navigation Pad (Up/Down/Left/Right/Enter):** Navigates menus and selects options.
- **Return/Exit:** Goes back to the previous screen or exits a menu.
- **Hotkeys:** Direct access buttons for popular streaming apps (e.g., Netflix, ZEE5).

5.2 Smart TV Features (Tizen OS)

Your Samsung Smart TV runs on the Tizen operating system, offering a range of smart functionalities:

- **Content Guide:** Provides recommendations and easy access to live TV, streaming services, and connected devices.
- **Streaming Apps:** Access popular apps like Netflix, YouTube, Prime Video, Hotstar, SonyLiv, and more.
- **Personal Computer Mode:** Transform your TV into a personal computer by connecting a keyboard and mouse, or access your PC remotely.
- **Screen Share (Mirroring):** Wirelessly mirror content from your compatible smartphone or tablet to the TV screen.
- **Smart Browser:** Browse the internet directly on your TV.
- **Connect Share Movie:** Play movies, music, or view photos from a USB drive.





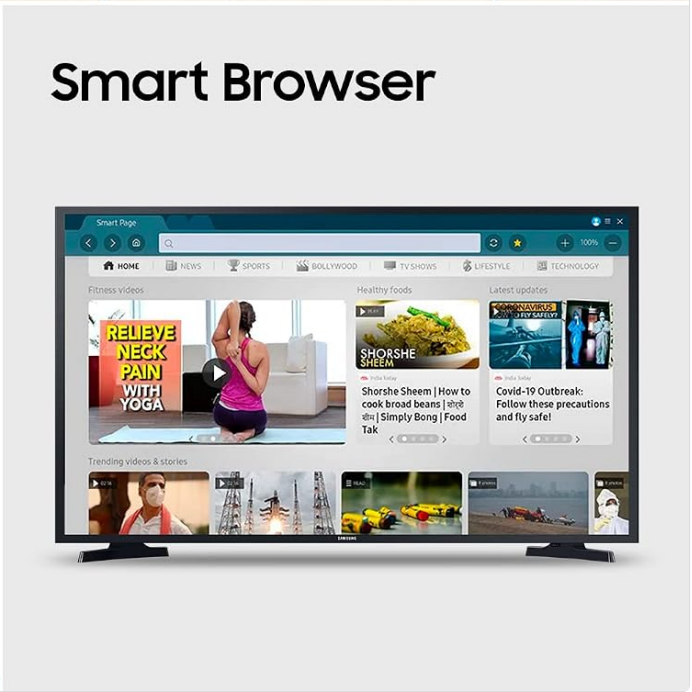

Figure 5.2: Content Guide and Smart Browser interfaces. This image illustrates the user-friendly interface for discovering content and browsing the web on the TV.

5.3 Display and Audio Features

- **HD Picture Quality:** Enjoy clear and vibrant visuals with HD Ready (1366x768) resolution.
- **PurColor:** Experience a wide spectrum of colors for optimal picture performance.
- **Ultra Clean View:** Reduces noise and interference, enhancing picture quality.
- **Contrast Enhancer:** Adjusts contrast for a more dynamic picture.
- **High-Dynamic Range (HDR):** Delivers brighter highlights and a wider range of color detail.
- **Dolby Digital Plus:** Provides immersive surround sound experience with 20 Watts output.

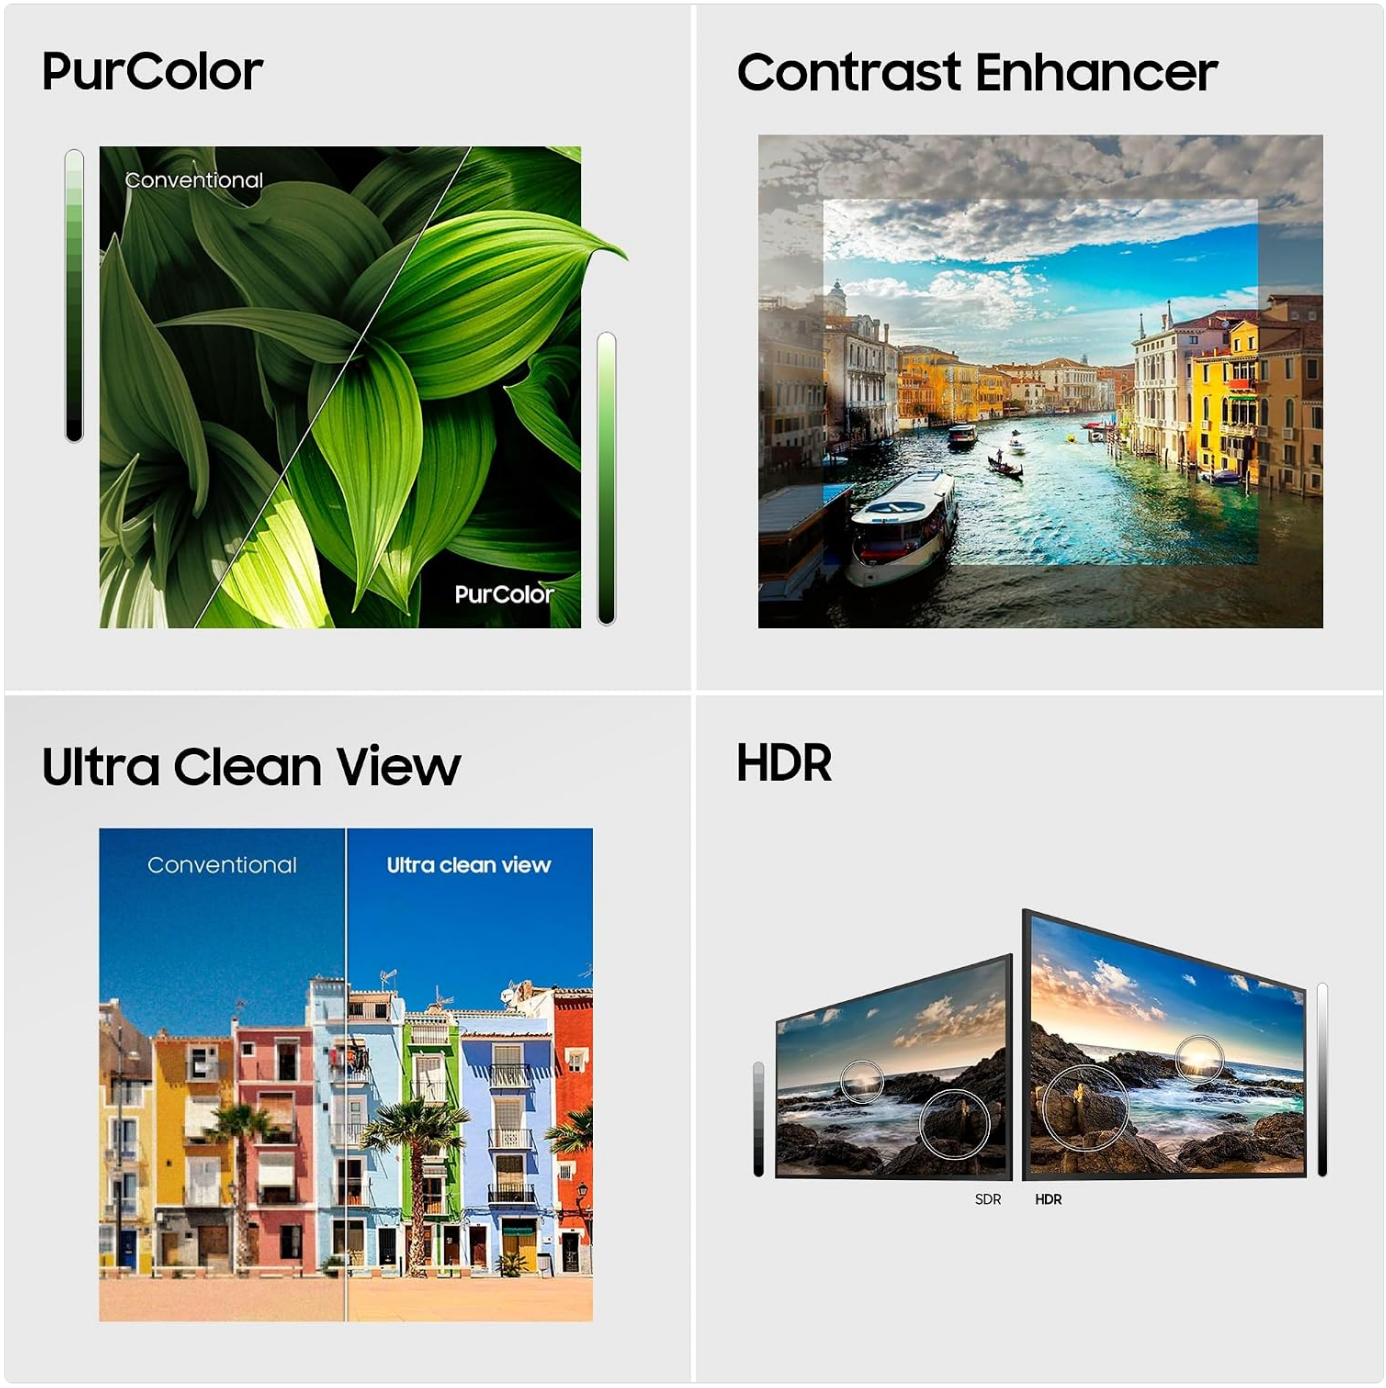

Figure 5.3: Visual comparison of display technologies. This image demonstrates the visual improvements offered by PurColor, Contrast Enhancer, Ultra Clean View, and HDR compared to conventional displays.

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your TV.

- **Screen Cleaning:** Gently wipe the screen with a soft, dry microfiber cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (apply to cloth, not directly to screen).
- **Cabinet Cleaning:** Wipe the TV cabinet with a soft, dry cloth.
- **Dusting:** Regularly dust the ventilation openings to prevent overheating.
- **Power Cord:** Periodically check the power cord for any damage.

Do not use abrasive cleaners, waxes, or solvents as they can damage the TV's finish or screen.

7. Troubleshooting

If you encounter issues with your TV, try these basic troubleshooting steps before contacting support.

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into the TV and the wall outlet. Check if the outlet is working.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly.
No sound, but picture is present	Check the volume level and mute status. Ensure external audio devices are connected correctly.
Remote control not working	Check or replace the batteries. Ensure there are no obstructions between the remote and the TV.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password. Try restarting the TV and router.
Picture is distorted or unclear	Check cable connections. Adjust picture settings (brightness, contrast, sharpness). If using an antenna, check its position.

8. Specifications

Detailed technical specifications for your Samsung 32-inch HD Smart LED TV.



Figure 8.1: Diagram showing the dimensions of the Samsung 32-inch TV. This image provides measurements for the screen width (72.33 cm / 28.48 inch) and height with stand (42.51 cm / 16.74 inch), along with the diagonal screen size (80.0 cm).

Feature	Detail
Model Name	UA32T4380AKXXL
Screen Size	32 Inches (80 cm)
Display Technology	LED
Resolution	HD Ready (1366x768p)
Refresh Rate	60 Hz
Operating System	Tizen
Sound Output	20 Watts
Audio Format	Dolby Digital Plus
HDMI Ports	2
USB Ports	1
Connectivity	Wi-Fi, Ethernet
Product Dimensions (DxWxH)	8.6D x 72.3W x 72.3H Centimeters (without stand)
Weight	3.8 Kilograms
Power Consumption	45 Watts

Feature	Detail
VESA Mount Standard	600 x 400 mm

9. Warranty and Support

9.1 Warranty Information

Your Samsung TV comes with a **1-year comprehensive warranty** plus an **additional 1 year on the panel** from the date of invoice. This warranty covers any defect arising out of faulty or defective material or workmanship.
To claim warranty service, you will need to provide the product's model name and seller's details mentioned on your invoice.

9.2 Customer Support

For any service requests, technical assistance, or warranty claims, please contact Samsung support:

- **Samsung Customer Service:** 1800407267864 or 180057267864
- Please have your TV's model name (UA32T4380AKXXL) and purchase invoice ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B8YTGC23

More documents and user manuals: **https://manuals.plus/**