Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun Series 6 61N1000S

Braun Series 6 61N1000S SensoFlex Electric Shaver Instruction Manual

Model: 61N1000S | Manufacturer: Braun

1. Important Safety Information

Please read these instructions completely before using the appliance. Keep them for future reference.

- This appliance is suitable for cleaning under running tap water. For safety reasons, it can only be operated cordless.
- Do not use the appliance with a damaged foil or cord.
- This appliance is equipped with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its supply cord out of reach of children less than 8 years.
- Only use the special cord set provided with the appliance.

2. Product Overview

The Braun Series 6 61N1000S SensoFlex Electric Shaver is designed for a close shave with skin comfort, featuring advanced technologies for an optimal shaving experience.



Figure 2.1: Braun Series 6 61N1000S Electric Shaver with its retail packaging.

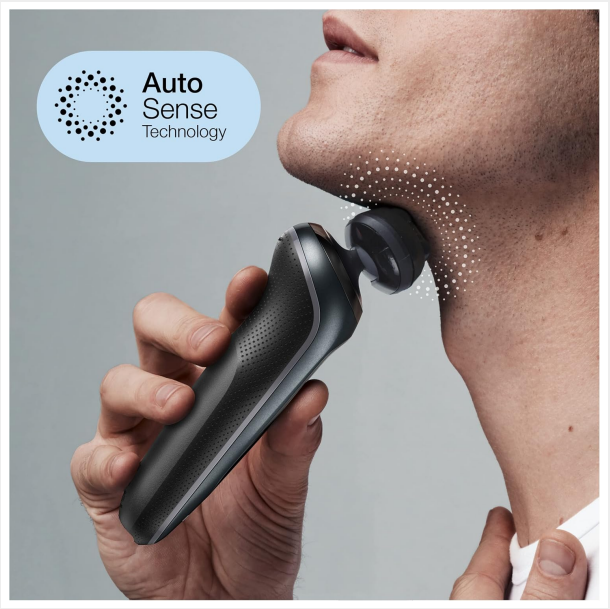

Figure 2.2: The SensoFlex swivel head and SensoFoil blades, designed for minimal pressure on sensitive skin. This feature allows the shaver head to adapt to facial contours.



Figure 2.3: AutoSense technology in action, detecting beard density and adjusting power for efficient shaving.

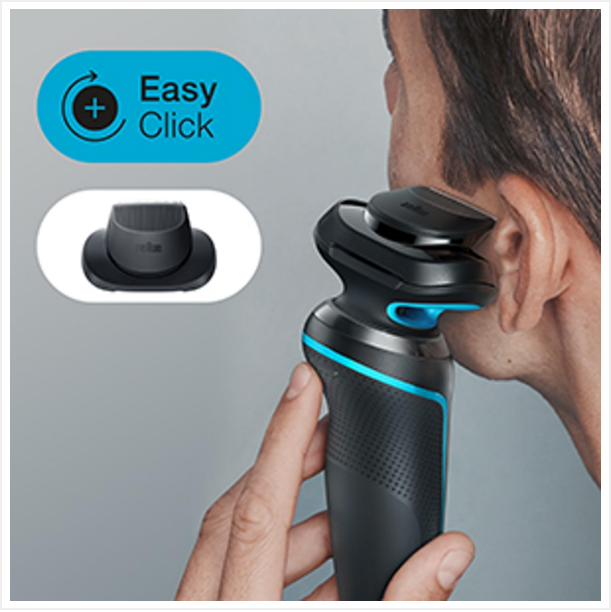

Figure 2.4: The EasyClick precision trimmer accessory, which can be easily attached for detailed grooming.



Figure 2.5: The shaver features a powerful Li-ion battery and an LED display to indicate battery status and other functions.



Figure 2.6: The shaver is 100% waterproof, allowing for dry shaving, use with foam, or in the shower.

Key Features:

- **SensoFlex Swivel Head:** Dermatologically tested, designed to minimize pressure on sensitive skin by adapting to facial contours.
- **AutoSense Technology:** Detects beard density and adjusts motor power accordingly, capturing and cutting more hairs with each stroke.
- **Lithium-ion Battery:** Provides up to 50 minutes of shaving time on a full charge, with a 5-minute quick charge option for a single shave.
- **100% Waterproof:** Suitable for both wet and dry shaving, including use with foam/gel or in the shower.
- **EasyClick System:** Allows for easy attachment of various accessories, such as the included precision trimmer, for versatile grooming.

3. Setup and Initial Use

3.1 Charging the Shaver

1. Ensure the shaver is switched off.
2. Connect the special cord set to the shaver and plug it into an electrical outlet.
3. The LED display will indicate charging progress. A full charge takes approximately 1 hour and provides up to 50 minutes of cordless shaving.
4. For a quick shave, a 5-minute charge is sufficient for one shave.
5. Once fully charged, disconnect the shaver from the power outlet.

3.2 Attaching EasyClick Accessories

- To attach an EasyClick accessory (e.g., precision trimmer), first remove the shaver head by pulling it upwards.
- Align the accessory with the shaver body and press it down until it clicks into place.
- To remove, simply pull the accessory upwards.

4. Operating Instructions

4.1 Shaving

- **Dry Shaving:** For best results, shave before washing your face. Hold the shaver at a right angle (90°) to your skin and stretch your skin with your free hand. Shave against the direction of beard growth.
- **Wet Shaving (with foam/gel or in shower):** Apply shaving foam or gel to your skin. The shaver is fully waterproof and can be used safely in the shower.
- Apply gentle pressure. The SensoFlex head will adapt to your facial contours.

4.2 Using the Precision Trimmer

- Attach the precision trimmer accessory as described in Section 3.2.
- Use the trimmer for shaping sideburns, mustaches, or for precise detailing.

5. Maintenance and Cleaning

Regular cleaning ensures optimal shaving performance and extends the life of your shaver.

5.1 Quick Cleaning (After each use)

1. Switch off the shaver.
2. Rinse the shaver head under hot running tap water until all residues are removed. You can use liquid soap without abrasive particles.
3. For a more thorough cleaning, remove the shaver head and rinse it separately.
4. Shake off excess water and let the shaver air dry with the shaver head removed.

5.2 Thorough Cleaning (Weekly)

- In addition to rinsing, use the small cleaning brush provided to remove stubborn hair particles from the shaver head and inner parts.
- *Do not use the brush on the foil itself, as this can damage it.*

5.3 Replacing Shaver Parts

To maintain 100% shaving performance, replace the shaver head (foil and cutter block) every 18 months, or when worn. Replacement parts are available from authorized Braun retailers or online.

6. Troubleshooting

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver. Ensure the charging cord is properly connected.
Poor shaving performance.	Shaver head is dirty or worn out.	Clean the shaver head thoroughly. If performance does not improve, replace the shaver head (foil and cutter block).
Shaver makes unusual noise.	Hair trapped in the mechanism or damaged part.	Clean the shaver thoroughly. If the noise persists, contact customer service.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are shaving against the grain with gentle pressure. Consider wet shaving with foam/gel. If irritation persists, consult a dermatologist.

7. Specifications

Feature	Detail
Model Name	Series 6 61N1000S
Item Model Number	15/001/0368
Power Source	Battery Powered (Lithium-ion)
Battery Life	Up to 50 minutes (1 hour charge)
Quick Charge	5 minutes for one shave
Waterproof	100% waterproof (Wet & Dry use)
Blade Material	Stainless Steel
Head Type	Foil (SensoFoil) with SensoFlex swivel head
Dimensions	12 x 0.8 x 0.8 cm
Weight	432 Grams
Color	Black
Included Components	Shaver, Precision Trimmer, Charging Cord, Travel Case, Cleaning Brush

8. Warranty and Support

Braun products are manufactured to the highest standards of quality, safety, and reliability. This product is covered by a limited warranty from the date of purchase.

8.1 Warranty Information

For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Braun website. Keep your proof of purchase for warranty claims.

8.2 Customer Support

If you have any questions, require assistance, or need to order replacement parts, please contact Braun customer service. Contact information can typically be found on the Braun website or on the product packaging.
You can visit the official Braun store for more information: Braun Official Store

© 2025 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B9LDLB4S

More documents and user manuals: **https://manuals.plus/**