Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK K703UNI

LEXIBOOK K703UNI Unicorn Electronic Keyboard User Manual

Model: K703UNI | Brand: LEXiBOOK

Introduction

Welcome to the user manual for your new LEXIBOOK K703UNI Unicorn Electronic Keyboard. This 32-key electronic piano with microphone is designed to provide an engaging musical experience for children. This manual provides essential information for safe operation, setup, and maintenance of your device.

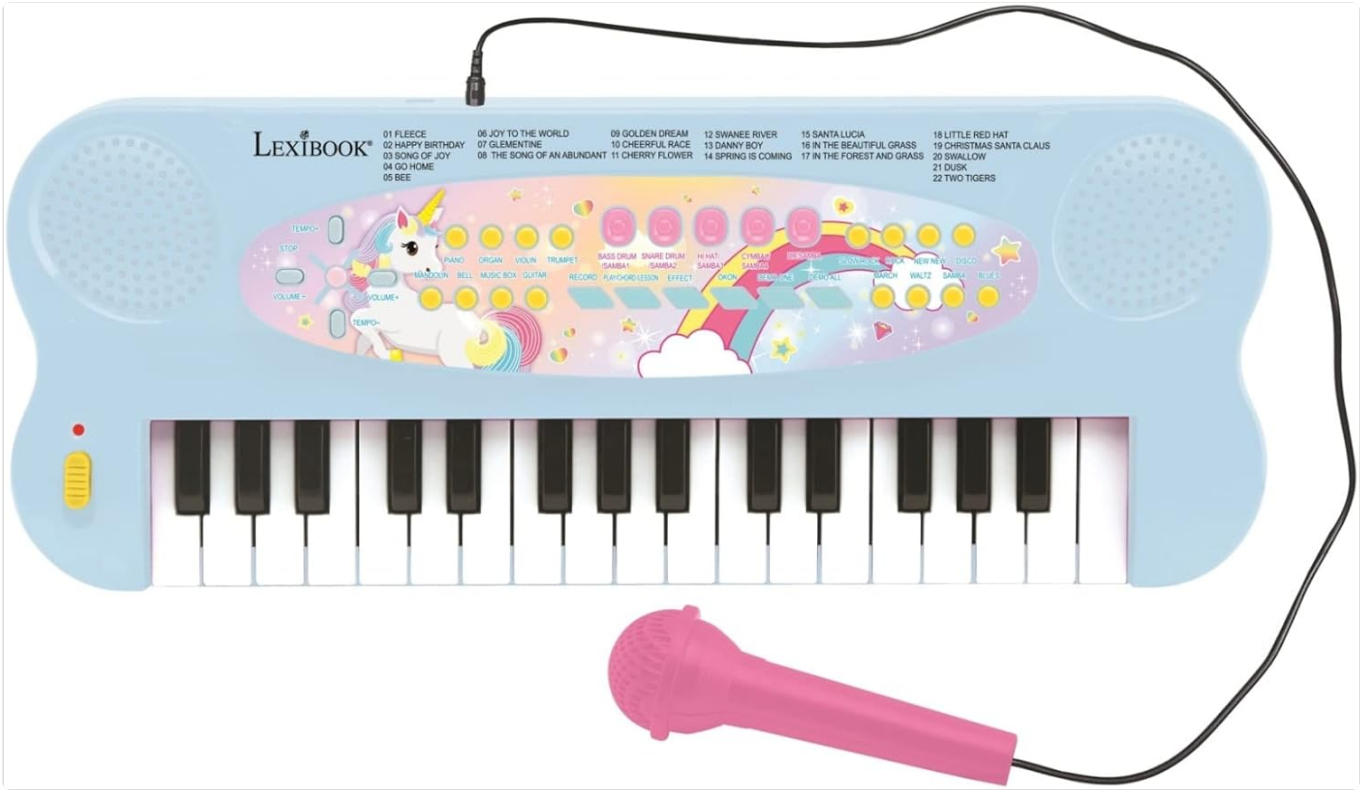


Image: The LEXIBOOK K703UNI Unicorn Electronic Keyboard, showing its 32 keys and included pink microphone.

Safety Information

Please read all safety instructions before using the product. Keep this manual for future reference.

- **Recommended Age:** This product is suitable for children aged 3 years and up.
- **Battery Safety:**
  - Use only the specified battery type (4 AA batteries).

- Do not mix old and new batteries, or different types of batteries.
- Insert batteries with correct polarity (+ and -).
- Remove exhausted batteries promptly.
- Remove batteries if the device will not be used for an extended period.
- Do not short-circuit battery terminals.
- Do not dispose of batteries in fire.

- **Choking Hazard:** The microphone cable could pose a strangulation risk. Adult supervision is recommended.
- **Electrical Safety:** Do not expose the unit to water or moisture. Do not attempt to disassemble or repair the unit yourself.
- **Cleaning:** Clean the unit only with a dry, soft cloth.

Package Contents

Ensure all items are present in the package:

- 1 x LEXIBOOK K703UNI Unicorn Electronic Keyboard
- 1 x Microphone
- 1 x User Manual (this document)



Image: The product packaging, showing the keyboard and microphone inside the box.

Setup

Battery Installation

The keyboard requires 4 AA batteries (not included).

1. Locate the battery compartment on the underside of the keyboard.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 4 new AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Microphone Connection

Connect the included microphone to the keyboard.

1. Locate the microphone input jack on the side of the keyboard.
2. Insert the microphone's plug firmly into the jack.

Operating Instructions

Power On/Off

- To turn on the keyboard, slide the power switch (usually located near the volume control) to the "ON" position.
- To turn off the keyboard, slide the power switch to the "OFF" position.

Volume Control

Adjust the overall sound output using the volume control knob or buttons, typically located on the left side of the keyboard.

Playing Notes

Press the 32 keys to play musical notes. The keyboard features standard piano keys.

Demo Songs

The keyboard includes 22 pre-recorded demo songs. Press the "Demo Song" button to cycle through and play these melodies.

Rhythms, Tones, and Percussions

Enhance your music with various built-in features:

- **8 Rhythms:** Select from different rhythmic patterns to accompany your playing.
- **8 Tones:** Change the instrument sound (e.g., piano, organ, trumpet).
- **4 Percussions:** Add drum sounds by pressing dedicated percussion pads.

Microphone Use

Once connected, the microphone allows you to sing along while playing the keyboard. Ensure the microphone is positioned correctly for clear sound pickup.





Images: Children engaging with the LEXIBOOK K703UNI keyboard, demonstrating its use.

Maintenance

Cleaning

To clean the keyboard, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or water, as these can damage the electronic components.

Storage

When not in use, store the keyboard in a cool, dry place, away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

Troubleshooting

Problem	Possible Cause	Solution
Keyboard does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity. Replace with new AA batteries.
No sound from keyboard.	Volume is too low or muted.	Increase the volume using the volume control.
Microphone not working.	Microphone not properly connected.	Ensure the microphone plug is fully inserted into the jack.
Distorted sound.	Low batteries.	Replace batteries with new ones.

Specifications

Model Number	K703UNI
Brand	LEXiBOOK
Product Dimensions	15.55 x 6.1 x 2.05 inches (39.5 x 15.5 x 5.2 cm)
Item Weight	1.06 pounds (0.48 kg)
Keys	32
Demo Songs	22
Rhythms	8
Tones	8
Percussions	4
Power Source	4 x AA batteries (not included)
Recommended Age	3 years and up

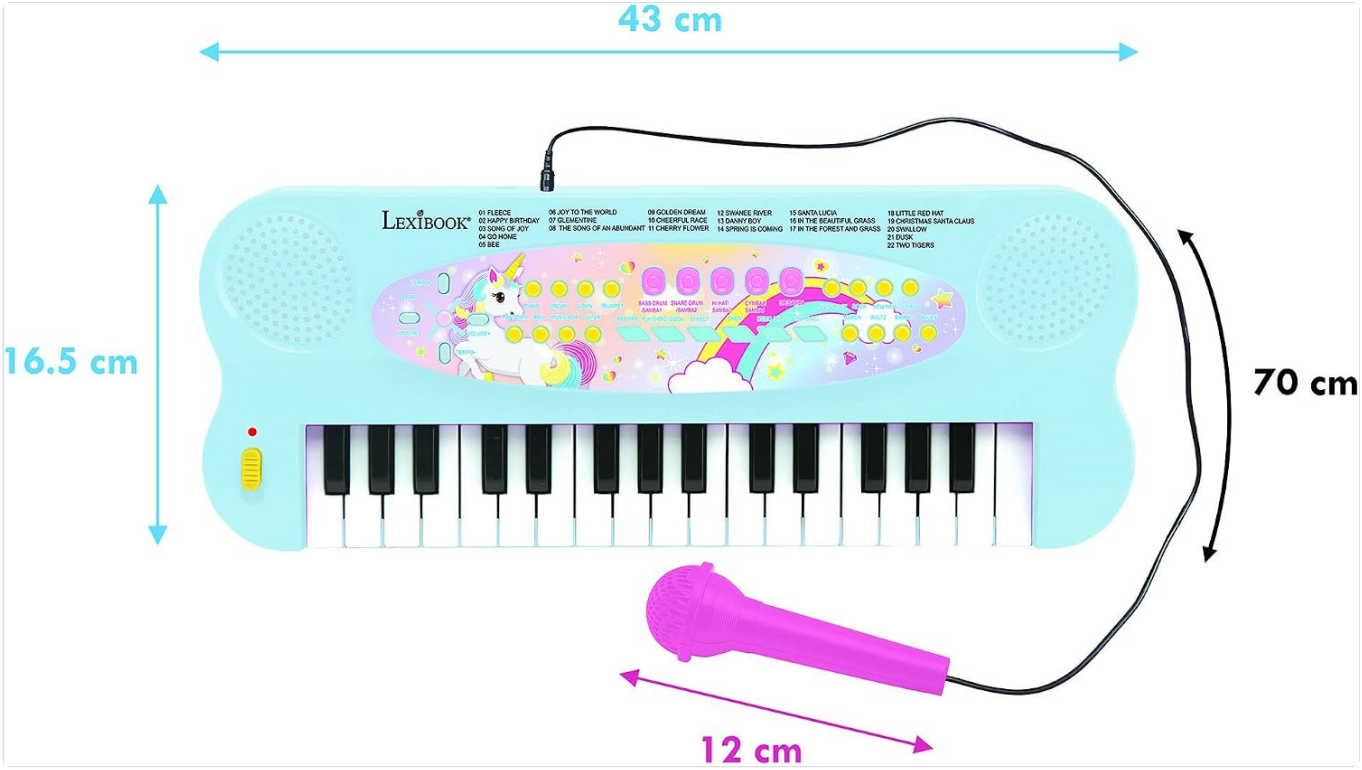


Image: The keyboard with its approximate dimensions indicated.

Warranty Information

No specific warranty information is provided in the product details. Please refer to the manufacturer's official website or contact their customer service for warranty details.

Customer Support

For further assistance, technical support, or inquiries regarding your LEXIBOOK K703UNI Unicorn Electronic Keyboard, please contact LEXiBOOK customer service through their official website or the contact information provided on the product packaging. You can visit the official LEXiBOOK store on Amazon: LEXiBOOK Store

© 2023 LEXiBOOK. All rights reserved. Information subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BCFQPSFS

More documents and user manuals: **https://manuals.plus/**