TRESKO B0BCGYKV5C

TRESKO 2000W Electric Convector Heater User Manual

Model: B0BCGYKV5C

Introduction Safety Instructions Package Contents Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for choosing the TRESKO 2000W Electric Convector Heater. This appliance is designed to provide efficient and comfortable heating for your home. It features rapid heating, a continuously adjustable thermostat, and can be used as a freestanding unit with wheels or mounted on a wall. Please read this manual carefully before use to ensure safe and optimal operation.



Image 1.1: TRESKO 2000W Electric Convector Heater with its base and wheels.

2. Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Keep this manual for future reference.

- Read all instructions before using this heater.
- Do not use this heater outdoors.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.

- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has a double overheating protection system. If the heater overheats, it will automatically shut off.
- The heater is splash-proof (IP24 rated), making it suitable for use in bathrooms, but ensure it is not directly exposed to water jets.
- Connect to properly grounded outlets only.

3. Package Contents

Please check the package contents upon unpacking. If any parts are missing or damaged, contact customer support.

- TRESKO Electric Convector Heater (1 unit)
- Feet with wheels (2 units)
- Wall mounting bracket (1 set)
- Instruction Manual (this document)



Image 3.1: Overview of the heater, including its dimensions and indicating the inclusion of wall brackets and wheels.

4. Setup and Installation

The TRESKO Convector Heater offers flexible installation options: freestanding with wheels or wall-mounted.

4.1 Freestanding Installation

1. Carefully remove the heater from its packaging.
2. Attach the two feet with wheels to the bottom of the heater using the provided screws. Ensure they are securely fastened.
3. Place the heater on a stable, level surface, away from flammable materials and at least 1 meter from walls or furniture.



Image 4.1: The heater assembled with its wheels, ready for freestanding use.

4.2 Wall-Mounted Installation

1. Ensure the chosen wall location is suitable for supporting the heater's weight and is away from flammable materials.
2. Mark the drilling points on the wall using the wall mounting bracket as a template.
3. Drill holes and insert wall plugs (if necessary, depending on wall type).
4. Secure the wall mounting bracket to the wall with screws.
5. Carefully hang the heater onto the wall mounting bracket, ensuring it is securely seated.



Image 4.2: The heater installed on a wall, demonstrating its flat design and quiet operation.

5. Operating Instructions

The heater is controlled by two knobs located on the side. One knob controls the power level, and the other controls the temperature setting.

5.1 Power Settings

- **OFF:** Heater is off.
- **1 (Low):** Activates the heater at a lower power output.
- **2 (High):** Activates the heater at maximum power output (2000W for this model).

5.2 Temperature Control

The thermostat knob allows you to set the desired room temperature between 5°C and 50°C.

- **MIN:** Lowest temperature setting (approx. 5°C).
- **MAX:** Highest temperature setting (approx. 50°C).

The heater will cycle on and off to maintain the set temperature. A control light indicates when the heater is actively heating.



Image 5.1: Detailed view of the side control knobs for power and temperature adjustment.

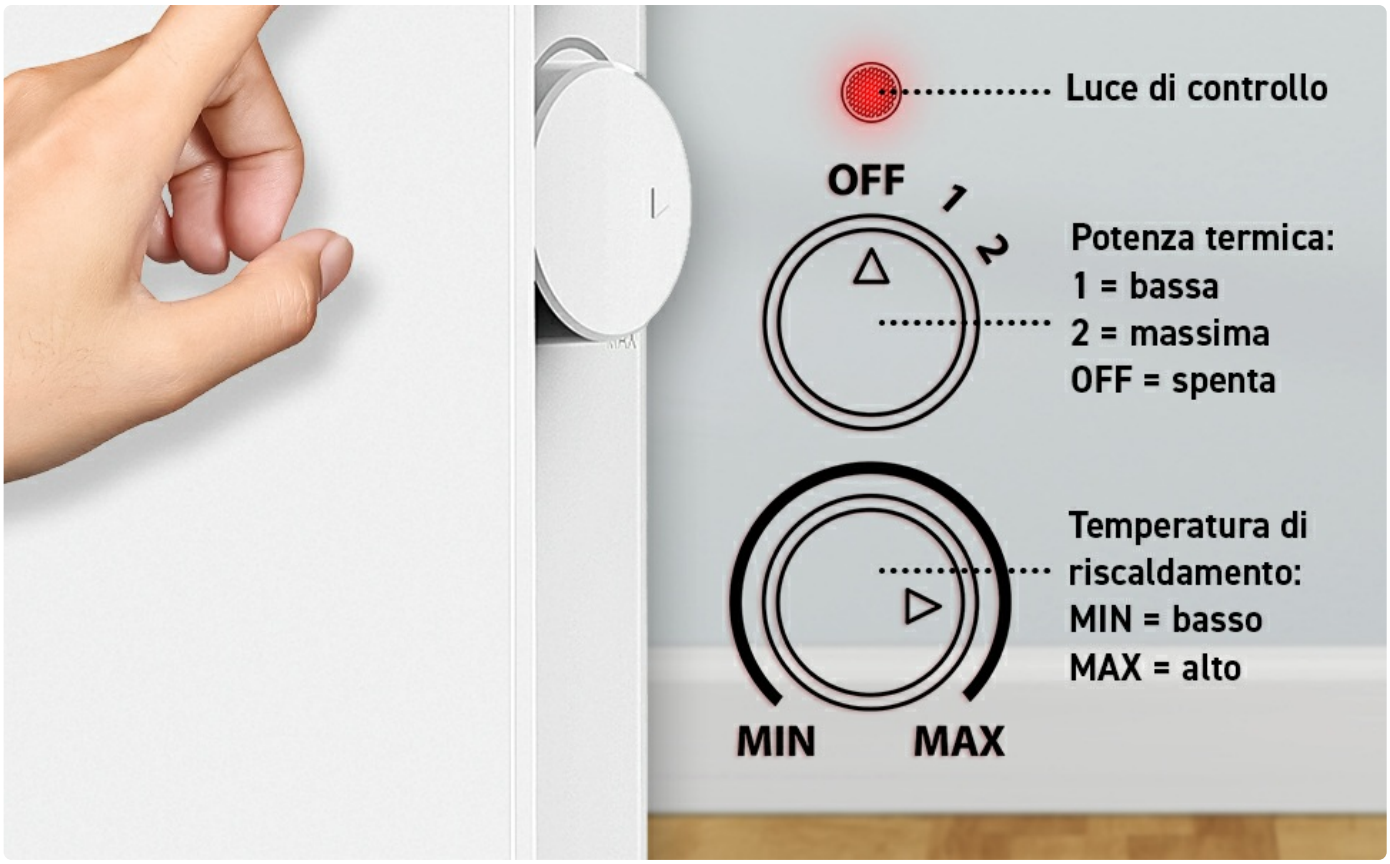


Image 5.2: Diagram illustrating the function of the power and temperature control knobs.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your heater.

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the heater in water or spray water directly onto it.
- Ensure the air inlets and outlets are free from dust and debris. Use a vacuum cleaner with a brush attachment to gently clean these areas.
- Store the heater in a cool, dry place when not in use.

7. Troubleshooting

If you encounter issues with your TRESKO Convector Heater, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply, power switch off, or thermostat set too low.	Check if the power cord is securely plugged in. Ensure the power switch is set to '1' or '2'. Increase the thermostat setting.
Heater stops working unexpectedly.	Overheating protection activated, or thermostat reached set temperature.	Unplug the heater and let it cool down for 30 minutes. Check for any obstructions blocking air vents. If the issue persists, contact support. The heater will also turn off once the room reaches the set temperature.

Problem	Possible Cause	Solution
Insufficient heating.	Thermostat set too low, or room size exceeds heater capacity.	Increase the thermostat setting. Ensure the power level is set to '2' (High). Verify the heater's wattage is appropriate for your room size (2000W for up to 40m²).
Unusual noise.	Loose parts or internal issue.	Turn off and unplug the heater immediately. Do not attempt to repair. Contact customer support.

If the problem persists after trying these solutions, please contact TRESKO customer support.

8. Technical Specifications

- **Brand:** TRESKO
- **Model:** B0BCGYKV5C
- **Color:** White
- **Power Output:** 2000W
- **Voltage:** 220-240V ~ 50Hz
- **Temperature Range:** 5°C - 50°C
- **Dimensions (approx.):** 81.5 cm (Length) x 12 cm (Depth) x 54.5 cm (Height)
- **Weight:** 8 kg
- **Special Features:** Portable (with wheels), Wall-mountable, Overheating Protection, Splash-proof (IP24), Adjustable Thermostat.
- **Recommended Room Size (2000W):** Up to 40m²



Image 8.1: Features such as IP24 splash protection and robust construction.

9. Warranty and Customer Support

TRESKO products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the documentation provided with your purchase or contact your retailer.

For technical assistance, troubleshooting beyond this manual, or spare parts, please contact TRESKO customer support through your purchase platform or the official TRESKO website.

© 2025 TRESKO. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question