Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LOVENSE Lush 3.0

LOVENSE Lush 3.0 User Manual

Your guide to setting up, operating, and maintaining your LOVENSE Lush 3.0 Wearable Bluetooth Vibrator.

1. Product Overview

The LOVENSE Lush 3.0 is a wearable Bluetooth-controlled vibrator designed for discreet and versatile use. It features a powerful motor, body-safe silicone material, and is fully waterproof for easy cleaning. Control is managed via the LOVENSE Remote App, offering various vibration patterns and remote connectivity.



Image: The LOVENSE Lush 3.0 device, showcasing its ergonomic design and vibrant pink color.



Image: The LOVENSE Lush 3.0 device alongside its product packaging, highlighting the brand and model.

2. Setup

2.1 What's Included

Your LOVENSE Lush 3.0 package should contain the following items:

- LOVENSE Lush 3.0 device
- Magnetic USB Charging Cable
- Quick Setup Guide
- User Manual
- Storage Pouch



Image: All items included in the LOVENSE Lush 3.0 package: the device, charging cable, quick setup guide, user manual, and storage pouch.

2.2 Initial Charging

Before first use, fully charge your Lush 3.0. Connect the magnetic charging cable to the charging port on the device. The indicator light will show charging status. A full charge typically provides 4.5 to 5 hours of continuous use.

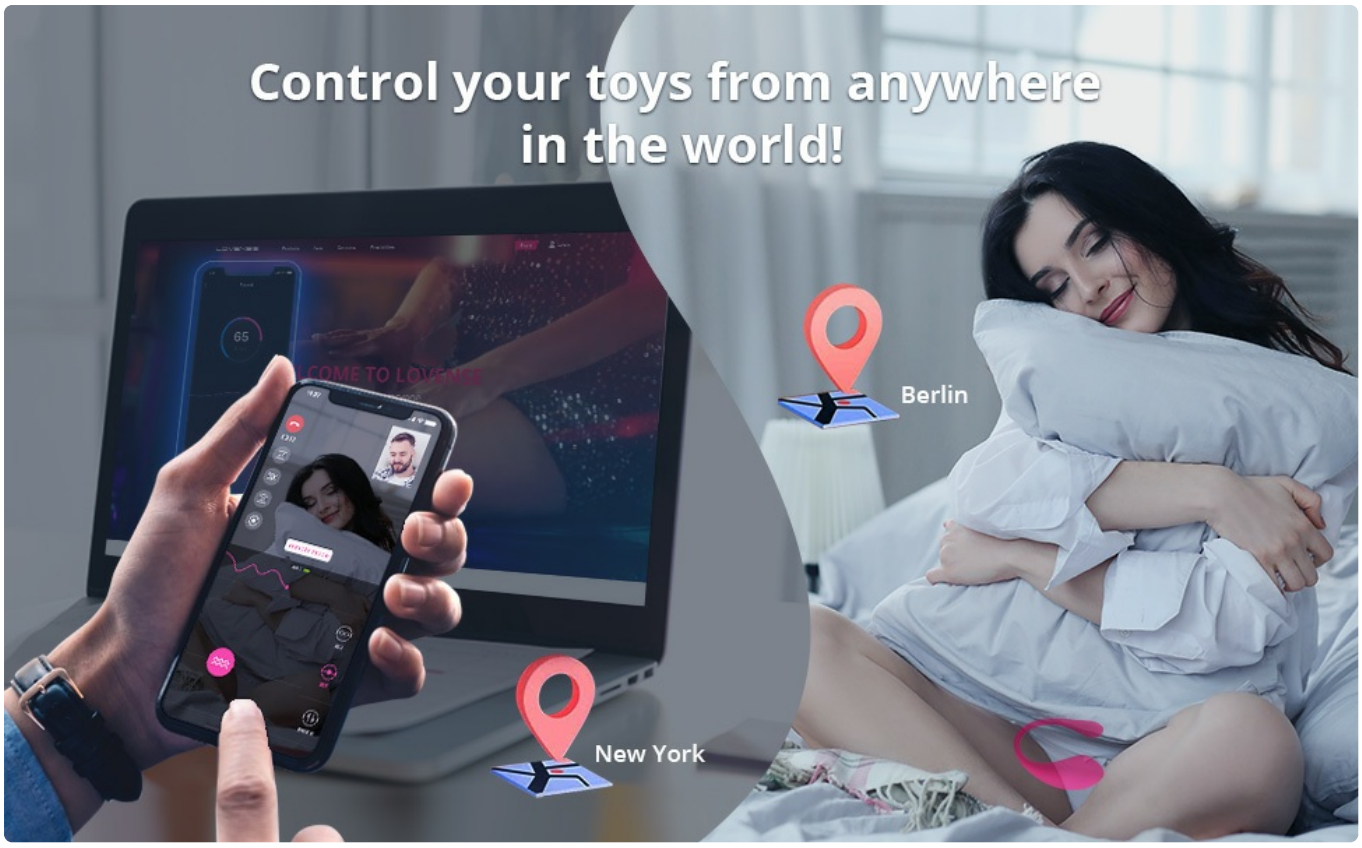


Image: Diagram highlighting the magnetic charging port and internal components of the LOVENSE Lush 3.0.

2.3 App Download and Connection

The LOVENSE Lush 3.0 is controlled via the LOVENSE Remote App. Download the app from your device's app store:

Download on the App Store (iOS 11.0 and later)

Get it on Google Play (Android 5.0 and later with Bluetooth 4.0 enabled)

Mac (with Bluetooth 4.0 enabled)

Windows PC (requires a LOVENSE USB Bluetooth Adapter for connection)

Once installed, open the app and follow the on-screen instructions to connect your Lush 3.0 via Bluetooth. Ensure your device's Bluetooth is enabled.

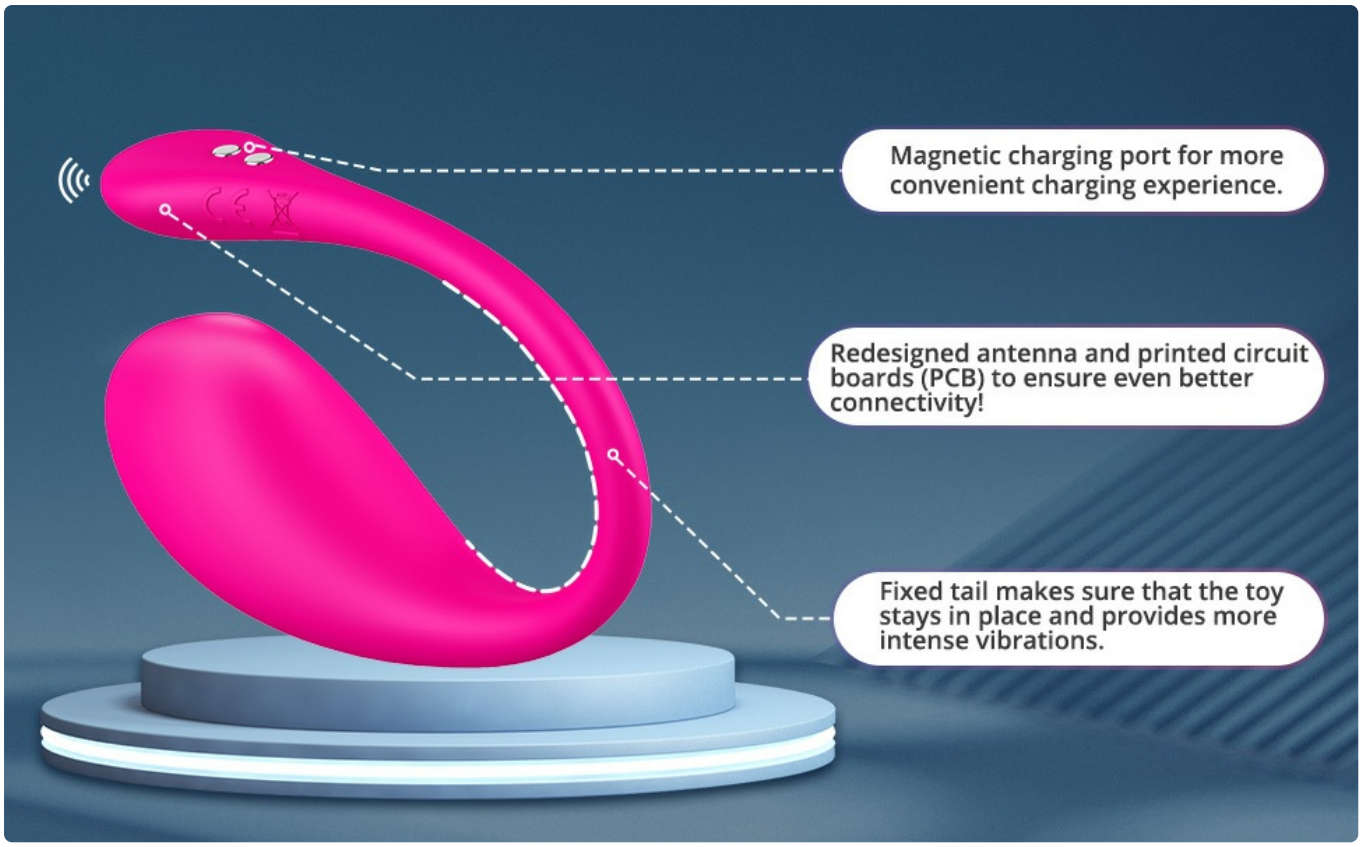


Image: The LOVENSE Remote App interface displayed on a smartphone, illustrating its various control options and compatibility with different operating systems.

3. Operating Instructions

3.1 Power On/Off

To power on the Lush 3.0, press and hold the power button located on the device until it vibrates briefly. To power off, press and hold the power button again until the device turns off.

3.2 Using the LOVENSE Remote App

The LOVENSE Remote App provides comprehensive control over your Lush 3.0. Key features include:

- **Close-Range Control:** Directly control the device from your smartphone when in close proximity.
- **Long-Distance Control:** Connect with a partner and allow them to control your device from anywhere in the world.
- **Unlimited Patterns:** Explore and create a vast library of vibration patterns.
- **Sync to Music:** Synchronize vibrations with your favorite music for an immersive experience.
- **Sound Activated Vibrations:** The device can respond to ambient sounds or voice.
- **Customizable Vibration Levels:** Program 3 steady levels and up to 10 unique patterns, allowing for a wide range of intensity.



Image: The LOVENSE Lush 3.0 device shown with a smartphone displaying the LOVENSE Remote App, highlighting features like close-range control, long-distance control, unlimited patterns, music sync, and sound-activated vibrations.



Image: The LOVENSE Lush 3.0 device next to a smartphone displaying the app's control interface, demonstrating the ability to adjust vibration patterns.



Image: A user enjoying the LOVENSE Lush 3.0 while listening to music, illustrating the music sync feature of the app.



Image: A visual representation of the long-distance control feature, showing chat bubbles and remote interaction.

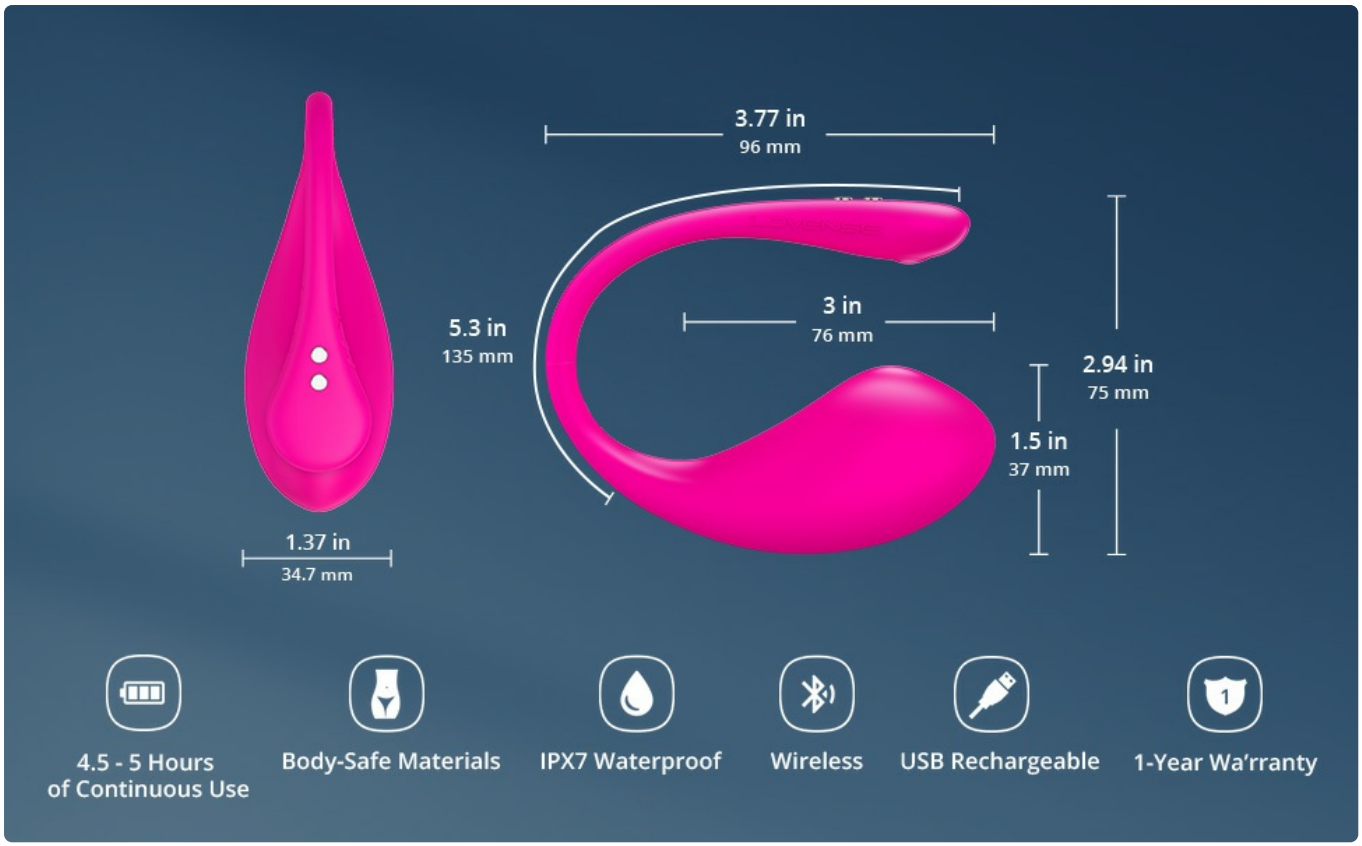


Image: An illustration demonstrating the ability to control the LOVENSE Lush 3.0 from anywhere in the world, with location markers for New York and Berlin.

3.3 Usage Tips

For optimal comfort and experience, ensure the device is properly positioned. The fixed tail design helps the toy stay in place and provides more intense vibrations. Experiment with different positions and app settings to find what works best for you.

▶ **Watch video online**

LOVENSE Lush Mini G-Spot Vibrator for Women

Video: This video demonstrates the remote control capabilities of the LOVENSE app, which are applicable to the Lush 3.0. It shows how a partner can control the device from a distance, enhancing shared experiences.

4. Maintenance

4.1 Cleaning

The LOVENSE Lush 3.0 is IPX7 waterproof, making it easy to clean. After each use, wash the device with warm water and a mild soap or a specialized toy cleaner. Rinse thoroughly and allow it to air dry completely before storing.

4.2 Storage

Store your Lush 3.0 in a clean, dry place, away from direct sunlight and extreme temperatures. Use the provided storage pouch to protect it from dust and damage.

5. Troubleshooting

- **Device not turning on/charging:** Ensure the magnetic charging cable is securely connected and the power source is active. If the device still doesn't charge, try a different USB port or charger. If issues persist, contact support.
- **App connection issues:** Make sure Bluetooth is enabled on your smartphone and the Lush 3.0 is powered on and within range. Close and reopen the app, or restart your phone. If using a Windows PC, ensure the LOVENSE USB Bluetooth Adapter is correctly installed.
- **Weak or inconsistent vibrations:** Ensure the device is fully charged. If the issue persists, check the app settings to confirm the vibration intensity is set to your desired level.
- **Discomfort during use:** Ensure adequate lubrication is used. The design is intended to be wearable; if discomfort occurs, adjust the positioning. If persistent discomfort or pain is experienced, discontinue use.

6. Specifications

Feature	Detail
Brand	LOVENSE
Model	Lush 3.0
Color	Pink
Material	Silicone
Water Resistance Level	IPX7 Waterproof
Connectivity	Bluetooth (Wireless)
Charging	USB Rechargeable (Magnetic)
Battery Life	4.5 - 5 Hours of Continuous Use
Dimensions (Approx.)	Length: 5.3 in (135 mm), Max Width: 3.77 in (96 mm), Internal Length: 3 in (76 mm), Max Height: 1.5 in (37 mm), Tail Width: 1.37 in (34.7 mm)
Package Dimensions	6.34 x 5 x 1.93 inches; 7.05 ounces
First Available Date	May 19, 2023

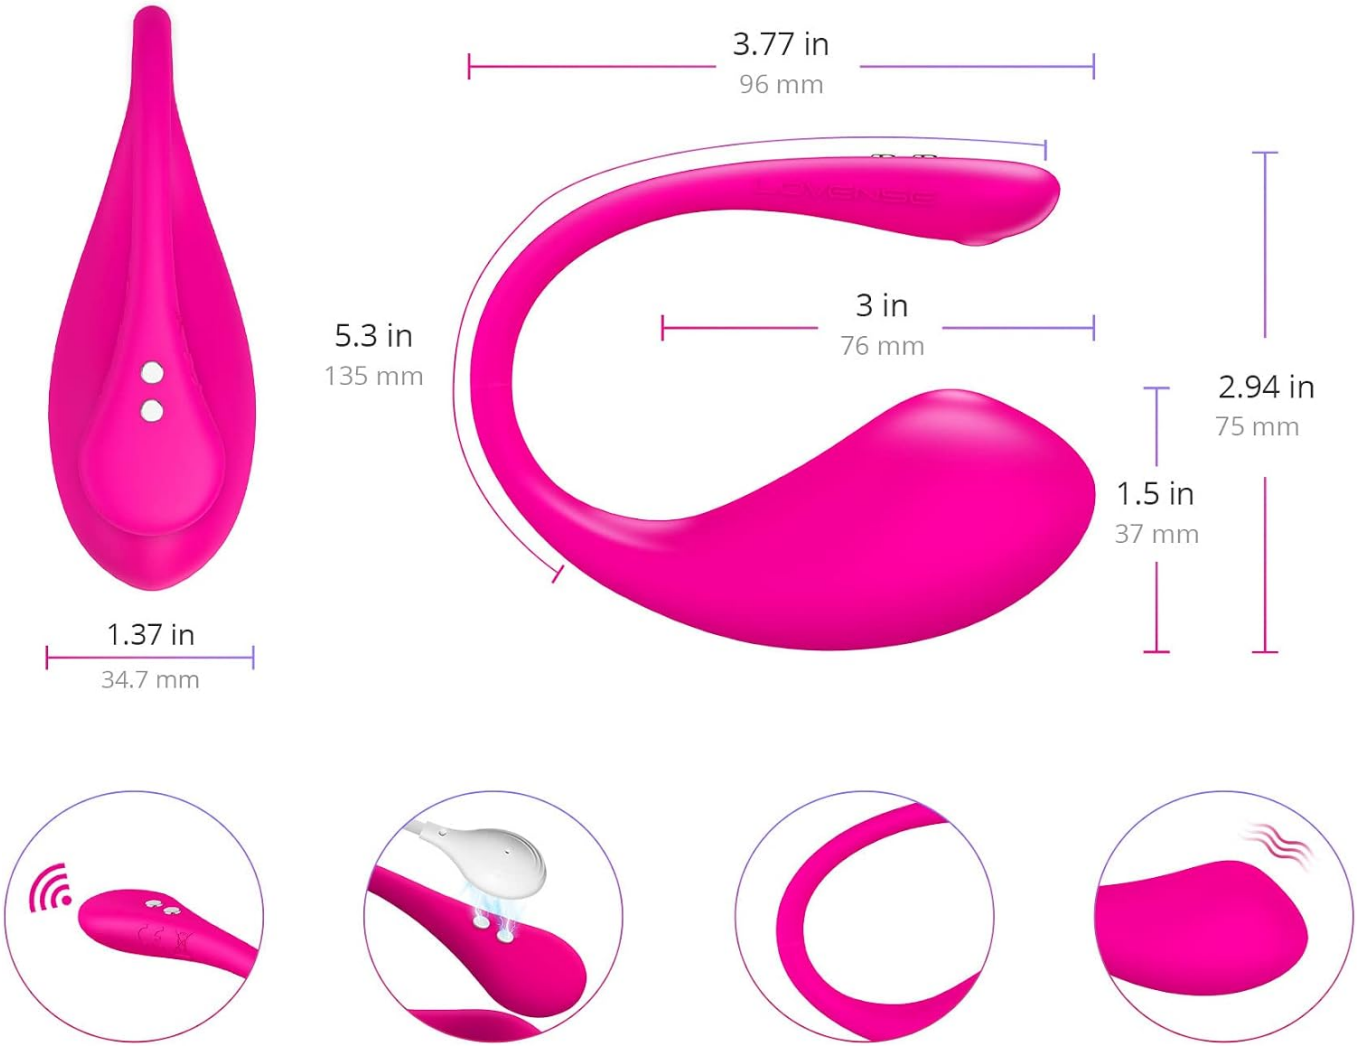


Image: Detailed dimensions of the LOVENSE Lush 3.0, including length, width, and height measurements in both inches and millimeters.

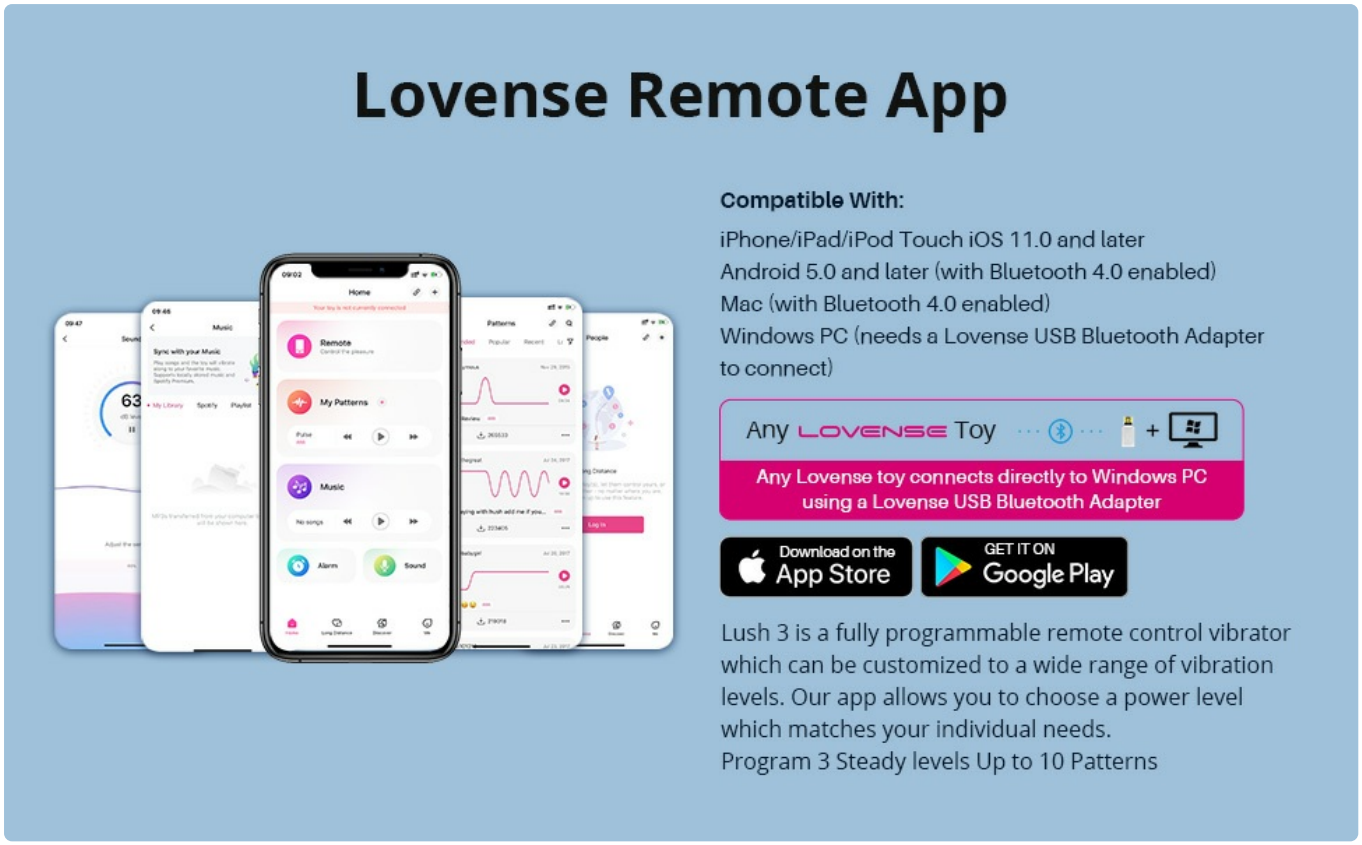


Image: Icons representing key features of the LOVENSE Lush 3.0: battery life, body-safe materials, IPX7 waterproof rating, wireless connectivity, USB rechargeable, and 1-year warranty.

7. Warranty

The LOVENSE Lush 3.0 comes with a 1-Year Warranty. Please retain your proof of purchase for warranty claims.

8. Support

For any questions, concerns, or assistance with your LOVENSE Lush 3.0, please contact the LOVENSE Official Store directly. Our support team aims to assist you within 24 hours.

Visit the official LOVENSE store for more information and support:**LOVENSE Official Store**

Important Information

Legal Disclaimer:

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2024 LOVENSE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my LOVENSE Lush 3.0 not charging even though the red light appears briefly for one second?

Based on the LOVENSE Lush 3.0 troubleshooting guide, if your device is not charging despite the magnetic cable being attached, please try the following steps: Check the Magnetic Connection: Ensure the magnetic charging cable...

Read full answer

Open the live page

https://manuals.plus/asin/B0BGGJ6HH3

More documents and user manuals: **https://manuals.plus/**