W-KING X10

W-KING X10 Portable Bluetooth Speaker User Manual

Model: X10

Introduction

Thank you for purchasing the W-KING X10 Portable Bluetooth Speaker. This manual provides detailed instructions on how to set up, operate, and maintain your speaker. Please read this manual carefully before use and retain it for future reference.

Important Safety Instructions

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Do not immerse the speaker directly in water, despite its IPX6 waterproof rating. It is designed to withstand splashes and rain.
- Keep the speaker away from heat sources, sharp objects, and corrosive materials.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Contact qualified service personnel.
- Use only the specified charging voltage and current.
- Keep out of reach of children.

Package Contents

Please check the package for the following items:

- W-KING X10 Portable Bluetooth Speaker
- Adjustable tear-resistant shoulder strap

- USB-C Charging Cable (*Charger not included*)
- User Manual

Product Overview

Familiarize yourself with the components and controls of your W-KING X10 speaker.



Image: Front view of the W-KING X10 speaker, showcasing its rugged design and water-resistant features.

Speaker Components

- **Main Speaker Unit:** Houses the drivers and electronics.
- **Triple Passive Radiators:** Located on the sides for enhanced bass output.
- **Control Panel:** Buttons for power, volume, playback, and mode selection.
- **Input/Output Ports:** USB-C charging, USB-A power bank output, AUX-in, TF card slot.
- **Shoulder Strap Mounts:** Attachment points for the included strap.



Image: Diagram showing the internal structure of the W-KING X10 speaker, highlighting the 3.7-inch subwoofers, 1.2-inch neodymium tweeters, and triple passive radiators for premium extra bass.

Control Panel Functions

- **Power Button:** Press and hold to power on/off.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Up (+):** Press to increase volume.
- **Volume Down (-):** Press to decrease volume.
- **Previous Track:** Press to go to the previous track.
- **Next Track:** Press to go to the next track.
- **Mode Button (M):** Press to switch between Bluetooth, TF Card, and AUX modes.
- **EQ Button:** Press to switch between Indoor and Outdoor EQ modes.
- **TWS Button:** Press to initiate True Wireless Stereo pairing.

Setup

1. Charging the Speaker

1. Locate the USB-C charging port on the speaker (usually under a protective flap).
2. Connect the provided USB-C cable to the speaker's charging port.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (5V/2A recommended, not included).
4. The LED indicator will show charging status. A full charge provides up to 42 hours of playtime (at low volume).

2. Attaching the Shoulder Strap

1. Locate the two strap attachment points on the speaker.
2. Attach the clips of the adjustable shoulder strap to these points.
3. Adjust the strap length for comfortable carrying.



Image: A person carrying the W-KING X10 speaker using the detachable shoulder strap, demonstrating its portability for outdoor activities.

Operating Instructions

Power On/Off

- **Power On:** Press and hold the Power button for approximately 2-3 seconds until you hear an audible prompt and the LED indicator lights up.
- **Power Off:** Press and hold the Power button for approximately 2-3 seconds until you hear an audible prompt and the LED indicator turns off.

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the 'M' (Mode) button to switch to Bluetooth mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "W-KING X10" from the list of devices.
4. Once paired, you will hear a confirmation sound, and the blue LED will remain solid.

True Wireless Stereo (TWS) Pairing

To achieve 140W powerful stereo sound, you can pair two W-KING X10 speakers together. *Note: W-KING X10 and W-KING X10-1 cannot be paired together.*

1. Ensure both W-KING X10 speakers are powered on and in Bluetooth pairing mode (flashing blue LED).
2. On one of the speakers, press the TWS button. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound, and the LED on one speaker will remain solid (master), while the other will flash (slave).
4. Now, connect your device to the master speaker via Bluetooth as described in the "Bluetooth Pairing" section.



Image: Two W-KING X10 speakers positioned on a beach, demonstrating True Wireless Stereo pairing for an enhanced audio experience.

EQ Modes

The W-KING X10 features two EQ modes for optimized sound in different environments:

- **Indoor Mode:** Delivers boosted bass for a richer sound experience.
- **Outdoor Mode:** Enables crisp sound, suitable for open environments.

Press the EQ button to switch between these modes.

Using as a Power Bank

The built-in 15600mAh battery can also serve as an emergency power supply for your devices.

1. Open the protective flap covering the ports.
2. Connect your smartphone or tablet to the USB-A output port on the speaker using your device's charging cable.
3. The speaker will begin charging your device.

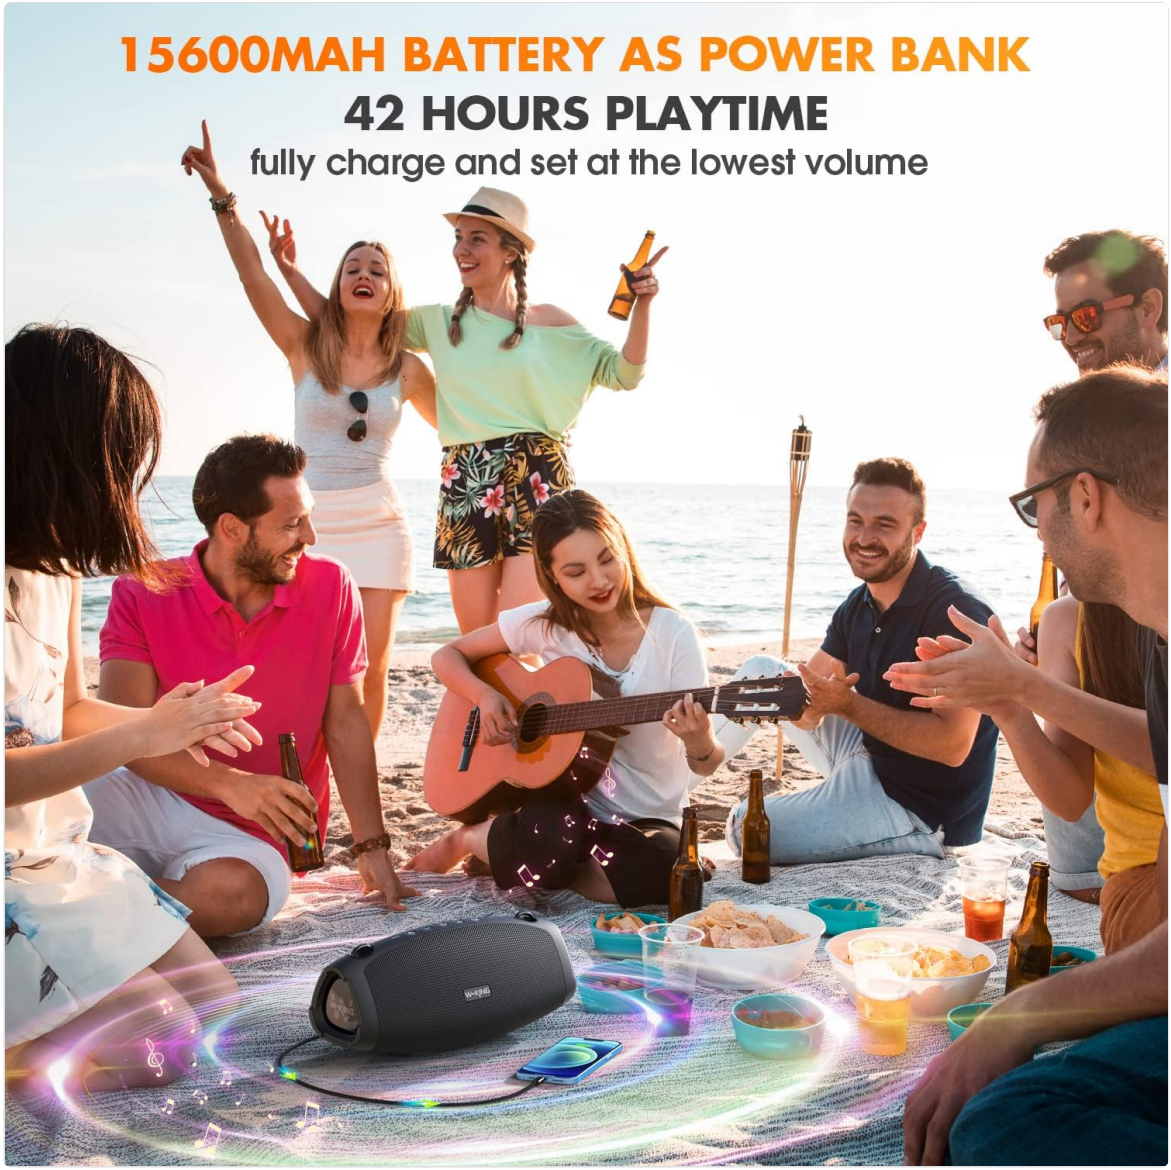

Image: The W-KING X10 speaker on a picnic blanket, connected via USB to charge a smartphone, illustrating its power bank functionality.

TF Card and AUX Input

- **TF Card:** Insert a TF (microSD) card with audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback.
- **AUX Input:** Connect an audio device (e.g., MP3 player, laptop) to the 3.5mm AUX port using an AUX cable (not included). Press the 'M' (Mode) button to switch to AUX mode.

Hands-free Calls

When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls.

- **Answer/End Call:** Press the Play/Pause button.
- **Reject Call:** Press and hold the Play/Pause button.

Maintenance

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures

when not in use for extended periods.

- **Battery Care:** To prolong battery life, fully charge the speaker at least once every three months if not used regularly.

Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect it to a power source and try again.
Cannot pair via Bluetooth.	◦ Ensure the speaker is in Bluetooth pairing mode (flashing blue LED). ◦ Make sure Bluetooth is enabled on your device. ◦ Move the speaker closer to your device (within 10 meters/33 feet). ◦ Forget "W-KING X10" from your device's Bluetooth list and try pairing again. ◦ Restart both the speaker and your device.
No sound or low volume.	◦ Increase the volume on both the speaker and your connected device. ◦ Ensure the speaker is correctly paired or connected via AUX/TF card. ◦ Check if the audio source is playing.
TWS pairing fails.	◦ Ensure both speakers are W-KING X10 models (X10 and X10-1 are not compatible for TWS). ◦ Make sure both speakers are in Bluetooth pairing mode before initiating TWS. ◦ Try resetting both speakers and attempting TWS pairing again.
Power bank function not working.	◦ Ensure the speaker has sufficient battery charge. ◦ Check the USB cable and connection to your device.

Specifications

Feature	Detail
Model Name	W-KING X10

Feature	Detail
Speaker Output Power	70W (140W with TWS)
Connectivity Technology	Bluetooth 5.0, AUX, TF Card, NFC
Bluetooth Range	Up to 100 feet (30 meters)
Water Resistance	IPX6 Waterproof
Battery Capacity	15600mAh (7.2V 7800mAh)
Playtime	Up to 42 hours (varies with volume/content)
Power Bank Output	USB-A port
Audio Output Mode	Stereo
Special Features	Triple Passive Radiators, DSP Technology, EQ Modes (Indoor/Outdoor), Hands-free Calls, Detachable Shoulder Strap
Material	ABS plastic, soft rubber
Recommended Uses	Outdoor, Camping, Party

Warranty and Support

W-KING products are designed and manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official W-KING website. If you encounter any issues or have questions regarding your W-KING X10 speaker, please contact W-KING customer support for assistance. Contact information can typically be found on the product packaging or the official W-KING website.

Online Support: Visit the W-KING Store on Amazon