Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun 51-M1200S

Braun Series 5 Electric Shaver 51-M1200s User Manual

Model: 51-M1200s

Introduction

This manual provides essential information for the safe and effective use of your Braun Series 5 Electric Shaver, model 51-M1200s. Please read these instructions thoroughly before using the appliance and retain them for future reference.



Image: The Braun Series 5 Electric Shaver (model 51-M1200s) shown with its retail packaging and included precision trimmer attachment.

Setup and Initial Use

Charging the Shaver

1. Ensure the shaver is switched off.

2. Connect the power cord to the shaver and then to an electrical outlet.
3. The LED display will indicate charging status. A full charge provides approximately 50 minutes of shaving time. A 5-minute quick charge is sufficient for one shave.
4. Once fully charged, disconnect the shaver from the power supply.



Image: Close-up view of the shaver's handle, highlighting the Li-Ion Battery and LED Display indicators for charge status.

Attaching/Detaching Accessories

The Braun Series 5 shaver features an EasyClick system for attaching various accessories, such as the precision trimmer.

1. To attach an accessory, ensure the shaver is off. Remove the shaving head by pulling it upwards.
2. Align the desired accessory (e.g., precision trimmer) with the shaver body and press it down until it clicks into place.
3. To remove, pull the accessory upwards firmly.

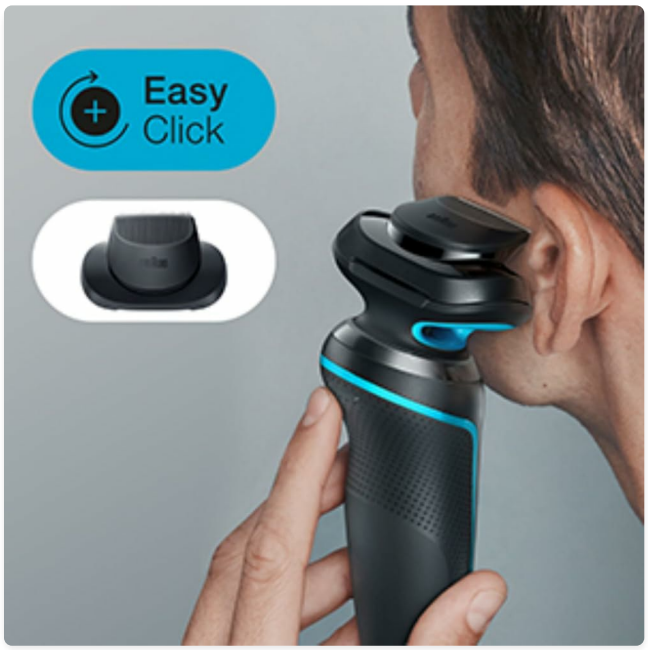


Image: Demonstrating the EasyClick system, where a precision trimmer attachment is being clicked onto the shaver body.

Operating Instructions

Basic Shaving Technique

For optimal results, hold the shaver at a right angle (90°) to your skin and shave against the direction of beard growth. Apply gentle pressure. The SensoFlex technology and Auto Sense Technology adapt to your beard density for a comfortable shave.



Image: A user shaving, with visual cues indicating the shaver's Auto Sense Technology detecting and adapting to beard density.

Wet and Dry Use

This shaver is 100% waterproof and suitable for both wet and dry shaving. You can use it dry, with shaving foam or gel, or even in the shower.

- **Dry Shaving:** For a quick and convenient shave.
- **Wet Shaving:** For an even smoother shave, especially for sensitive skin, use with water, foam, or gel.
- **In the Shower:** The waterproof design allows for safe use in the shower.



Image: The Braun Series 5 shaver submerged in water, illustrating its 100% waterproof capability and suitability for dry, wet (with foam), or shower use.

Using the Precision Trimmer

Attach the precision trimmer accessory as described in the Setup section. Use the trimmer for shaping sideburns, moustaches, or for pre-trimming longer hairs before shaving.

Maintenance and Cleaning

EasyClean System

The shaver features an EasyClean system, allowing for quick and hygienic cleaning without removing the shaving head.

1. Ensure the shaver is switched off.
2. Hold the shaver head under warm running water.
3. Apply a small amount of liquid soap to the shaver head.
4. Switch the shaver on and let it run for a few seconds to rinse out trapped hairs and debris.
5. Rinse thoroughly with clean water until all soap residue is gone.
6. Switch off the shaver and gently tap off excess water. Allow the shaver head to air dry.



Image: The shaver head being cleaned under running water, demonstrating the Easy Clean feature and the flexible blades.

Deep Cleaning

For a more thorough cleaning, you can remove the shaving head and rinse it separately under running water. Ensure all parts are completely dry before reassembling.

Storage

Store the shaver in a dry place, away from direct sunlight and extreme temperatures. Ensure the protective cap is on the shaving head when not in use to prevent damage.

Troubleshooting

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 5 minutes for a quick shave, or fully for 50 minutes runtime.
Poor shaving performance.	Shaver head is dirty or worn.	Clean the shaver head thoroughly. Consider replacing the shaver head if it has been used for an extended period (typically every 18 months).
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are shaving against the grain with gentle pressure. Try wet shaving with foam or gel. Allow skin to adapt to the new shaver.
Shaver makes unusual noise.	Shaver head or internal components may be obstructed or damaged.	Clean the shaver head. If the noise persists, contact customer support.

Specifications

- **Model Name:** Series 5
- **Model Number:** 51-M1200S
- **Power Source:** Battery Powered (Li-Ion)
- **Battery Life:** Up to 50 minutes runtime
- **Quick Charge:** 5 minutes for one shave
- **Special Features:** Cordless, Rechargeable, SensoFlex Technology, Auto Sense Technology, 100% Waterproof, EasyClean System, LED Display
- **Blade Material:** Stainless Steel
- **Item Weight:** 360 g (0.36 Kilograms)
- **Product Dimensions (LxWxH):** 12 x 10 x 15.4 cm
- **Country of Origin:** USA
- **Manufacturer:** Procter & Gamble

Warranty Information

Your Braun Series 5 Electric Shaver comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Extended warranty options may also be available for purchase.

Customer Support

For any questions, assistance, or service requests regarding your Braun Series 5 Electric Shaver, please contact Braun Customer Care:

- **Phone:** 1800 – 202 – 1364
- **Email:** intouch.im@pg.com

When contacting support, please have your product model number (51-M1200S) and purchase details available.

© 2025 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BKRC91XH

More documents and user manuals: **https://manuals.plus/**