Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JVC LT-32MAW205

JVC LT-32MAW205 32-inch Class Select Series 720p HD Roku Smart DLED TV User Manual

Introduction

This manual provides essential instructions for setting up, operating, and maintaining your JVC LT-32MAW205 32-inch Class Select Series 720p HD Roku Smart DLED TV. Please read this manual thoroughly before using your television to ensure proper function and safety.

Important Safety Information

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury. Keep this manual for future reference.

- Do not block ventilation openings.
- Do not install near any heat sources.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

What's in the Box

Carefully unpack the box and ensure all items are present:

- JVC LT-32MAW205 32-inch Class Roku Smart DLED TV
- Remote Control
- TV Stand (2 pieces)
- Screws for TV Stand
- Power Cord
- Quick Start Guide (this manual)
- Batteries for Remote Control

Setup

1. Attaching the TV Stand

If you are not wall-mounting your TV, you will need to attach the included stand. Place the TV face down on a soft, clean surface to prevent scratches.

1. Align the stand legs with the screw holes on the bottom of the TV.
2. Secure each leg with the provided screws.
3. Ensure the stand is firmly attached before placing the TV upright.



Figure 1: JVC LT-32MAW205 TV with dimensions. The stand attaches to the bottom corners of the television.

2. Connecting Devices

Your JVC Roku TV offers various input options for connecting external devices.

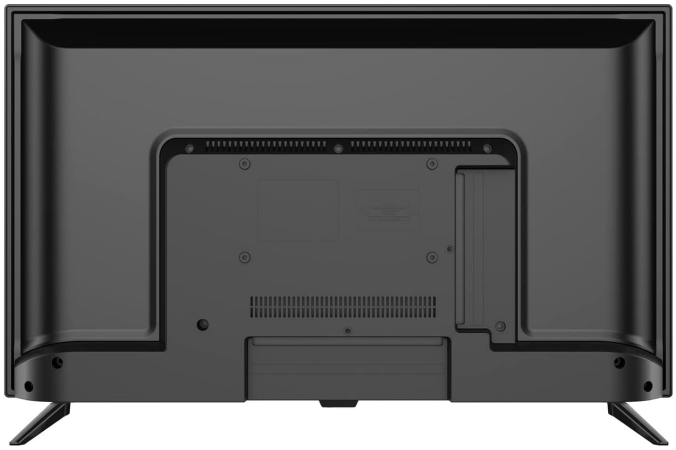

Figure 2: Rear panel of the JVC LT-32MAW205 TV, displaying HDMI, USB, Composite, and other input/output ports.

- **HDMI (x3):** Connect Blu-ray players, game consoles, cable/satellite boxes, or other HD devices.
- **Composite Video Input:** Connect older devices like VCRs or DVD players using RCA cables (yellow, white, red).
- **USB Input:** For viewing JPEG photos from a USB drive.
- **Headphone Output:** Connect headphones for private listening.
- **Optical Output:** Connect to a soundbar or audio receiver for digital audio.

3. Power Connection

Connect the power cord to the TV's power input and then plug it into a wall outlet.

4. Initial Setup (Roku TV Guided Setup)

Upon first power-on, your TV will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.

2. **Network Connection:** Connect your TV to your home Wi-Fi network.
3. **Roku Account:** Create a new Roku account or sign in to an existing one. This is required to access streaming channels.
4. **Channel Scan:** If using an antenna, the TV will scan for available over-the-air channels.
5. **Activation:** Follow on-screen instructions to activate your Roku TV.

Operating Your JVC Roku TV

1. Remote Control Overview

The included remote control allows you to navigate the Roku TV interface and control basic TV functions.

Key buttons typically include:

- **Power:** Turns the TV on or off.
- **Home:** Returns to the Roku Home screen.
- **Directional Pad (Up/Down/Left/Right):** Navigates menus and selects items.
- **OK/Select:** Confirms selections.
- **Back:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts the TV volume.
- **Mute:** Mutes or unmutes the sound.
- **Input:** Selects the input source (HDMI, Composite, etc.).
- **Streaming Channel Shortcut Buttons:** Direct access to popular streaming services.

2. Roku TV Interface Navigation

The Roku Home screen provides access to all your streaming channels, input sources, and settings.



Figure 3: The Roku TV home screen, showing options like Home, Featured Free, My Feed, Search, Streaming Channels, and Settings, alongside icons for Netflix, Disney+, Apple TV, Peacock, Roku Channel, and Prime Video.

Use the directional pad on your remote to move between options and press **OK** to select.

3. Streaming Channels

Access a wide variety of streaming content through the Roku Channel Store. You can add new channels, remove existing ones, and organize them on your Home screen.

- To add channels: Navigate to "Streaming Channels" on the Home screen and browse the Channel Store.
- Supported services include Netflix, Disney+, Pandora, and many more.

4. Input Selection

To switch between connected devices (e.g., a game console on HDMI 1, a cable box on HDMI 2), press the **Input**

button on your remote and select the desired source from the on-screen menu.

5. Media Playback via USB

Insert a USB drive containing JPEG photos into the USB port on your TV. The Roku TV interface will prompt you to open the Media Player channel to view your photos.

Maintenance

1. Cleaning Your TV

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of water or a screen cleaner specifically designed for TVs. Do not use harsh chemicals or abrasive materials.

To clean the TV cabinet, use a soft, dry cloth. Avoid spraying liquids directly onto the TV.

2. Software Updates

Your JVC Roku TV automatically checks for and installs software updates when connected to the internet. Ensure your TV remains connected to the internet for optimal performance and access to the latest features.

- To manually check for updates: Go to **Settings > System > Software update**.

Troubleshooting

If you encounter issues with your JVC Roku TV, refer to the following common solutions:

- **No Power:** Ensure the power cord is securely plugged into both the TV and a working wall outlet. Try a different outlet.
- **No Picture/Sound:**
  - Verify the correct input source is selected.
  - Check all cable connections (HDMI, Composite) are secure.
  - Ensure the TV is not muted and volume is turned up.
- **Remote Control Not Working:**
  - Replace the batteries in the remote control.
  - Ensure there are no obstructions between the remote and the TV's IR sensor.
- **Wi-Fi Connection Issues:**
  - Restart your Wi-Fi router.
  - Go to **Settings > Network > Set up connection** to re-establish the connection.
  - Ensure the TV is within range of your Wi-Fi router.
- **Picture Quality Issues:**
  - Check the resolution settings of your connected device.
  - Adjust picture settings (brightness, contrast, color) in the TV's menu.

For further assistance, visit the JVC support website or contact customer service.

Specifications

Feature	Detail
Model Number	LT-32MAW205
Screen Size	31.5 inches (32-inch Class)
Display Technology	DLED (Direct LED)
Resolution	720p (1366 x 768)
Aspect Ratio	16:9
Refresh Rate	60 Hz
Smart TV Platform	Roku TV
Supported Internet Services	Netflix, Pandora, Roku TV, and more
HDMI Inputs	3
Composite Video Input	1
USB Input	1 (for JPEG photos)
Headphone Output	1
Optical Audio Output	1
Product Dimensions (W x H x D)	29" x 18.7" x 7.1" (with stand)
Item Weight	11 pounds
Color	Black

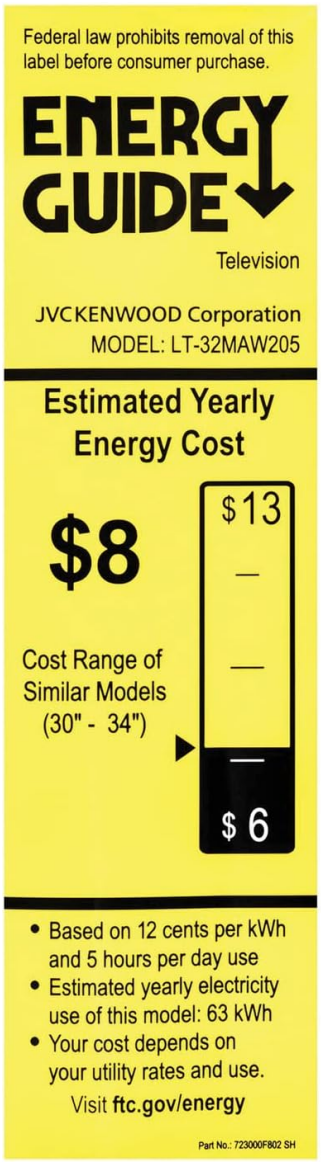

Figure 4: Energy Guide label for the JVC LT-32MAW205, indicating an estimated yearly energy cost of $8.

Warranty and Support

For warranty information, product registration, or technical support, please refer to the warranty card included with your product or visit the official JVC support website. Keep your purchase receipt as proof of purchase.

Online Support: www.jvc.com/usa/support/

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BL8TKQW3

More documents and user manuals: **https://manuals.plus/**