Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PKPOWER XSD-05021109138USD

PKPOWER AC Adapter Instruction Manual

Brand: PKPOWER | **Model:** XSD-05021109138USD

1. Introduction

This manual provides essential instructions for the safe and effective use of your PKPOWER AC Adapter, model XSD-05021109138USD. This adapter is designed to provide power to compatible Crosley CR8805A-WS and CR8805A-TN Turntable models. Please read this manual thoroughly before use and retain it for future reference.

2. Safety Information

WARNING: To reduce the risk of electric shock, fire, or injury, observe the following safety precautions:

- Ensure the adapter's voltage and current ratings match the requirements of your device.
- Do not expose the adapter to rain, moisture, or extreme temperatures.
- Avoid using the adapter if the cord is damaged or frayed.
- Do not disassemble or modify the adapter. Refer all servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

This product is CE / FCC / RoHS certified, indicating compliance with relevant safety and environmental standards.

3. Package Contents

- 1 x PKPOWER AC Adapter (Model: XSD-05021109138USD)



Image 1: The PKPOWER AC Adapter, showing the main body with the US plug and the attached power cord.

4. Specifications

Input Voltage	100-240V AC, 50-60Hz
Output Voltage	Refer to device specifications for required output.
Protection Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Product Dimensions	4 x 2 x 0.5 inches (adapter body)
Item Weight	3 ounces
Color	Black
Connector Type	Auxiliary (DC barrel connector)

Model Number	XSD-05021109138USD

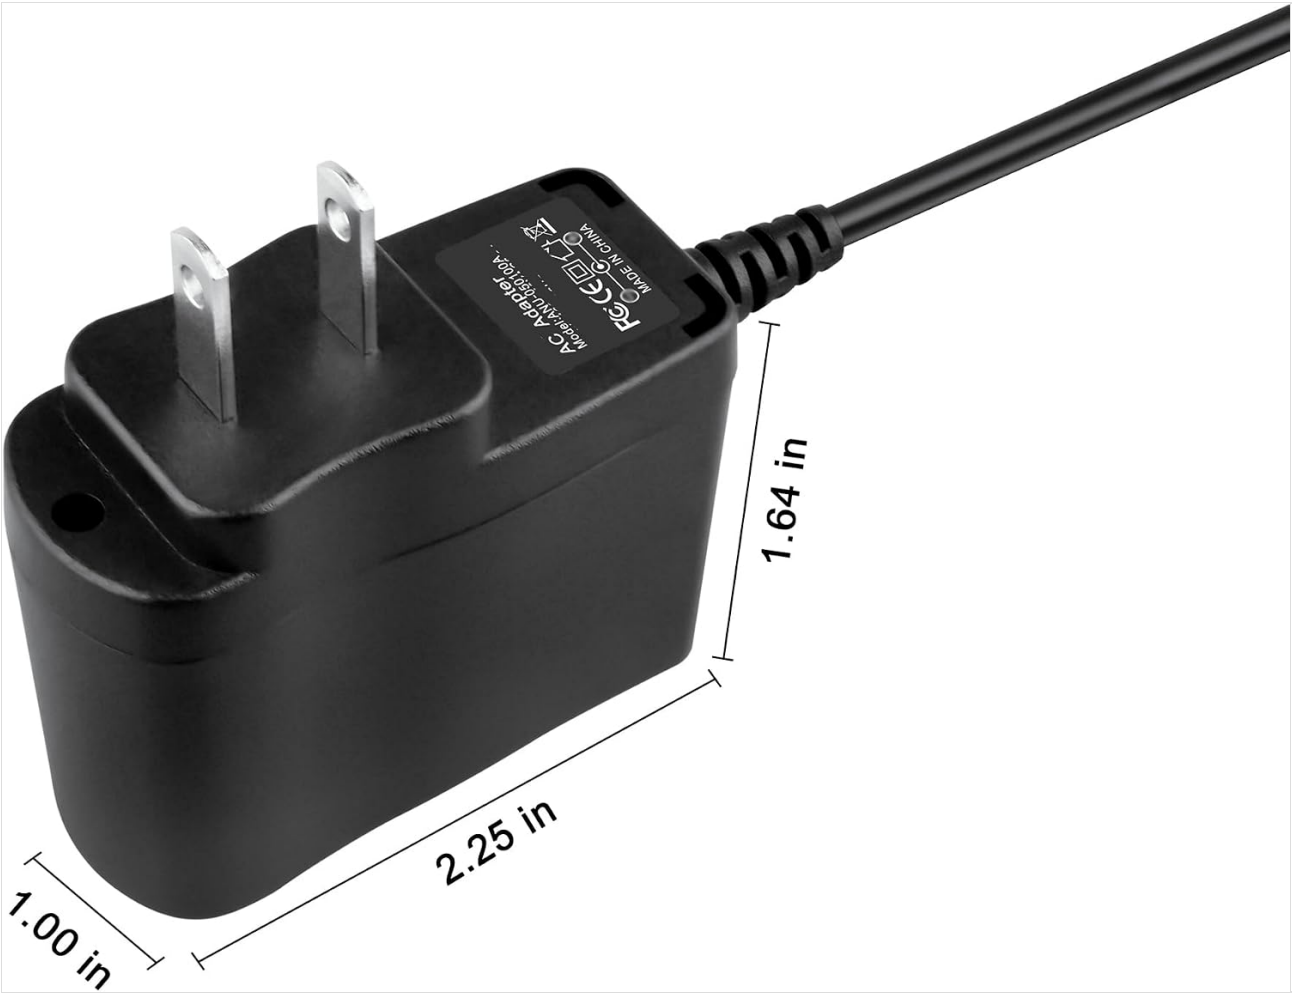

Image 2: The AC adapter shown with approximate dimensions: 1.00 inch width, 2.25 inches length, and 1.64 inches height.

5. Setup

1. **Verify Compatibility:** Ensure your device (e.g., Crosley CR8805A-WS or CR8805A-TN Turntable) requires the specific voltage and connector type provided by this adapter. Refer to your device's original manual for power requirements.
2. **Connect to Device:** Insert the DC barrel connector of the PKPOWER AC Adapter into the power input port of your compatible device. Ensure a secure connection.
3. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard 100-240V wall power outlet.



Image 3: Side view of the PKPOWER AC Adapter, illustrating the compact design and the attached power cord.

6. Operating Instructions

Once the adapter is properly connected to both the device and a power outlet, your device should receive power. Follow your device's specific instructions to power it on and operate it.

- The adapter provides continuous power when plugged in.
- No additional controls are present on the adapter itself.



Image 4: Angled view of the PKPOWER AC Adapter, showing the power prongs and the coiled cord.

7. Maintenance

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a dry, soft cloth to wipe the surface. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the adapter and its cable for any signs of damage, such as cuts, fraying, or bent prongs. If damage is observed, discontinue use immediately.





Image 5: Close-up view of the AC adapter's main body, highlighting the US-style power prongs and the connection point for the output cable.

8. Troubleshooting

Device not powering on:

- Ensure the adapter is securely plugged into both the wall outlet and the device.
- Verify the wall outlet is functional by testing it with another device.

- Confirm the adapter is compatible with your device's power requirements.
- Check the adapter cable for any visible damage. If damaged, discontinue use.

Adapter feels hot:
- It is normal for power adapters to become warm during operation. However, if it is excessively hot to the touch or emitting smoke/smell, unplug it immediately and discontinue use.
- Ensure adequate ventilation around the adapter; do not cover it.

9. Compatibility

This PKPOWER AC Adapter is specifically designed as a power supply replacement for the following Crosley Turntable models:

- Crosley CR8805A-WS
- Crosley CR8805A-TN

Always verify the power requirements of your specific device model before connecting any power adapter.

10. Warranty and Support

PKPOWER products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided with your purchase or visit the official PKPOWER website. Our customer service team aims to respond within 24 hours.
Manufacturer: PKPOWER
ASIN: B0BLV1D28R

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BLV1D28R

More documents and user manuals: **https://manuals.plus/**