Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK ROB16

LEXiBOOK Powerman First ROB16 Interactive Robot Toy User Manual

Model: ROB16 | Brand: LEXiBOOK

1. Introduction

The LEXiBOOK Powerman First is an interactive robot toy designed to engage children through remote control, programming, music, and dance. This manual provides essential information for setting up, operating, and maintaining your robot.

Included in the box:

- 1 Powerman First Robot
- 1 Infrared Remote Control
- 1 User Manual (this document)



Image: The Powerman First robot, its remote control, and product packaging.

2. Safety Information

This product is recommended for ages 3 years and up. Adult supervision is advised during play. Keep small parts away from young children to prevent choking hazards. Do not expose the robot or remote control to water or extreme temperatures.

3. Setup

3.1. Battery Installation

The robot requires 3 AA batteries. The remote control also requires batteries (not specified in product details, typically AA or AAA). Ensure batteries are inserted with correct polarity. Do not mix old and new batteries, or different types of batteries.

3.2. Powering On and Pairing

1. Turn on the remote control using its power switch.
2. Turn on the robot by pressing the power button located on its chest.
3. The robot and remote control should automatically pair. The robot's eyes will light up, indicating it is ready for use.





Image: The Powerman First robot standing next to its remote control.

4. Operating Instructions

4.1. Basic Movement

Use the directional buttons on the infrared remote control to move Powerman First:

- **Forward:** Moves the robot straight ahead.
- **Backward:** Moves the robot straight back.
- **Left:** Turns the robot to the left.
- **Right:** Turns the robot to the right.

4.2. Hand Gesture Control

The robot can also be controlled using hand gestures. Position your hand in front of the robot's sensors to initiate movement or turns. Refer to the remote control for specific hand gesture commands, often indicated by a hand icon.

4.3. Programming Mode

Engage the programming mode to create custom sequences of up to 15 actions. Press the 'Program' button on the remote, input your desired sequence of movements or actions, and then press 'Play' to execute the programmed routine. This feature helps children understand basic programming logic.

4.4. Music and Dance Functions

Press the 'Music' button on the remote control to play various music tracks. The robot will dance along to the music, utilizing its flexing joints and wide movement range. Its eyes will also display amazing sound and light effects.

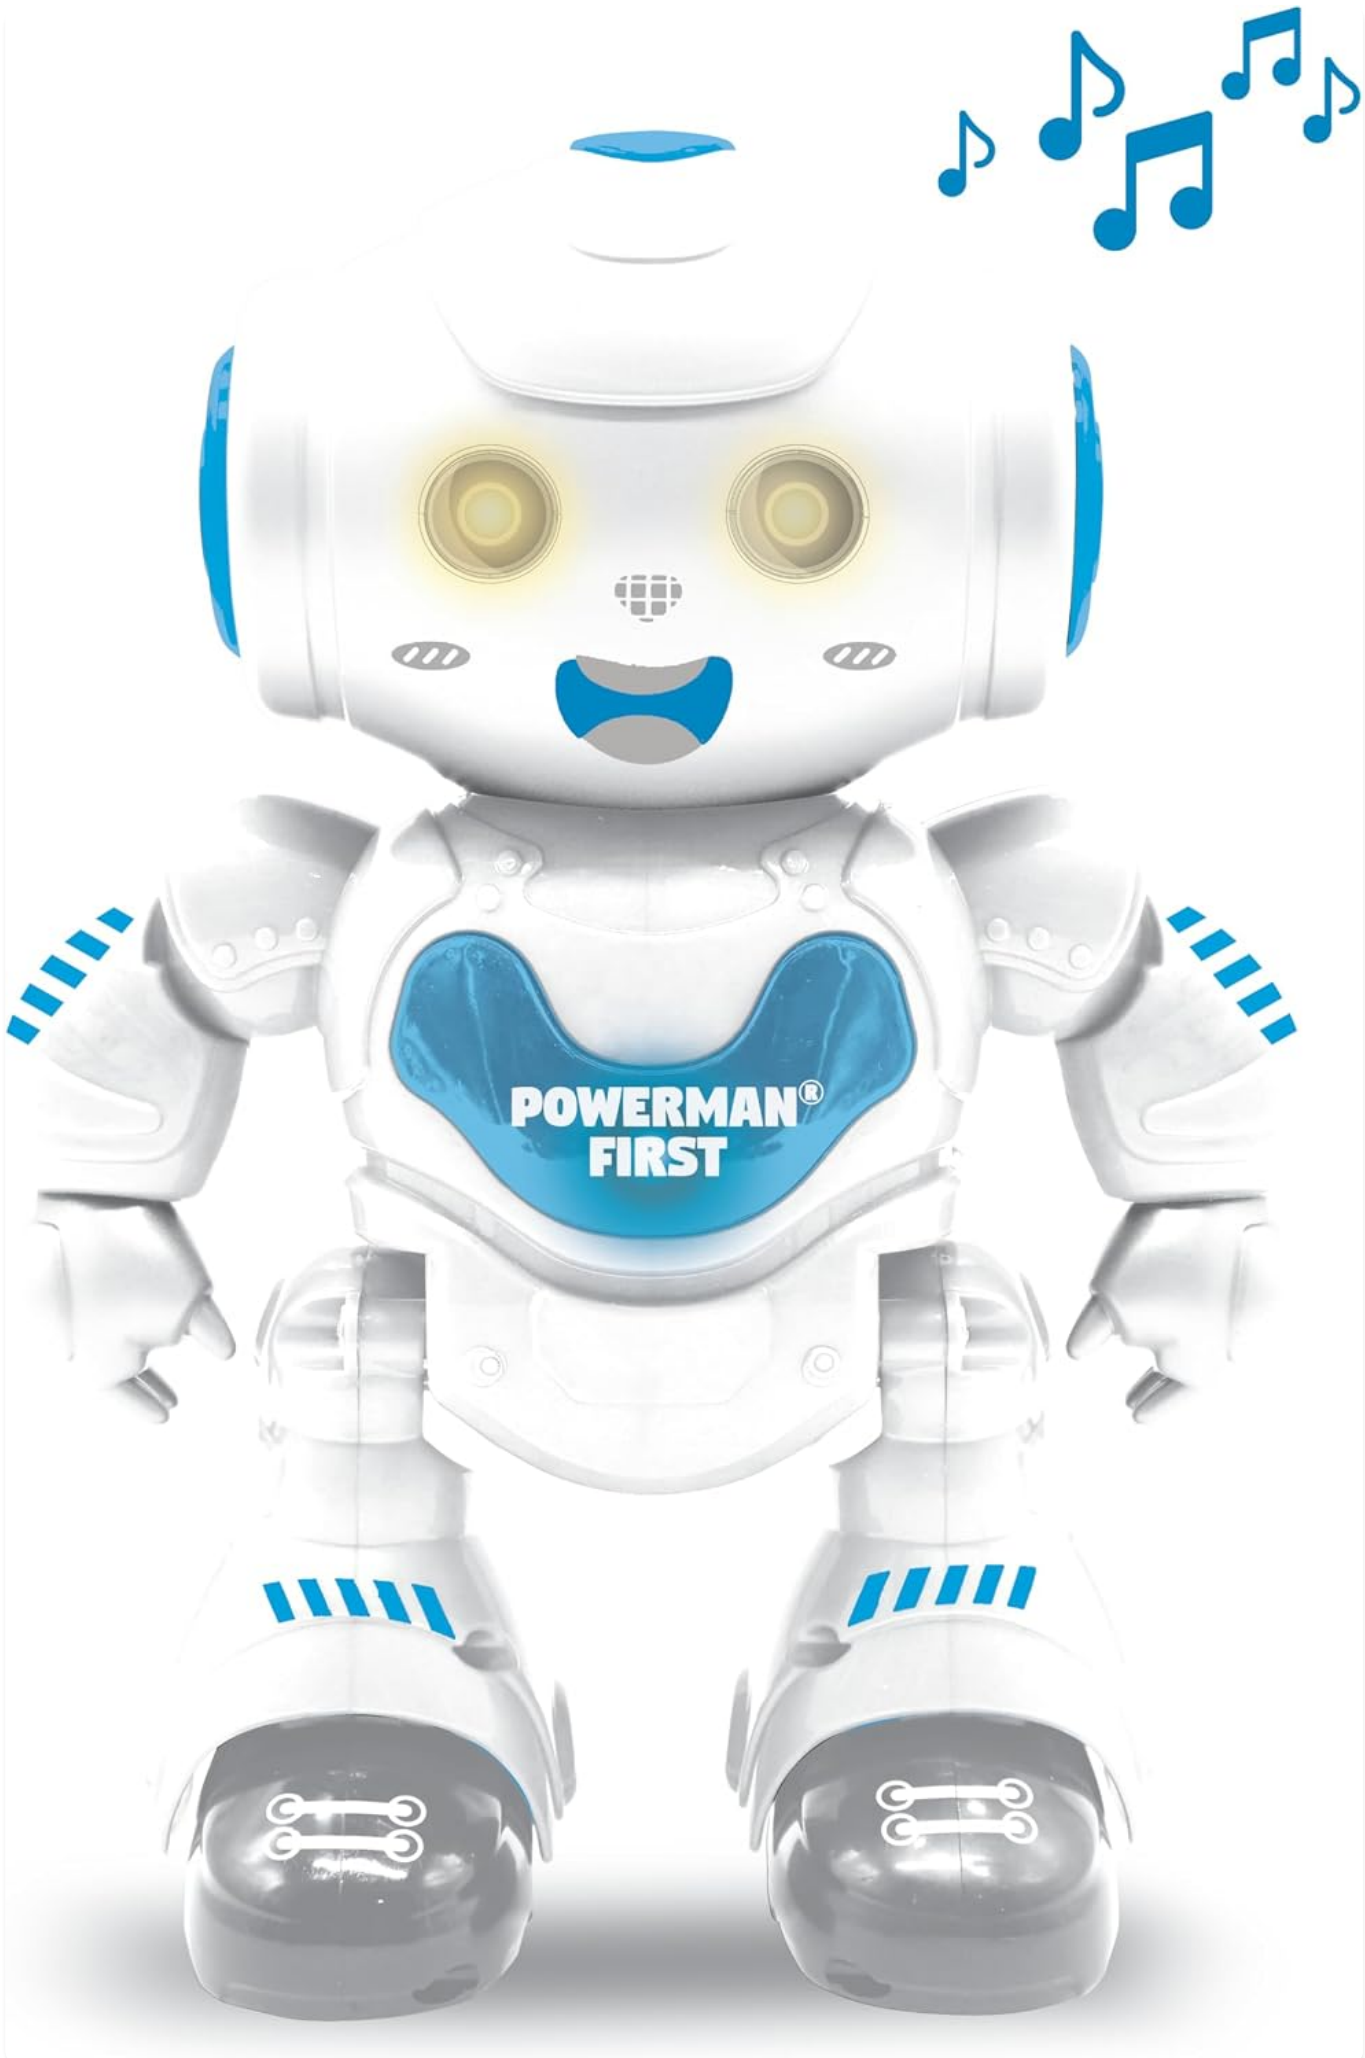

POWERMAN®
FIRST

Image: The Powerman First robot with glowing eyes, moving its arms and legs as if dancing, with music notes floating around it.

4.5. Educational Features

The Powerman First robot offers various educational interactions, including storytelling and quizzes, designed to promote learning and engagement. Explore the remote control buttons for these specific functions.



Image: The Powerman First robot surrounded by icons representing its features: a lightbulb for light effects, a STEM gear for programming, a dancing figure for dance, and an open book for educational content.

4.6. Official Product Video

▶ **Watch video online**

Lexibook Powerman First, My first smart Interactive Robot, ROB16

Video: An official product video from Lexibook Limited showcasing the features and interactions of the Powerman First robot.

5. Maintenance

5.1. Cleaning

Wipe the robot and remote control with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid getting moisture into battery compartments or electronic components.

5.2. Storage

When not in use for extended periods, remove batteries from both the robot and the remote control to prevent leakage. Store the toy in a cool, dry place away from direct sunlight.

6. Troubleshooting

- **Robot not responding:** Ensure both the robot and remote control are powered on and have fresh batteries. Check that they are within operating range.
- **Intermittent function:** Replace batteries in both devices. Ensure no obstructions are blocking the infrared signal between the remote and the robot.
- **Sound issues:** Check battery levels. If sound is still not working, contact customer support.

7. Specifications

Feature	Detail
Product Dimensions	8.27 x 6.3 x 3.35 inches
Item Weight	10.4 ounces
Item Model Number	ROB16
Manufacturer Recommended Age	3 years and up
Batteries	3 AA batteries required (for robot)
Release Date	September 19, 2022
Manufacturer	Lexibook

8. Warranty and Support

For warranty information, technical support, or replacement parts, please refer to the contact details provided on the product packaging or visit the official LEXiBOOK website. Keep your purchase receipt as proof of purchase.

© 2023 LEXiBOOK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BMLGFF46

More documents and user manuals: **https://manuals.plus/**