**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Braun BG5360

# Braun Body Groomer Series 5 5360 User Manual

Model: BG5360

### Introduction

This manual provides comprehensive instructions for the safe and effective use of your Braun Body Groomer Series 5 5360. Please read all instructions carefully before first use and retain this manual for future reference. The Braun Body Groomer 5360 is designed for gentle full-body manscaping, including sensitive areas, offering quick hair removal from chest, armpits, legs, and groin with SkinSecure Technology for comfort.

### Important Safety Information

For safe and proper use of your Braun Body Groomer, please observe the following precautions:

- Keep the device out of reach of infants and children.
- Do not use the device in or near water if it is not explicitly stated as waterproof. This device is 100% waterproof and suitable for shower use and easy cleaning under running water.
- Handle the device with care to prevent injury from the sharp blades. Always ensure attachments are securely fitted before use.
- Only use the charger provided with the device.
- Do not disassemble or attempt to repair the device yourself. Contact authorized service personnel for any repairs.
- Avoid using the device on irritated, sunburned, or broken skin.

### What's Included

Your Braun Body Groomer Series 5 5360 package includes the following components:

- 1x Body groomer device
- 1x Fine pitch groomer head
- 1x Sensitive comb
- 1x Sliding beard comb (3 – 11 mm)

- 1x Fine pitch fix comb (1 mm)
- Charging cable




Image: All components included with the Braun Body Groomer Series 5 5360, showing the main device and its various attachments for different grooming needs.

## Setup

1. **Initial Charge:** Fully charge the device before using it for the first time. Connect the charging cable to the groomer and plug it into a power outlet. The LED charging indicator will show the charging status. A full charge provides approximately 100 minutes of cordless runtime.
2. **Attaching Combs/Heads:** Select the desired comb or head based on your grooming needs.
    - **Fine Pitch Groomer Head:** For general trimming.
    - **Sensitive Comb:** For extra care and protection in sensitive areas.

- **Sliding Beard Comb (3-11 mm):** For adjustable length trimming.
- **Fine Pitch Fix Comb (1 mm):** For a very short, fixed length trim.
- **Clean Shave Head:** For a smooth, close shave.

Align the attachment with the groomer head and press firmly until it clicks into place.

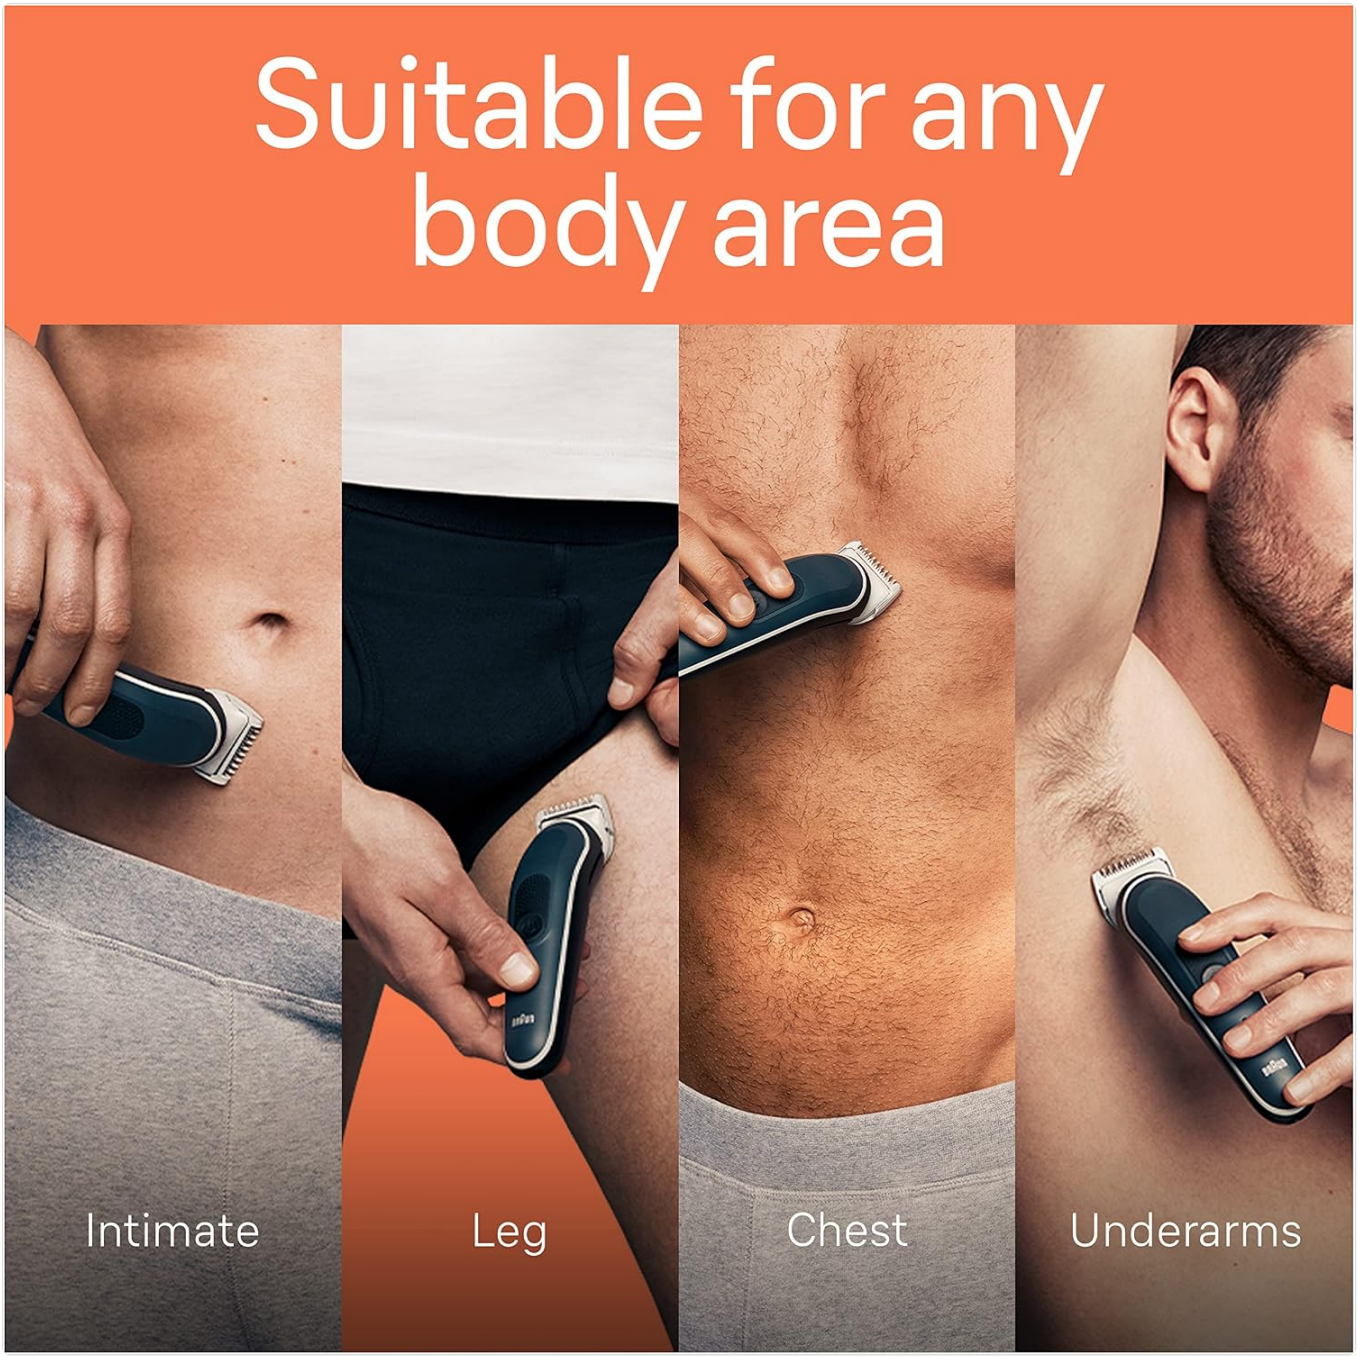


Image: The Braun Body Groomer highlighting its SkinSecure technology and the sensitive comb, designed for gentle use even in sensitive areas.

## Operating Instructions

The Braun Body Groomer Series 5 5360 is designed for versatile full-body grooming. Follow these steps for optimal results:

1. **Power On:** Press the power button to turn on the device.
2. **Grooming Technique:**

- For trimming, hold the groomer flat against the skin and move it slowly against the direction of hair growth.
- For sensitive areas, use the sensitive comb attachment to minimize nicks and cuts.
- For a clean shave, attach the clean shave head and use gentle, even strokes.

3. **Wet or Dry Use:** This body groomer is 100% waterproof, allowing for comfortable use in the shower or for dry grooming. Using it wet can help reduce skin irritation.
4. **Adjusting Lengths:**
   - Use the 1 mm fixed comb for a very short trim.
   - Use the 3-11 mm sliding comb to adjust to your desired hair length.
   - For a full shave, use the clean shave head without any comb.
5. **Power Off:** After use, press the power button again to turn off the device.




Image: Demonstrates the versatility of the Braun Body Groomer, showing its application across different body areas including intimate regions, legs, chest, and underarms.




Image: A visual guide illustrating the different grooming lengths achievable with the Braun Body Groomer, from a full shave using the clean shave head, to a close trim with the sensitive or 1mm fixed comb, and a light trim with the adjustable comb.

## Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your groomer.

1. **After Each Use:**
    - Turn off the device.
    - Remove the attachment head.
    - Rinse the groomer head and attachments under running water to remove hair and debris.
    - Shake off excess water and allow the components to air dry completely before reattaching or storing.
2. **Deep Cleaning:** Periodically, you may use a small brush (not included) to remove stubborn hair from the blades. Ensure the device is off and unplugged before any deep cleaning.

3. **Storage:** Store the device in a dry place when not in use. Ensure it is fully dry before storing.




Image: The Braun Body Groomer being held under running water, illustrating its 100% waterproof design for easy and hygienic cleaning.

## Troubleshooting

If you encounter any issues with your Braun Body Groomer, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Device does not turn on. | Battery is depleted. | Charge the device fully. |

| Problem | Possible Cause | Solution |
|---|---|---|
| Device does not cut hair effectively. | Blades are dull or clogged with hair. | Clean the blades and attachments thoroughly. Consider replacing the groomer head if blades are worn. |
| Skin irritation or nicks occur. | Incorrect technique or sensitive skin. | Ensure you are using the SkinSecure technology and sensitive comb. Use gentle, even strokes. Consider using the groomer on wet skin. |
| Attachments do not stay on. | Attachment not properly secured or damaged. | Ensure the attachment clicks firmly into place. Inspect for damage and replace if necessary. |

If the problem persists after trying these solutions, please contact Braun customer support.

## Specifications

- **Model Name:** Series 5, 5360
- **Item Model Number:** BG5360
- **Power Source:** Battery Powered (Li-Ion battery included)
- **Run Time:** Up to 100 minutes cordless
- **Special Features:** Cordless, 100% Waterproof, SkinSecure Technology
- **Product Dimensions:** 2.44 x 5.43 x 10.28 inches
- **Weight:** 13.4 ounces
- **Manufacturer:** Procter & Gamble
- **First Available:** November 29, 2022




Image: The Braun Body Groomer with text emphasizing its 100-minute cordless runtime, powered by a long-lasting Li-Ion battery, ensuring constant cutting power.

## Warranty and Support

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Braun website. You can also contact Braun customer service for assistance with product registration, troubleshooting, or replacement parts.

**Online Support:** www.braun.com

© 2024 Braun. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0BNLWZZD1**

More documents and user manuals: **https://manuals.plus/**