Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun AIO5470

Braun All-in-One Style Kit Series 5 5470 Instruction Manual

Model: AIO5470

Introduction Safety Information Package Contents Setup Operation Maintenance Charging Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides detailed instructions for the safe and effective use of your Braun All-in-One Style Kit Series 5 5470. This versatile grooming tool is designed for precision trimming of beards, hair, and body, offering a comprehensive solution for personal styling. Please read all instructions carefully before first use and retain this manual for future reference.



Image 1.1: The Braun All-in-One Style Kit Series 5 5470, showcasing the trimmer and its packaging.

2. Safety Information

To reduce the risk of electric shock, injury, or damage, always observe the following safety precautions:

- Keep the trimmer away from water sources when charging or not in use.
- Exercise caution when handling sharp blades.
- Always unplug the trimmer from the power outlet before cleaning.
- Do not use this appliance on infants or children.
- Adhere strictly to the recommended cleaning and maintenance procedures outlined in this manual.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. Package Contents

Your Braun All-in-One Style Kit Series 5 5470 includes the following components:

- Electric Trimmer Unit
- Gillette Fusion5 ProGlide Razor
- Drawstring Pouch
- Ear & Nose Trimmer Head
- Eyebrow Comb
- Detail Comb
- Adjustable Beard Comb (0.5 mm - 10 mm)
- Adjustable Hair Comb (10.5 mm - 20 mm)
- Body Comb
- Mini Foil Shaver
- Travel Pouch
- Charging Cable



Image 3.1: All components included in the Braun All-in-One Style Kit Series 5 5470, laid out for identification.

4. Setup

4.1 Initial Charging

1. Before first use, fully charge the trimmer. Connect the charging cable to the trimmer and plug it into a power outlet.
2. The charging indicator light will illuminate. A full charge typically takes several hours.
3. Once fully charged, the trimmer provides approximately 80 minutes of cordless operation.

4.2 Attaching and Detaching Trimmer Heads/Combs

- To attach a trimmer head or comb, align it with the trimmer body and press firmly until it clicks into place.
- To detach, gently pull the head or comb away from the trimmer body.

5. Operating Instructions

The Braun All-in-One Style Kit Series 5 5470 offers various attachments for different grooming needs.

5.1 Adjusting Length Settings

The Precision Wheel allows for 40 length settings in 0.5 mm steps. Rotate the wheel to select your desired length.

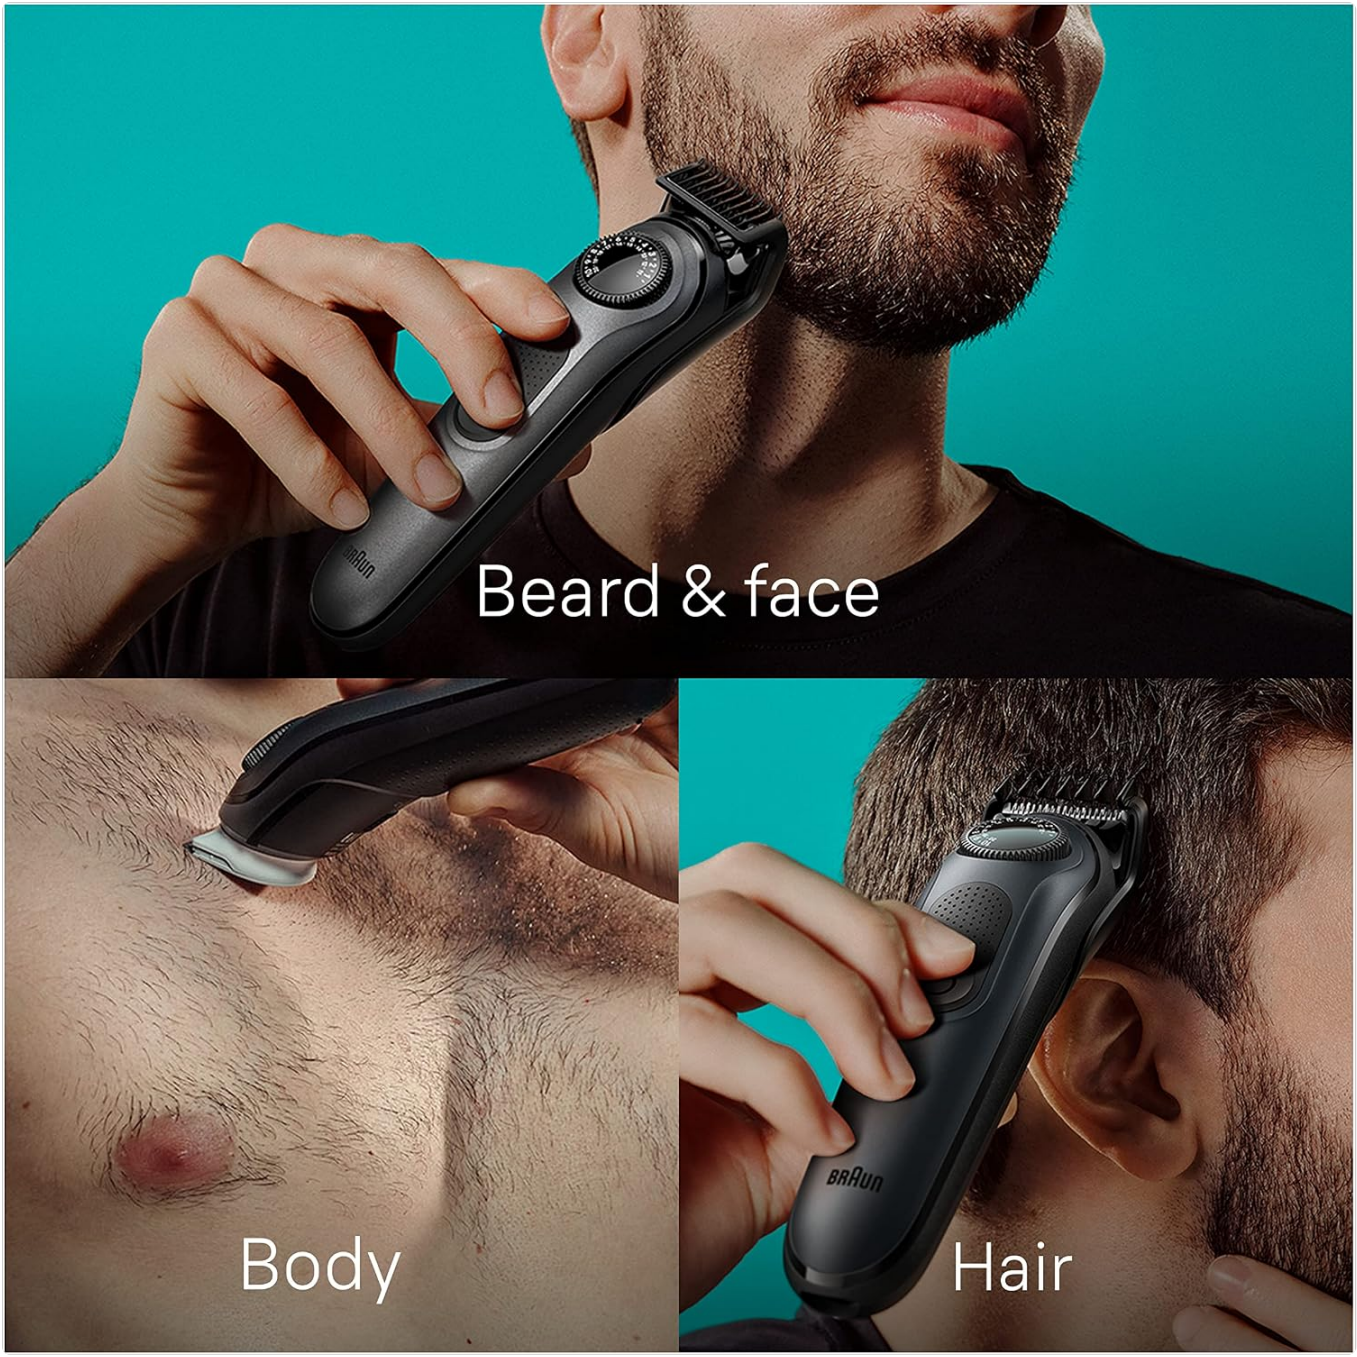

Image 5.1: Close-up of the Precision Wheel, demonstrating the 40 length settings for precise trimming.

5.2 Trimming Beard & Face

- Attach the adjustable beard comb (0.5 mm - 10 mm).
- Select the desired length using the Precision Wheel.
- Trim against the direction of hair growth for an even cut.

5.3 Trimming Hair

- Attach the adjustable hair comb (10.5 mm - 20 mm).
- Select the desired length using the Precision Wheel.
- Move the trimmer slowly against the direction of hair growth.

5.4 Body Grooming

- Attach the body comb or the body groomer head.
- Use gentle, even strokes to trim body hair.

5.5 Ear & Nose Trimming

- Attach the ear & nose trimmer head.
- Carefully insert the trimmer into the nostril or ear canal and move it gently to remove unwanted hair.



Image 5.2: Demonstrations of the trimmer being used for beard, body, and hair grooming.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your trimmer.

6.1 Cleaning the Trimmer

- Ensure the trimmer is switched off and unplugged from the power source.
- Detach the trimmer head and combs.
- Rinse the trimmer head and combs under running water. The trimmer body is 100% waterproof and can also be rinsed under water.
- Allow all parts to air dry completely before reassembling or storing.
- For thorough cleaning, use the included cleaning brush to remove any trapped hairs from the blades.



Image 6.1: The Braun trimmer being held under running water, demonstrating its 100% waterproof design for easy cleaning.

7. Charging and Battery

The trimmer is equipped with a powerful Li-Ion battery, providing up to 80 minutes of cordless runtime on a full charge.

- A green indicator light signifies sufficient charge.
- When the battery is low, the indicator light may change color or flash.
- To charge, connect the trimmer to the charging cable and a power outlet.
- Avoid overcharging by disconnecting the charger once the battery is full, though the charger is designed to prevent overcharge.



Image 7.1: The Braun trimmer on its charging stand, highlighting the battery indicator and 80 minutes of cordless power.

8. Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer fully.
Trimmer pulls hair or cuts unevenly.	Blades are dull or clogged with hair.	Clean the blades thoroughly. Consider replacing the blade head if dullness persists.
Trimmer makes unusual noise.	Foreign object in the blade area or internal issue.	Clean the blade area. If noise persists, contact customer support.
Charging indicator not working.	Faulty cable or power outlet.	Check the power outlet and charging cable. Try a different outlet or cable if available.

9. Specifications

- **Model Number:** AIO5470
- **Power Source:** Battery Powered (1 9V battery included)
- **Battery Type:** Li-Ion
- **Cordless Runtime:** Approximately 80 minutes
- **Length Settings:** 40 (in 0.5 mm steps)
- **Waterproof:** Yes, 100% waterproof
- **Material:** Plastic
- **Manufacturer:** Procter & Gamble
- **Package Dimensions:** 10.43 x 10.16 x 2.2 inches
- **Item Weight:** 1.34 Pounds

10. Warranty and Support

Braun products are manufactured to meet high quality standards. This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.
For further assistance, product registration, or to inquire about replacement parts, please visit the official Braun website or contact their customer support.
Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a personal grooming appliance.

© 2023 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BNM1CJGZ

More documents and user manuals: **https://manuals.plus/**