Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sejoy 6970392212142

Sejoy Body Hair Trimmer Clipper for Men

Instruction Manual

Model: 6970392212142

1. Product Overview

The Sejoy Body Hair Trimmer Clipper is a versatile grooming tool designed for men, offering precise and comfortable trimming for various body areas including beard, head, body, and face. Its advanced features ensure an effective and safe grooming experience, whether at home or while traveling.

2. What's in the Box

Upon opening the package, please verify that all the following components are included:

- Sejoy Smart Trimmer Unit
- T-shaped Tool Head
- Lubricant Oil
- Hair Brush
- Type-C Charging Cable
- Four T-type Limit Combs (3mm, 6mm, 9mm, 12mm)
- User Manual (this document)



Image: All components included in the Sejoy Body Hair Trimmer package.

3. Key Features

- **Multifunctional Usage:** Equipped with a self-sharpening T-blade and a high-power motor, this trimmer is suitable for beard, head, body, face, groin, and other hair styling needs.
- **Anti-Cut Blades:** Advanced blade technology is designed to provide a close shave and detailed finish, minimizing pulling or cutting, especially in sensitive areas like the groin and armpit.
- **Durable Motor:** Features a full metal motor reinforced with tempered steel, ensuring maximum power delivery and consistent performance when paired with stainless steel blades.
- **Type-C Rechargeable:** The built-in powerful Lithium-ion battery provides up to 90 minutes of running time after a 1.5-hour full charge via a convenient Type-C port.
- **Travel Lock:** A safety feature that prevents accidental activation of the trimmer during transport. Long press the

switch button for 4 seconds to activate or deactivate the lock.



Image: Key features of the Sejoy trimmer, including blade type, charging, and travel lock.



Image: Detail of the self-sharpening steel T-blade, designed for sharpness and durability.



Image: Illustration of the trimmer's powerful motor, reinforced with tempered steel for high performance.

4. Safety Information

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Always unplug this appliance from electrical outlet immediately after using.
- Unplug this appliance before cleaning.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken comb, as facial injury may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to “OFF” then remove plug from outlet.

5. Setup

5.1 Charging the Trimmer

1. Ensure the trimmer is turned off.
2. Insert the Type-C charging cable into the charging port at the bottom of the trimmer.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, wall adapter).
4. The LED indicator light will illuminate to show charging status. A full charge takes approximately 1.5 hours and provides up to 90 minutes of cordless use.



Image: The trimmer being charged via its USB-C port, indicating 90 minutes of use per charge and 1.5 hours for charging.

5.2 Attaching Limit Combs

1. Select the desired limit comb (3mm, 6mm, 9mm, or 12mm) based on your preferred hair length.
2. Align the comb with the trimmer blade and push it firmly until it clicks into place.

3. To remove, gently pull the comb away from the blade.

6. Operating Instructions

6.1 Powering On/Off

- To turn on the trimmer, press the power button once.
- To turn off the trimmer, press the power button once again.

6.2 Using the Travel Lock

- To activate the travel lock (prevent accidental power-on), press and hold the power button for approximately 4 seconds until the indicator light flashes or a specific sound is heard.
- To deactivate the travel lock, press and hold the power button for approximately 4 seconds again.

6.3 Trimming Techniques

- **For Hair Trimming:** Attach the appropriate limit comb. Hold the trimmer with the blade flat against the skin and move it against the direction of hair growth for an even cut.
- **For Beard Trimming:** Use a limit comb for desired length or use the bare blade for precise edging and shaping. Move slowly and steadily.
- **For Body Hair:** The anti-cut blades are designed for sensitive areas. Use without a comb for a close trim, moving gently and carefully.



Image: Demonstrates using the trimmer with various comb lengths for different hair styles.

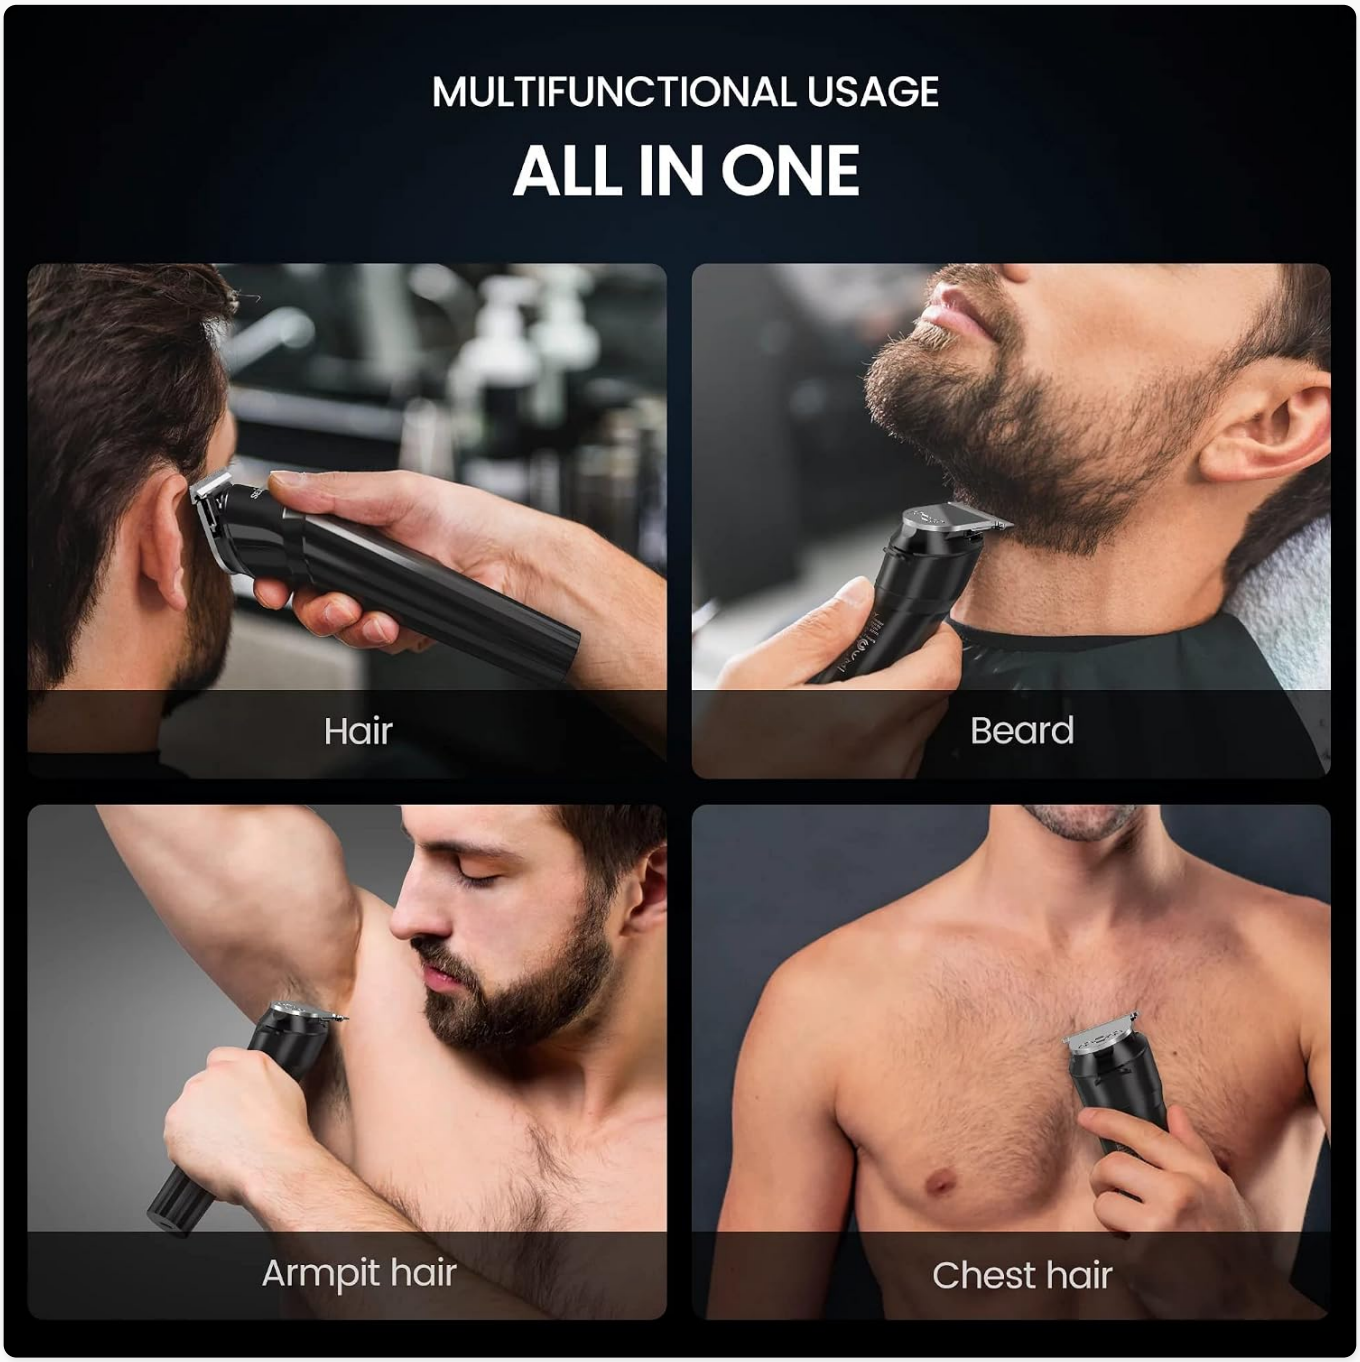

Image: The trimmer's multifunctional capabilities for hair, beard, armpit, and chest hair.

7. Maintenance

7.1 Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the trimmer and detach any comb attachments.
2. Gently remove the T-shaped tool head/blade assembly from the trimmer body.
3. Use the provided hair brush to remove loose hairs from the blade and inside the trimmer head.
4. The blades and combs are washable. Rinse them under running water. Ensure the trimmer body is not submerged unless specified as fully waterproof.
5. Allow all parts to air dry completely before reattaching the blade and storing the trimmer.



Image: Detachable steel blades and combs can be easily rinsed for cleaning.

7.2 Lubrication

Apply a small drop of the included lubricant oil to the blades periodically (e.g., after every few uses or after thorough cleaning) to maintain smooth operation and blade longevity. Turn on the trimmer for a few seconds to distribute the oil.

8. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted. Travel lock is activated.	Charge the trimmer fully. Deactivate travel lock by pressing and holding the power button for 4 seconds.
Trimmer stops during use.	Battery is low. Hair buildup in blades.	Recharge the trimmer. Clean the blades and trimmer head thoroughly.
Blades pull hair or cut poorly.	Blades are dirty or clogged. Blades need lubrication. Trimmer is not fully charged.	Clean the blades and remove any hair buildup. Apply a few drops of lubricant oil to the blades. Ensure the trimmer is fully charged before use.
Power button feels loose or detached.	Manufacturing defect or wear.	If the button has detached, attempt to re-seat it firmly. If the issue persists or affects functionality, contact customer support for assistance.

9. Specifications

Product Dimensions	1.93 x 6.3 x 7.91 inches
Item Weight	9.59 ounces (0.27 Kilograms)
Model Number	6970392212142
Batteries	1 Lithium Ion battery (included)
Battery Life	Up to 90 minutes per charge
Charging Time	Approx. 1.5 hours
Charging Type	USB Type-C
Color	Black
Manufacturer	JOYTECH Healthcare Co.,Ltd
Country of Origin	China

10. Warranty and Support

10.1 Warranty Information

Please refer to the warranty card included with your product for specific warranty terms and conditions. Keep your purchase receipt as proof of purchase for any warranty claims.

10.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Sejoy customer support through the retailer where the product was purchased or visit the official Sejoy website for contact information.

10.3 Legal Disclaimer

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is intended for personal grooming and hygiene purposes only.

© 2024 Sejoy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BNMJJR47

More documents and user manuals: **https://manuals.plus/**