Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun 9477cc

Braun Series 9 Pro 9477cc Electric Razor User Manual

Comprehensive instructions for setup, operation, and maintenance of your Braun Series 9 Pro 9477cc electric foil shaver.

1. Product Overview

The Braun Series 9 Pro 9477cc is an advanced electric foil shaver designed for a close and comfortable shave. It features a flexible ProHead for efficient shaving of 1, 3, or 7-day beards, even in challenging areas. The innovative ProLift trimmer and Sonic Technology work together to capture flat-lying hairs and provide a gentle, fast shave.

This model is 100% waterproof, allowing for versatile wet or dry shaving, including use with foam, gel, or in the shower. It also includes a precision trimmer for detailing sideburns and mustaches, and comes with a Clean & Renew station for optimal hygiene and maintenance.

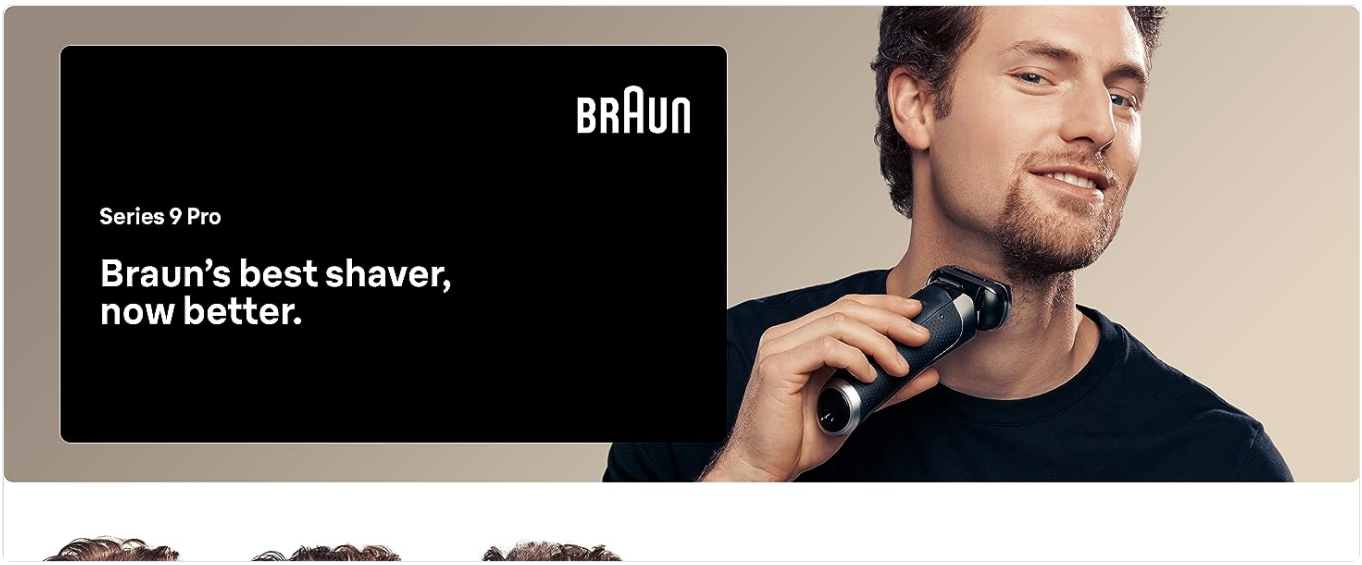

Image 1.1: The Braun Series 9 Pro 9477cc electric razor, its portable charging case, and the Clean & Renew station with a pack of cleaning cartridges.

2. Important Safety Information

Please read all safety instructions before using the appliance. Keep this manual for future reference.

- Always ensure the shaver is unplugged while cleaning.
- Dry the shaver thoroughly after using it in the shower or with the cleaning solution.
- Do not use the appliance if the foil or trimmer is damaged, as this may cause injury.
- Keep the appliance away from children.
- Only use the power supply provided with the appliance.

3. Setup and Initial Use

3.1. Charging the Shaver

Before first use, fully charge your Braun Series 9 Pro shaver. This can be done using the charging cord directly or by placing it in the Clean & Renew station.

1. Connect the power cord to the shaver or the Clean & Renew station.
2. Plug the power supply into an electrical outlet.
3. The charging indicator lights will illuminate, showing the charging progress. A full charge typically takes about 1 hour and provides up to 60 minutes of cordless shaving.
4. For a quick shave, a 5-minute charge provides enough power for one shave.

3.2. Preparing the Clean & Renew Station (if applicable)

If your model includes the Clean & Renew station, prepare it for use:

1. Press the lift button on the side of the Clean & Renew station to open the housing.
2. Carefully remove the cap from a new Braun Clean & Renew cartridge.
3. Slide the cartridge into the station until it clicks into place.
4. Close the housing until it locks.
5. Connect the station to power.

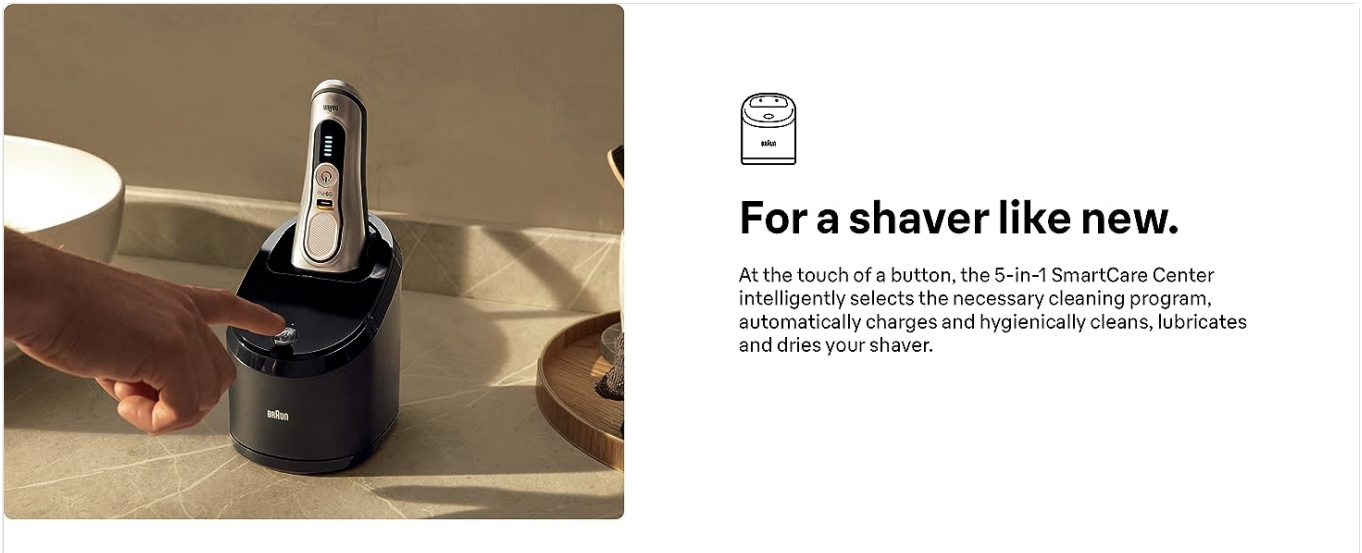

Image 3.1: The Braun Series 9 Pro shaver docked in the Clean & Renew station, ready for cleaning and charging.

4. Operating Your Shaver

4.1. General Shaving Tips

- For best results, shave before washing your face.
- Hold the shaver at a right angle (90°) to your skin.
- Stretch your skin and shave against the direction of beard growth.
- Apply gentle, even pressure.

4.2. Dry Shaving

Ensure your face is clean and dry. Press the on/off button to start the shaver and glide it over your skin.

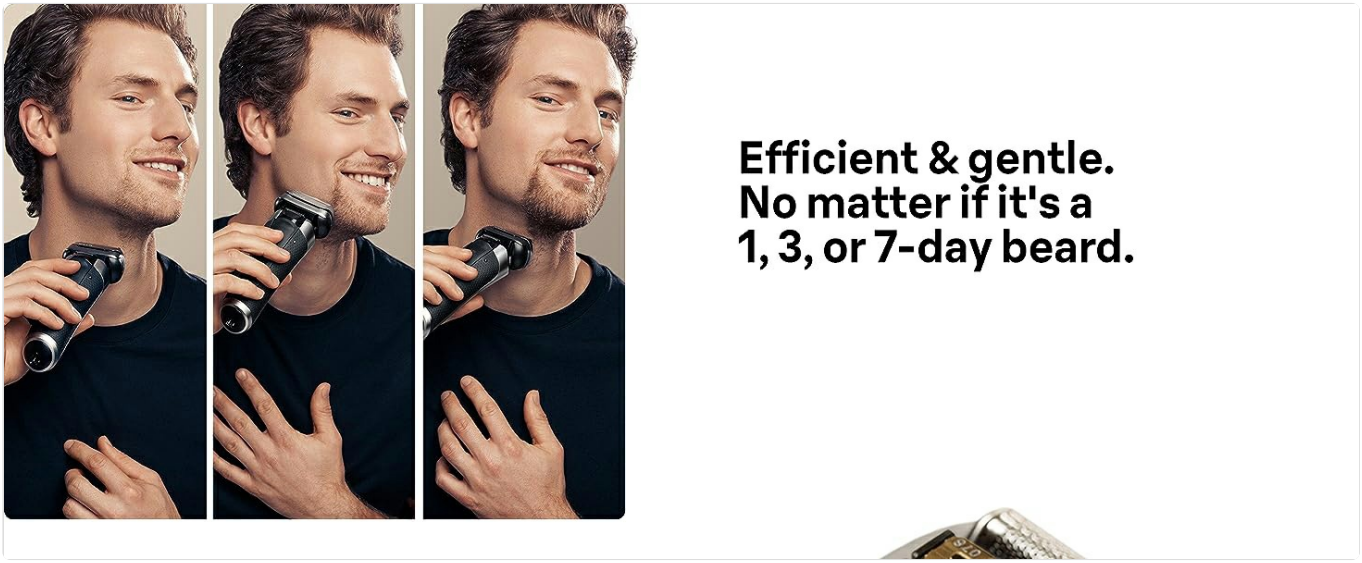

Image 4.1: A man demonstrating dry shaving with the Braun Series 9 Pro electric razor.

4.3. Wet Shaving (with Foam/Gel or in Shower)

The Series 9 Pro is fully waterproof. You can use it with shaving foam or gel for an even smoother experience, or directly in the shower.

- Apply shaving foam or gel to your face.
- Press the on/off button and shave as usual.
- After wet shaving, rinse the shaver head under running water.

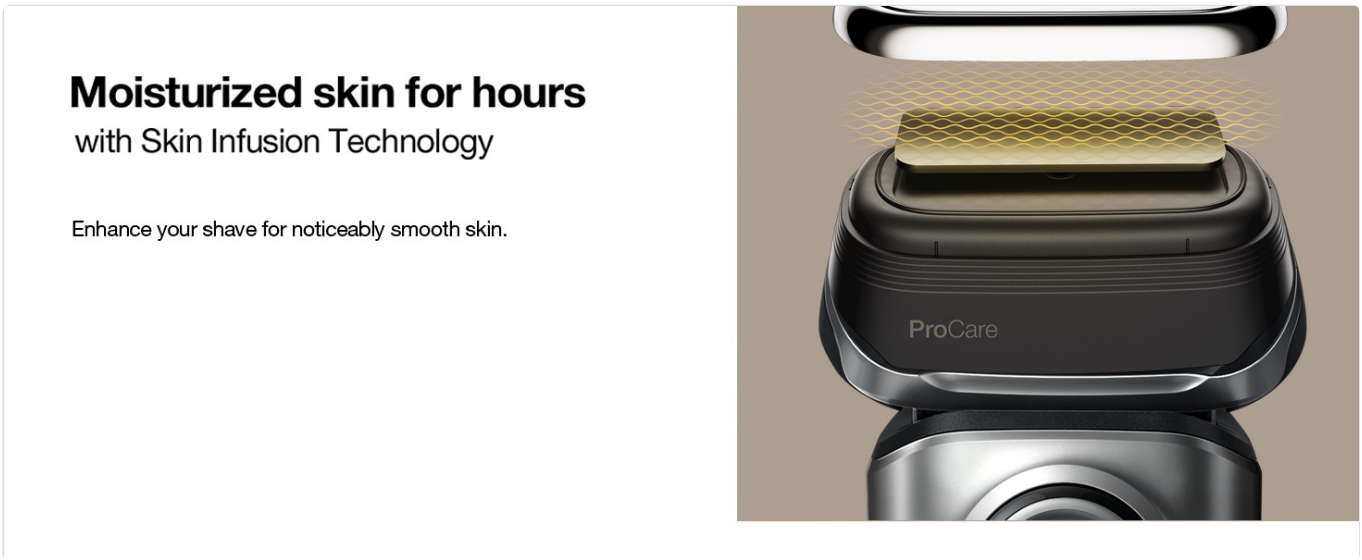

Image 4.2: A man preparing for a wet shave with foam and the Braun Series 9 Pro electric razor.

4.4. Using the Precision Trimmer

To trim sideburns, mustaches, or define beard lines, slide the precision trimmer upwards from the back of the shaver. Use short, controlled strokes.

5. Maintenance and Cleaning

5.1. Manual Cleaning

- **After every shave:** Switch off the shaver. Remove the shaver head (cassette). Tap out any trapped hairs. Rinse the shaver head and the shaver under hot running water until all residues are removed.
- **Weekly:** For a more thorough clean, use the small brush provided to remove stubborn hairs from the shaver head. Do not use the brush on the foil itself, as this can damage it.
- Allow the shaver head and shaver to air dry completely before reattaching the head or storing.

5.2. Cleaning with the Clean & Renew Station

The SmartCare Center provides an automated cleaning, lubricating, drying, and charging process for your shaver.

- After shaving, rinse the shaver head under running water to remove larger debris.
- Place the shaver head-down into the Clean & Renew station. Ensure it clicks into place.
- Press the start button on the station. The station will automatically select the appropriate cleaning program.
- The alcohol-based cleaning solution ensures optimal hygiene and a lemon-fresh scent. High-energy lubricants maintain the shaver's performance.
- The cleaning and drying process can take several hours. The shaver will be charged during this time.

5.3. Replacing the Shaver Head (Cassette)

For optimal shaving performance, it is recommended to replace the shaver head (foil and cutter cassette) approximately every 18 months, or when the shaving performance noticeably decreases. Replacement parts are available from authorized Braun retailers.

- To remove: Press the release buttons on the sides of the shaver head and pull it upwards.
- To attach: Align the new shaver head with the shaver body and press it down until it clicks into place.

5.4. Replacing Clean & Renew Cartridges

Replace the cleaning cartridge when the indicator light on the Clean & Renew station illuminates, or approximately every 3 weeks with daily use. Dispose of used cartridges according to local regulations.

6. Troubleshooting

If you encounter issues with your Braun Series 9 Pro shaver, refer to the following common solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 5 minutes, or fully charge for 1 hour.

Problem	Possible Cause	Solution
Poor shaving performance.	Shaver head is worn or dirty.	Clean the shaver head thoroughly. Consider replacing the shaver head (foil and cutter cassette) if it's older than 18 months.
Irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are shaving against the grain with gentle pressure. Try wet shaving with foam/gel. Allow skin to adapt over a few weeks.
Clean & Renew station not working.	Cartridge empty or station not powered.	Replace the cleaning cartridge. Ensure the station is properly plugged in.

If the problem persists, please contact Braun Customer Service for further assistance.

7. Specifications

- **Model:** 9477cc
- **Brand:** Braun
- **Type:** Electric Foil Shaver
- **Power Source:** Rechargeable Battery
- **Special Features:** Wet & Dry Shave, Portable, ProLift Trimmer, Sonic Technology, SmartCare Center (Clean & Renew Station)
- **Recommended Uses:** Lip, Mustache, Beard, Neck

8. Warranty and Support

Your Braun Series 9 Pro 9477cc electric razor comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For product support, replacement parts, or further assistance, please visit the official Braun website or contact Braun Customer Service. You can often find detailed FAQs and support resources online.

Online Support: Visit the Braun Store on Amazon

© 2023 Braun. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BP9Z5765

More documents and user manuals: **https://manuals.plus/**