Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Garmin 010-02619-00

Garmin Dash Cam Live User Manual

Model: 010-02619-00

1. Introduction

The Garmin Dash Cam Live is an advanced, always-connected LTE dash camera designed to provide comprehensive vehicle surveillance and recording capabilities. This manual provides essential information for setting up, operating, and maintaining your device, ensuring optimal performance and safety.

2. Safety Information

Always operate the device in a manner that does not distract you from driving. Ensure the dash cam is securely mounted and does not obstruct your view of the road. Do not attempt to service the device yourself; refer all servicing to qualified personnel. Keep the device away from extreme temperatures and direct sunlight for prolonged periods to prevent damage. Adhere to all local laws and regulations regarding dash cam usage, as some jurisdictions may prohibit or restrict the use of camera devices.

3. What's in the Box

- Garmin Dash Cam Live
- Pre-installed 16 GB microSD™ card
- Low-profile magnetic mount
- Long power cable (4 meters)
- Shorter power/data cable (1.5 meters)
- Dual-USB power adapter
- Documentation

4. Setup

4.1 Mounting the Dash Cam

The Garmin Dash Cam Live utilizes a low-profile magnetic mount for easy installation and removal. Choose a location on your windshield that does not obstruct your driving view and allows for a clear recording angle. Ensure the windshield is clean and dry before attaching the mount.



Figure 4.1: Garmin Dash Cam Live with magnetic mount.

4.2 Power Connection

Connect the dash cam to your vehicle's power source using the provided power cables and dual-USB power adapter. The device is designed to automatically begin recording when your vehicle starts and stop when it is turned off. For continuous power to enable parking surveillance features, a constant power cable (sold separately) may be required for some vehicles.



Figure 4.2: Dash Cam Live connected to power via USB cable.

4.3 MicroSD Card

Your Garmin Dash Cam Live comes with a pre-installed 16 GB microSD™ card, ready for immediate use. This card stores all recorded video footage.

4.4 Garmin Drive App Connection

Download the Garmin Drive™ smartphone app to access live view, review footage, and manage settings. The app facilitates seamless connectivity with your dash cam.

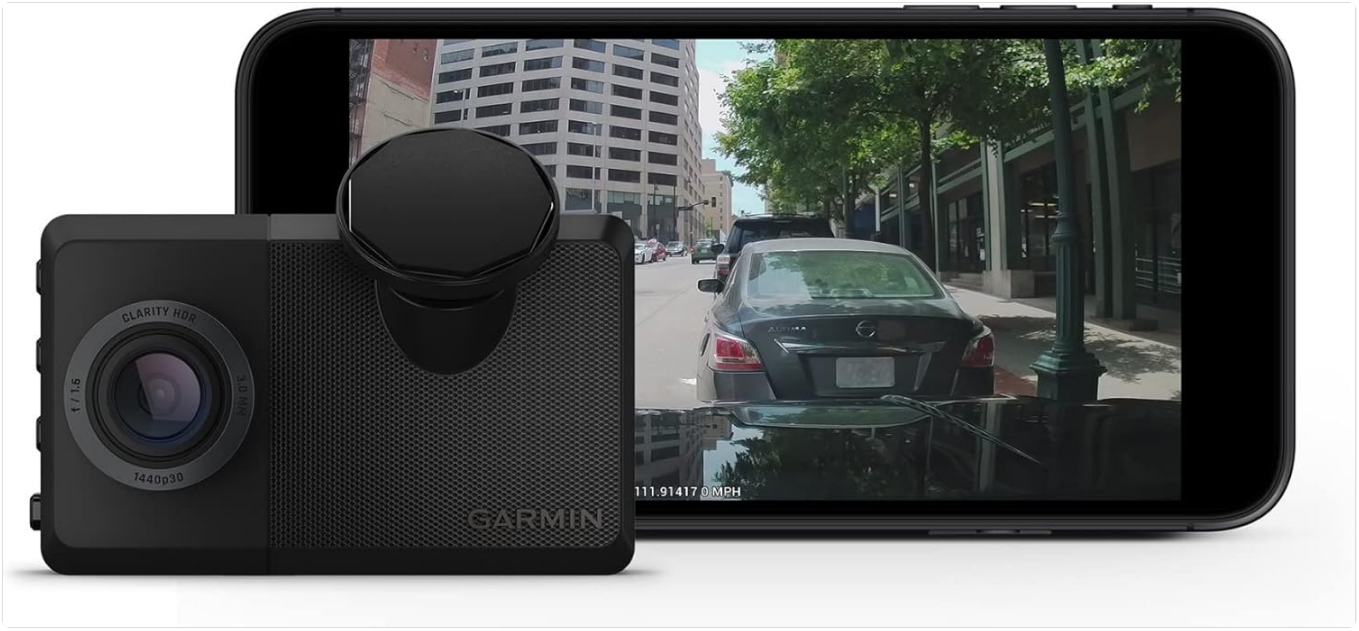


Figure 4.3: Dash Cam Live displaying live view on a smartphone via the Garmin Drive app.

5. Operating the Dash Cam

5.1 Automatic Recording

Once powered, the dash cam automatically begins continuous recording. Videos are saved in high-definition 1440p resolution with a wide 140-degree field of view, enhanced by Garmin Clarity™ HDR optics for clear details day and night.



Figure 5.1: Dash Cam Live screen displaying the live recording view.

5.2 Voice Control

Control your dash cam using spoken commands. Voice control allows you to save video, start/stop audio recording, take still pictures, and more, without taking your hands off the wheel. This feature is available in English, German, French, Spanish, Italian, and Swedish.

5.3 Incident Detection and Vault Upload

The dash cam automatically detects incidents and saves video footage from just before, during, and after the event. These saved videos are automatically uploaded to the secure online Vault, accessible via the Garmin Drive app for viewing and sharing.

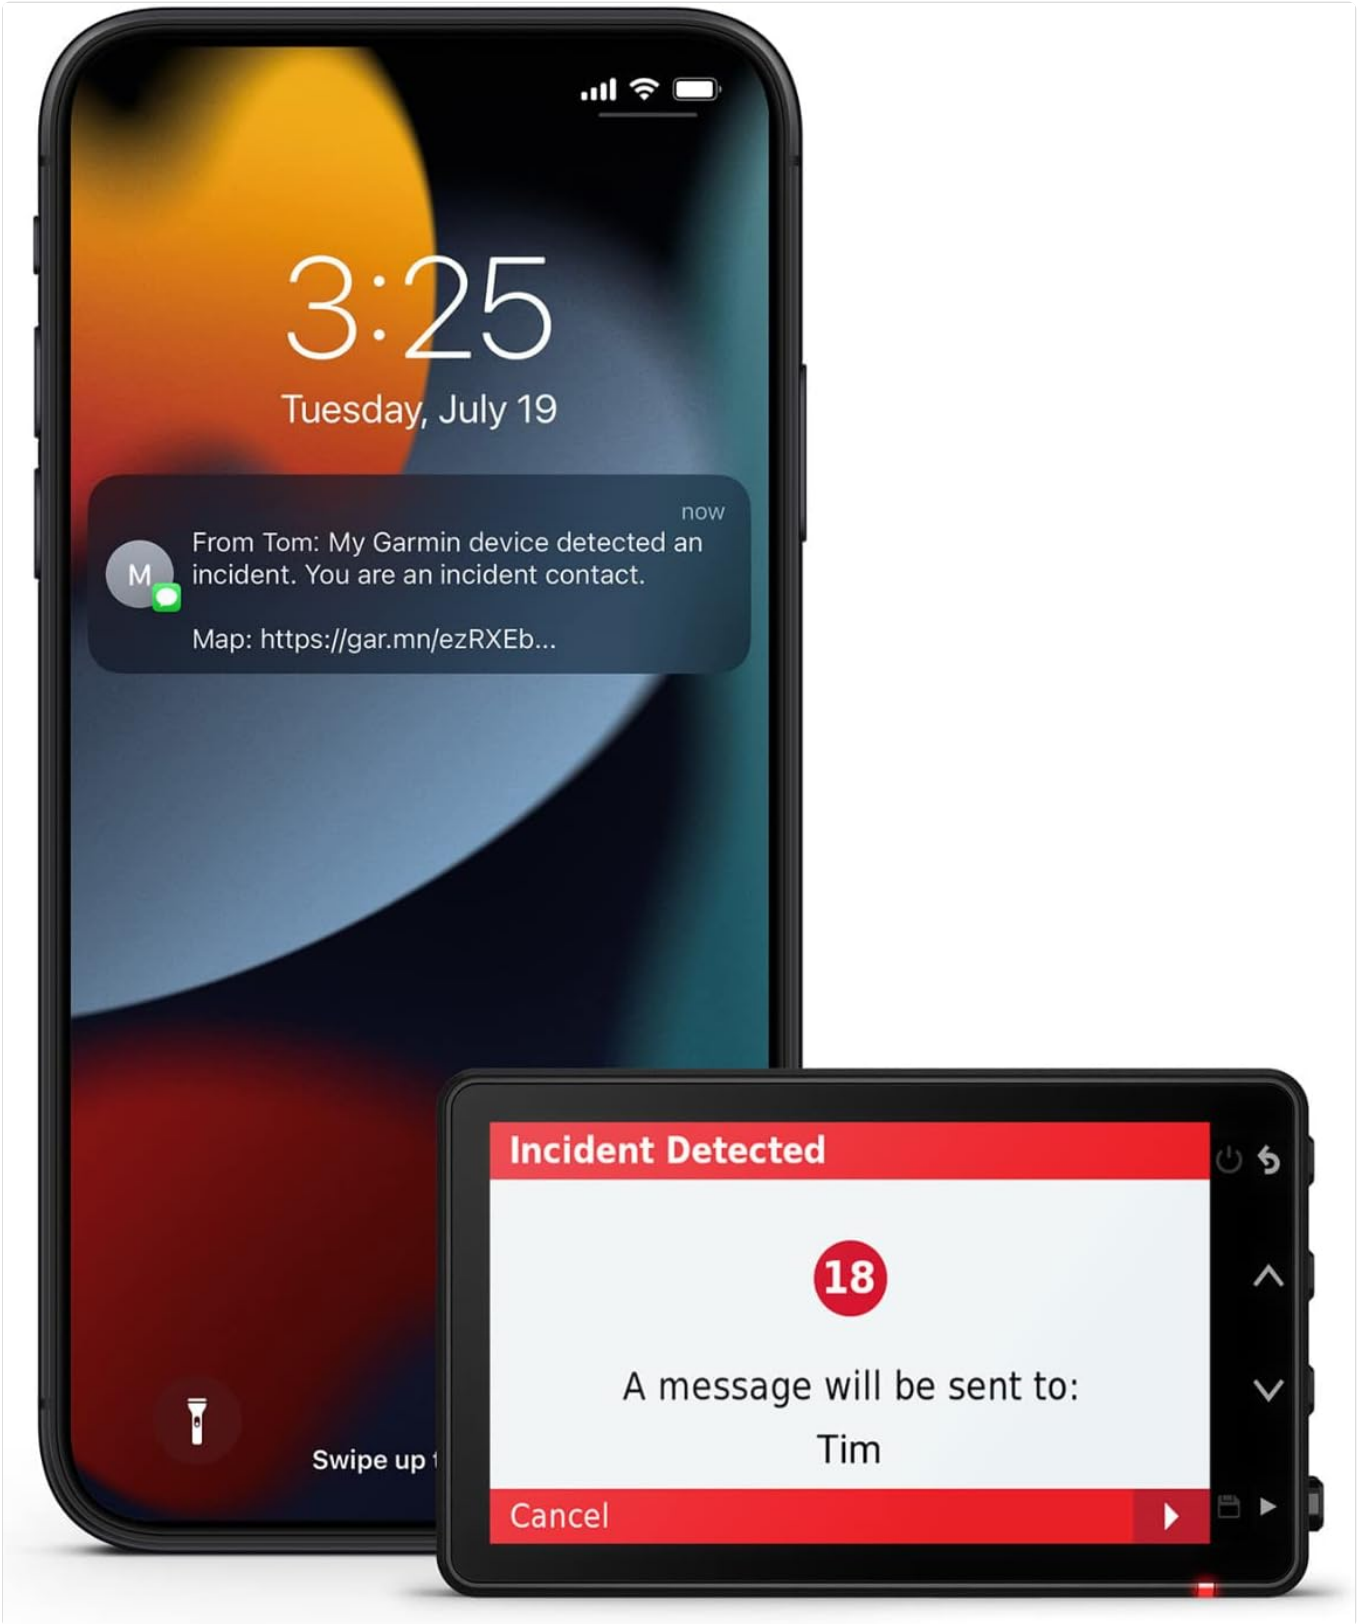


Figure 5.2: Incident detected notification on a smartphone.

5.4 Always-On Connectivity (LTE Subscription Required)

With an active LTE subscription, the Garmin Dash Cam Live offers advanced features:

- **Live View:** Access a live view of your vehicle anytime from the Garmin Drive app.
- **Location Tracking:** Conveniently check your vehicle's location at any time.
- **Theft Alerts:** Receive alerts via the Garmin Drive app if your vehicle is driven without your phone inside.
- **Parking Guard:** Get notifications and video clips of detected incidents affecting your parked vehicle.

5.5 Driver Awareness Features

The dash cam provides various alerts to promote safer driving and situational awareness:

- **Forward Collision Warning:** Alerts if you are driving too closely to the vehicle ahead.
- **Lane Departure Warning:** Alerts if you drift off the road or into oncoming traffic.
- **Speed Camera Warnings:** Notifies you of nearby red-light cameras and speed cameras (not available in all regions).
- **"Go" Alerts:** Notifies you when stopped traffic in front of you has started to move.

5.6 Dash Cam Video Sync

The Garmin Drive app can control and play back synchronized video from up to four Garmin dash cameras (sold separately) mounted around your vehicle to capture video from multiple viewpoints.

5.7 Travelapse Feature

Share your drive with friends using the Travelapse feature, which condenses hours of driving footage into minutes of highlights for a fun, creative video.

6. Maintenance

To ensure the longevity and optimal performance of your Garmin Dash Cam Live, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the lens and screen with a soft, lint-free cloth. Avoid using abrasive cleaners or solvents.
- **MicroSD Card:** Periodically format the microSD card (via the Garmin Drive app or device settings) to maintain optimal recording performance and free up space. Back up any important footage before formatting.
- **Firmware Updates:** Check for and install available firmware updates through the Garmin Drive app to ensure your device has the latest features and improvements.
- **Storage:** When not in use, store the dash cam in a cool, dry place away from direct sunlight.

7. Troubleshooting

If you encounter issues with your Garmin Dash Cam Live, try the following troubleshooting steps:

- **Device Not Powering On:** Ensure the power cable is securely connected to both the dash cam and the vehicle's power outlet. Check the vehicle's power outlet for functionality.
- **Recording Issues:** Verify that the microSD card is properly inserted and has sufficient free space. Try formatting the card. If issues persist, the card may need to be replaced.
- **App Connectivity Problems:** Ensure Bluetooth and Wi-Fi are enabled on your smartphone. Restart both the dash cam and the Garmin Drive app.
- **Voice Control Not Responding:** Speak clearly and ensure there is minimal background noise. Check the voice control settings in the Garmin Drive app.
- **No LTE Connectivity:** Confirm you have an active LTE subscription. Check cellular signal strength in your area.

For further assistance, refer to the official Garmin support website or contact customer service.

8. Specifications

Feature	Specification
Product Dimensions	3.26 x 1.98 x 0.85 inches
Item Weight	3.87 ounces
Item Model Number	010-02619-00
Batteries	1 Lithium Ion batteries required (included)
Wireless Communication	Wi-Fi, Bluetooth
Video Capture Resolution	1440p
Field of View	140-degree
Mounting Type	Low profile magnetic mount
Included Components	Dash Cam Live, 16 GB microSD card, magnetic mount, power cables, dual-USB adapter

9. Warranty and Support

Garmin products are designed for reliability and performance. For specific warranty details, please refer to the warranty information included with your product documentation or visit the official Garmin website. Optional protection plans may be available for extended coverage. For technical support, troubleshooting, or service inquiries, please contact Garmin Customer Support.

Online Support: www.garmin.com/support

© 2025 Garmin Ltd. or its subsidiaries. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BPJL4KPY

More documents and user manuals: **https://manuals.plus/**