Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CHONCHOW 1910T

CHONCHOW 1910T Gaming Keyboard and Mouse Set User Manual

Model: 1910T

Introduction

Thank you for purchasing the CHONCHOW 1910T Gaming Keyboard and Mouse Set. This manual provides detailed instructions for the proper use and maintenance of your new gaming peripherals. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

Package Contents

- CHONCHOW 1910T Gaming Keyboard
- CHONCHOW Gaming Mouse
- User Manual (this document)

Setup

The CHONCHOW 1910T Gaming Keyboard and Mouse Set is designed for plug-and-play functionality. No additional drivers are typically required for basic operation.

1. **Connect the Keyboard:** Plug the USB connector of the keyboard into an available USB port on your computer, PS4, or Switch.
2. **Connect the Mouse:** Plug the USB connector of the mouse into another available USB port on your computer, PS4, or Switch.
3. **System Recognition:** Your operating system (Windows, Mac) or console (PS4, Switch) should automatically detect and install the necessary drivers. This may take a few moments.
4. **Ready for Use:** Once recognized, the keyboard and mouse are ready for immediate use.



Figure 1: Compatibility with various systems including PC, PS4, Switch, and Mac.

Operating Instructions

Keyboard Features

- **108-Key Japanese Layout:** Standard Japanese keyboard layout for comfortable typing.
- **19-Key Anti-Ghosting:** Ensures accurate input even when multiple keys are pressed simultaneously, crucial for gaming.
- **Floating Keycaps:** Designed for comfortable typing and a responsive feel.
- **Durable Construction:** Made with high-quality ABS material and metal for longevity. Key legends are resistant to fading.
- **Waterproof Design:** Features three drainage holes to protect against accidental spills.
- **Key Durability:** Rated for over 10 million clicks.

Note: This is a membrane keyboard, not a mechanical keyboard, and does not feature mechanical switches.

LED Backlight Operation (Keyboard)

The keyboard features seven-color LED backlighting (Red, Orange, Yellow, Green, Blue, Indigo, Purple) with multiple lighting modes.

- **Turn Backlight On/Off:** Press **FN + SCRLK** to toggle the backlight.
- **Adjust Brightness:**
  - Press **FN +** ↑ to increase brightness.
  - Press **FN +** ↓ to decrease brightness.
- **Breathing Mode:** Press **FN + PRTSC** to activate breathing mode.
- **Adjust Breathing Speed:**
  - Press **FN + +** to increase breathing speed.
  - Press **FN + -** to decrease breathing speed.



Figure 2: Keyboard LED backlight control functions.

Multimedia Key Functions (Keyboard)

The keyboard includes 12 multimedia keys accessible via the **FN** key combined with the F1-F12 keys.

Key Combination	Function
FN + F1	Media Player
FN + F2	Volume Down
FN + F3	Volume Up
FN + F4	Mute

Key Combination	Function
FN + F5	Previous Track
FN + F6	Next Track
FN + F7	Play/Pause
FN + F8	Stop
FN + F9	Home Page
FN + F10	Email
FN + F11	My Computer/File Explorer
FN + F12	Bookmarks
FN + WIN	Lock WIN key and APP key
FN + W	Swap WASD keys with Arrow keys



Figure 3: Multimedia key functions on the keyboard.

Mouse Features

- **6 Multi-function Buttons:** Provides versatile control for gaming and general use.
- **7-Color Breathing Light:** The mouse features a dynamic 7-color LED breathing light effect.
- **4-Stage Adjustable DPI:** Easily switch between DPI settings for different tasks.

DPI Adjustment (Mouse)

Press the DPI button on the mouse to cycle through the following sensitivity settings:

- 800 DPI
- 1600 DPI
- 2400 DPI
- 3200 DPI

Adjusting DPI allows for higher sensitivity during gaming and lower sensitivity for precise work, enhancing user comfort and efficiency.

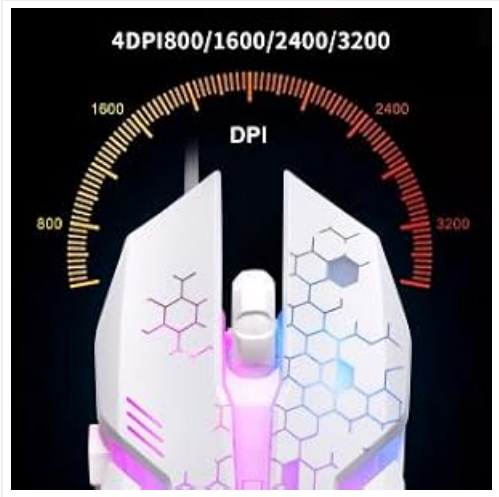


Figure 4: Mouse DPI adjustment levels.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the devices.
- **Spill Protection:** While the keyboard has a waterproof design with drainage holes, it is not fully submersible. Avoid intentionally spilling liquids on it. In case of accidental spills, unplug immediately and allow to dry completely before reconnecting.
- **Storage:** Store the devices in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or twisting the USB cables excessively to prevent damage.



Figure 5: Keyboard's waterproof design with drainage holes.

Troubleshooting

- **Device Not Recognized:**
  - Ensure the USB cables are securely plugged into the correct ports.
  - Try connecting to a different USB port.
  - Restart your computer or console.
  - Test the devices on another computer or console to rule out system-specific issues.
- **Keys Not Responding / Mouse Not Moving:**

- Check for physical obstructions under the keys or mouse.
- Ensure the cables are not damaged.
- For the keyboard, ensure the WIN key lock (FN+WIN) is not active if you are experiencing issues with the Windows key.

- **Backlight Not Working:**
  - Press **FN + SCRLK** to ensure the backlight is turned on.
  - Adjust brightness using **FN +** ↑/↓.
- **Mouse DPI Issues:**
  - Press the DPI button on the mouse to cycle through different sensitivity settings.

Specifications

Feature	Detail
Brand	CHONCHOW
Model	1910T
Connectivity	USB Wired
Keyboard Layout	108-Key Japanese Layout
Anti-Ghosting	19-Key Anti-Ghosting
Keyboard Backlight	7-Color LED (Red, Orange, Yellow, Green, Blue, Indigo, Purple) with breathing modes
Mouse Buttons	6 Multi-function Buttons
Mouse DPI	800/1600/2400/3200 DPI (4-stage adjustable)
Compatibility	PC (Windows), Mac, PS4, Switch
Power Source	USB Wired
Special Features	Waterproof Keyboard, Ergonomic Design, Durable Construction



Figure 6: Physical dimensions of the keyboard and mouse.

Warranty and Support

This product comes with a **1-month warranty** from the date of purchase. For warranty claims or technical support, please contact your retailer or the manufacturer directly. Please retain your proof of purchase for warranty validation.

© 2023 CHONCHOW. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BPWYK7G9

More documents and user manuals: **https://manuals.plus/**