Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DeLUX MF10PRO+KF10

DELUX PockCombo Portable Keyboard and Mouse Wireless User Manual

Model: MF10PRO+KF10 | Brand: DeLUX

1. Introduction

The DELUX PockCombo is a versatile and portable keyboard and mouse combo designed for mobile productivity. It features a foldable keyboard, a 2-in-1 sliding mouse with presenter functionality, and a multi-functional protective case that doubles as a tablet stand and mouse pad. This combo supports multi-device Bluetooth connectivity across various operating systems, making it an ideal solution for users on the go.



Image: The DELUX PockCombo, showcasing the foldable keyboard, sliding mouse, and protective case.

2. Setup

2.1 What's in the Box

- Foldable Bluetooth Keyboard
- 2-in-1 Sliding Bluetooth Mouse
- Protective Case / Tablet Stand
- USB-C Charging Cable
- User Manual (this document)



Image: All components included in the DELUX PockCombo package.

2.2 Charging the Devices

Both the keyboard and mouse are rechargeable via the provided USB-C cable. Connect the cable to the respective charging ports on each device and to a USB power source. The devices feature long battery life, lasting up to 20 days on a single charge.

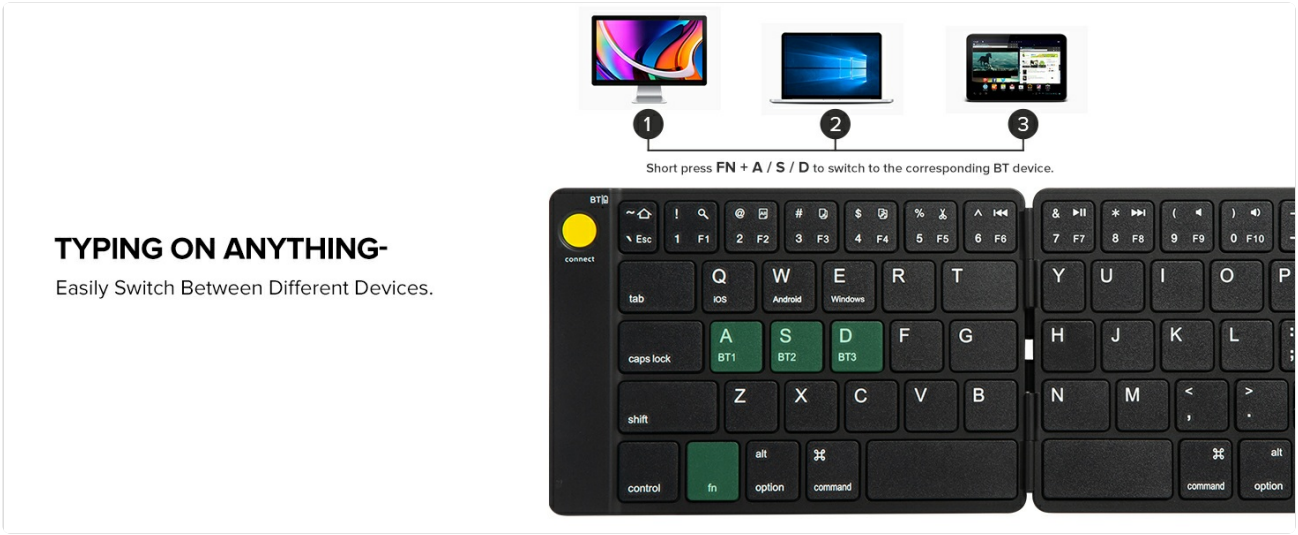

Image: Illustration of the USB-C charging ports on the keyboard and mouse.

2.3 Connecting to Devices (Bluetooth Pairing)

The PockCombo supports simultaneous connection to three devices via Bluetooth, allowing for effortless switching. It is compatible with Windows, iOS, and Android systems.

2.3.1 Keyboard Pairing

1. Unfold the keyboard to power it on.

2. Press and hold the **Fn** key along with one of the Bluetooth channel keys (**A**/**BT1** for iOS, **S**/**BT2** for Android, or **D**/**BT3** for Windows) for 3-5 seconds until the corresponding indicator light flashes, indicating pairing mode.
3. On your device (tablet, smartphone, laptop), go to Bluetooth settings and select "DELUX Keyboard" from the list of available devices to connect.
4. Once connected, the indicator light will stop flashing.

2.3.2 Mouse Pairing

1. Slide the mouse open to power it on.
2. Press the Bluetooth pairing button on the underside of the mouse until the indicator light flashes.
3. On your device, go to Bluetooth settings and select "DELUX Mouse" from the list of available devices to connect.
4. Once connected, the indicator light will stop flashing.

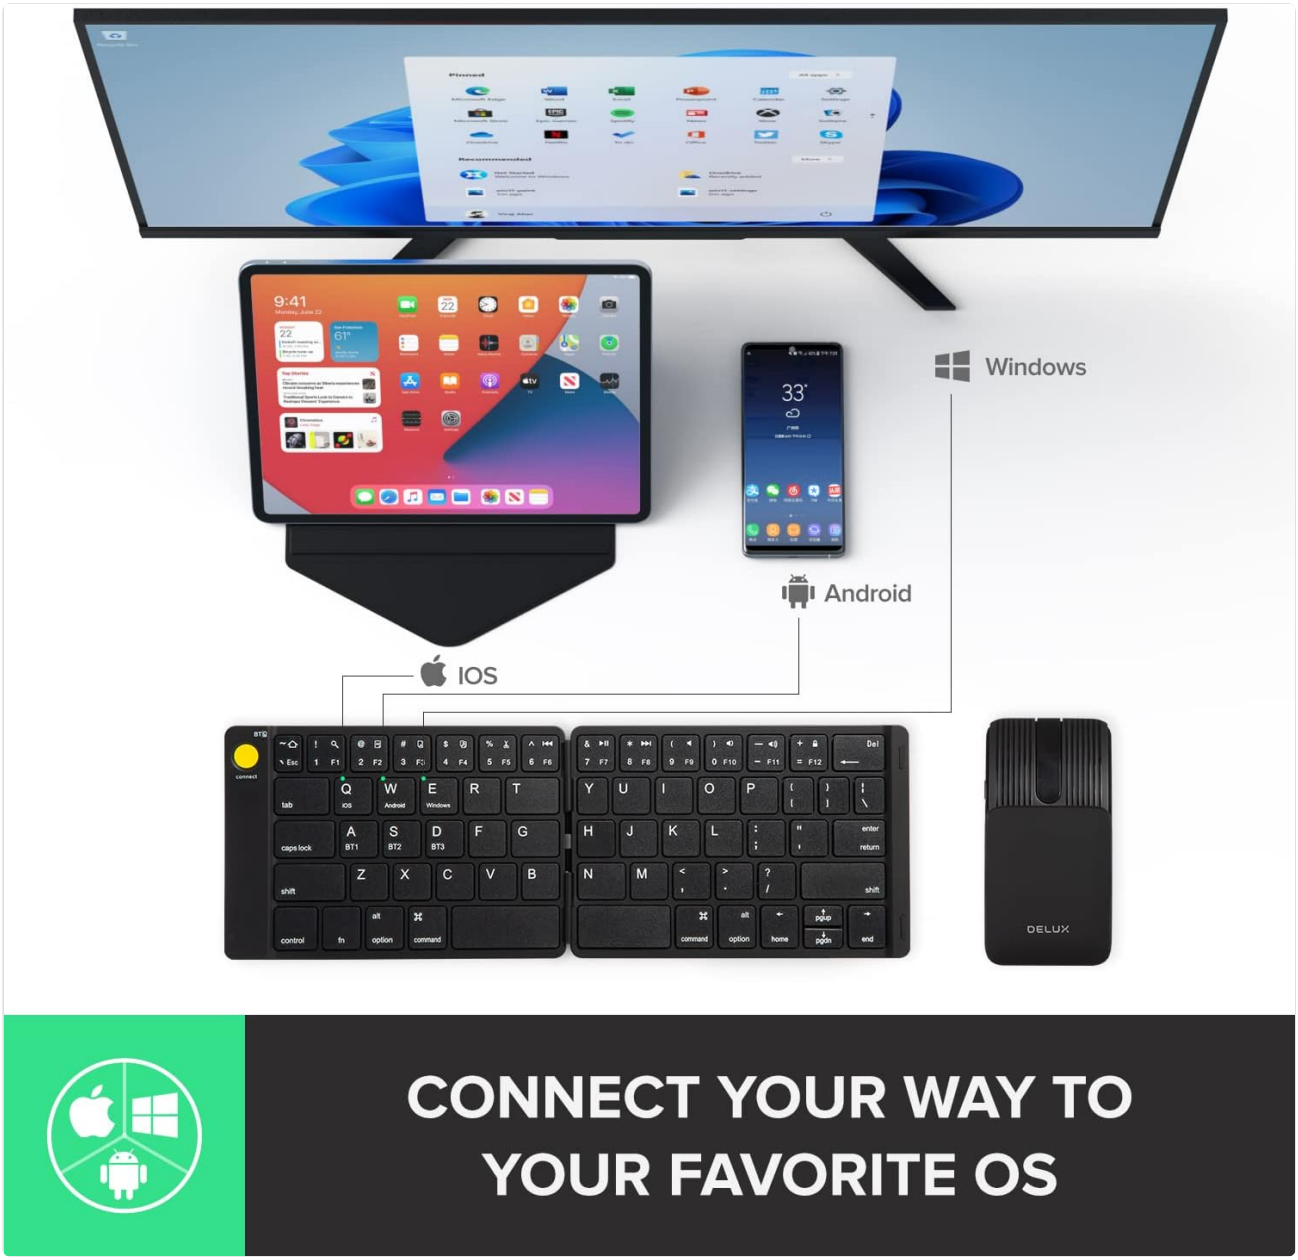

Image: Diagram illustrating the multi-device and multi-OS compatibility of the PockCombo, connecting to iOS, Android, and Windows devices.

2.4 Using the Protective Case as a Stand

The protective case can be folded into an adjustable desk holder to prop up your tablet or smartphone at different angles for comfortable viewing and typing. It can also be flattened to serve as a mouse pad.

▶ **Watch video online**
DELUX Pocket Combo Wireless Keyboard and Mouse MF10

Video: Demonstrates the setup of the protective case as a tablet stand and the pairing process for the mouse and keyboard. (Source: Delux Technology Co., Ltd.)

3. Operating Instructions

3.1 Keyboard Operation

The ultra-slim foldable keyboard provides a comfortable typing experience. It is half the size of a standard keyboard when folded, making it highly portable. It features scissor switches for consistent and fast typing feedback.

- **Typing:** Simply unfold the keyboard and begin typing.
- **Function Keys:** The keyboard includes function keys (F1-F12) and dedicated keys for media control and other shortcuts.
- **OS Switching:** To switch between connected devices, short press **Fn + A**/**S**/**D** corresponding to the desired Bluetooth channel (BT1, BT2, BT3).



Image: Close-up of the keyboard showing the function keys and Bluetooth channel indicators for iOS, Android, and Windows.

3.2 Mouse Operation

The 2-in-1 sliding mouse is compact and fits easily into your palm. It offers both standard mouse functionality and a wireless presenter mode.

- **Mouse Mode:** Slide the mouse open to use it as a conventional mouse with left-click, right-click, and a scroll function.
- **Presenter Mode:** With a single push of a button (typically a side button), the mouse transforms into a wireless presenter, allowing you to control slides and highlight points with a laser pointer during presentations.

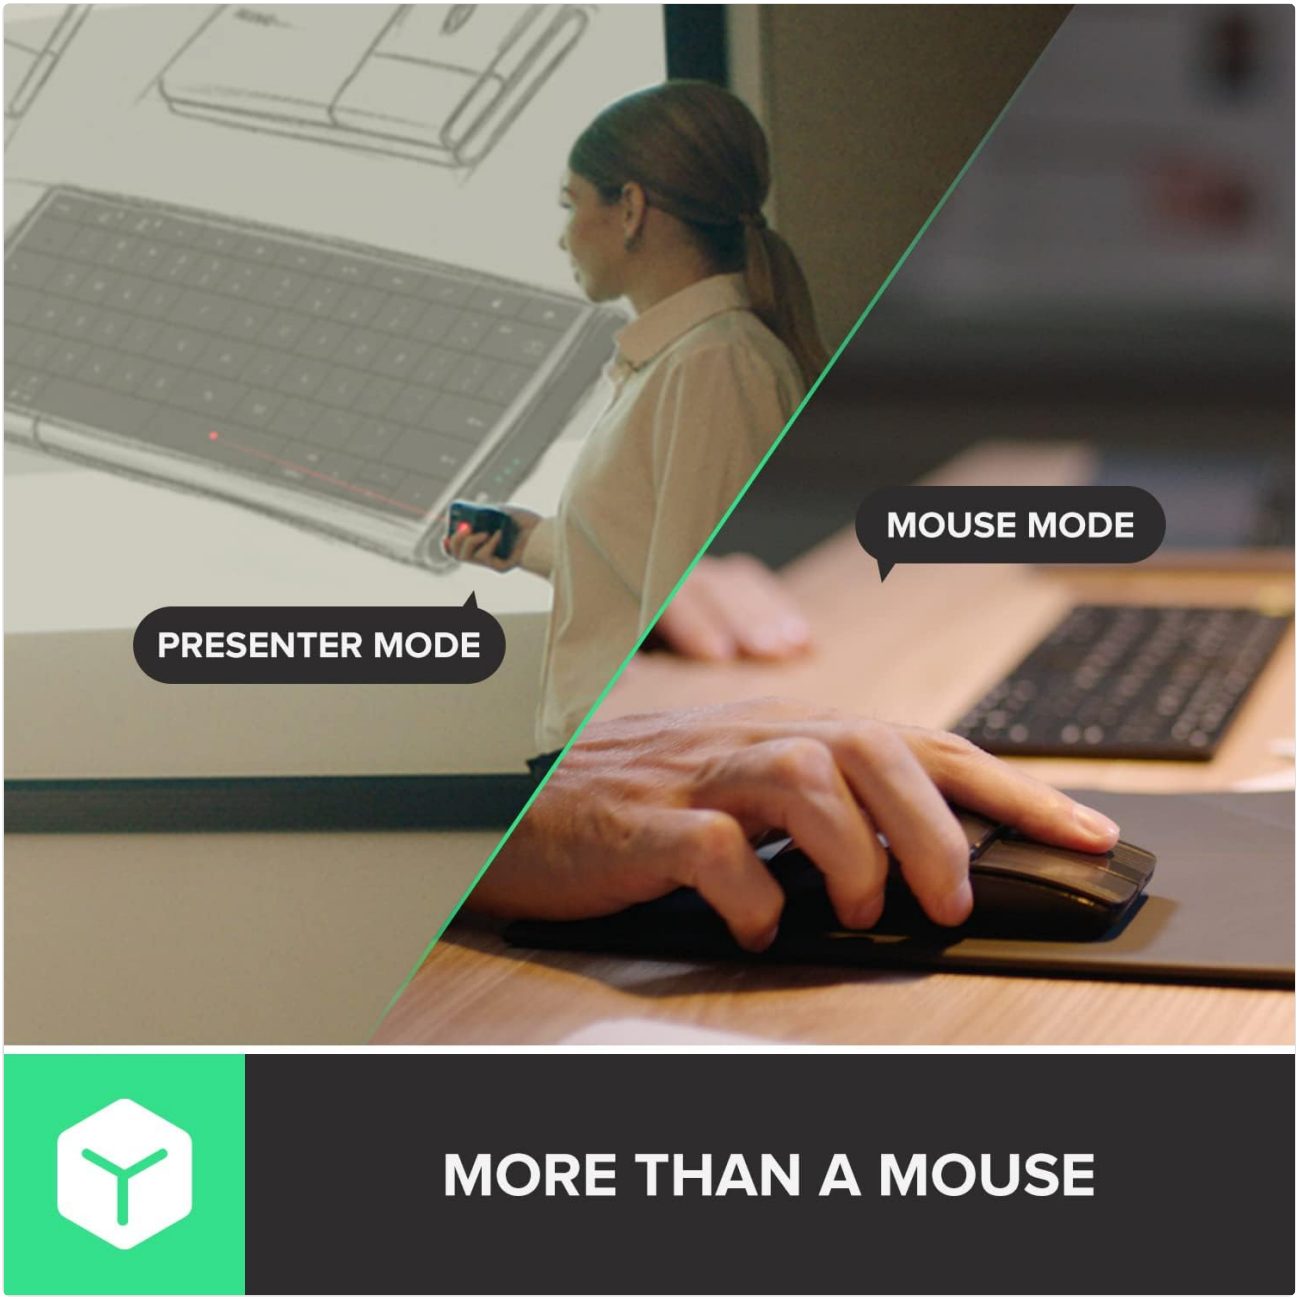

Image: The sliding mouse shown in presenter mode, highlighting its dual functionality.

4. Maintenance

To ensure the longevity and optimal performance of your DELUX PockCombo, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the device.
- **Storage:** When not in use, fold the keyboard and slide the mouse closed. Store them securely within the protective case to prevent scratches and damage.
- **Battery Care:** Avoid fully discharging the batteries frequently. Recharge the devices when the battery low indicator appears. Store in a cool, dry place if not used for extended periods.
- **Avoid Extreme Conditions:** Do not expose the devices to extreme temperatures, direct sunlight, or high humidity.

5. Troubleshooting

If you encounter issues with your DELUX PockCombo, please refer to the following common solutions:

5.1 Connection Issues

- **Device Not Connecting:** Ensure both the keyboard and mouse are fully charged. Verify that Bluetooth is enabled on your host device and that the PockCombo is in pairing mode. Try restarting both the PockCombo components and your host device.
- **Intermittent Connection:** Move closer to your host device to ensure a strong Bluetooth signal. Avoid placing the devices near other wireless interference sources (e.g., Wi-Fi routers, other Bluetooth devices).
- **Unable to Switch Devices:** Ensure you are pressing the correct Fn + BT channel combination for the keyboard. For the mouse, ensure it is properly paired to the desired device.

5.2 Keyboard/Mouse Unresponsive

- **No Input:** Check battery levels. Re-pair the device with your host system. Ensure the keyboard is fully unfolded and the mouse is fully slid open.
- **Keys Not Working:** Clean around the keys to ensure no debris is obstructing them.
- **Mouse Cursor Not Moving:** Ensure the mouse is on a suitable surface. Clean the optical sensor on the underside of the mouse.

6. Specifications

Feature	Detail
Model Number	MF10PRO+KF10
Connectivity Technology	Bluetooth
Compatible Devices	Gaming Console, Television, Tablet, Smartphone
Special Features	Portable, Lightweight, Foldable, Rechargeable
Item Weight	1.54 pounds
Package Dimensions	9.49 x 4.96 x 2.91 inches
Batteries	1 Lithium Polymer battery (included)
Folded Keyboard Thickness	13 mm
Unfolded Keyboard Thickness	6.6 mm

7. Warranty and Support

For warranty information and detailed support, please refer to the official user manual PDF provided by DeLUX. You can typically find this document on the product's Amazon listing page under the 'Product guides and documents' section or by visiting the DeLUX official website.
For further assistance, please contact DeLUX customer support.
Official User Manual (PDF): Download Here

© 2025 DeLUX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BR3RVQ3F

More documents and user manuals: **https://manuals.plus/**