Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Metz 50MUE7600

Metz 50MUE7600 4K Ultra HD Smart IPS LED TV User Manual

Model: 50MUE7600

1. Introduction

This manual provides essential information for the safe and efficient operation of your Metz 50MUE7600 4K Ultra HD Smart IPS LED TV. Please read this manual thoroughly before using the television and retain it for future reference.

The Metz 50MUE7600 is a 50-inch (126 cm) 4K Ultra HD Smart TV featuring an IPS LED display, powered by Google TV. It offers a resolution of 3840 x 2160 pixels, a 60 Hz refresh rate, and includes advanced features such as Chameleon Extreme 2.0, HDR10, Low Blue Light, and Dolby Audio.

2. What's in the Box

Verify that all components are present upon unpacking:

- 1 x Metz 50MUE7600 LED TV
- 1 x User Guide (this document)
- 2 x Table Top Stand components
- 1 x Warranty Card
- 1 x Remote Controller
- 1 x Power Cord



Front view of the Metz 50MUE7600 TV, showcasing its Google TV interface with popular applications like Netflix, YouTube, and Prime Video. The screen displays vibrant content, highlighting the smart TV capabilities.

3. Setup

3.1 Installing the TV Stand


1. Carefully place the TV screen-down on a soft, flat surface to prevent damage.
2. Align the stand components with the screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly.

3.2 Connecting Power

1. Connect the power cord to the TV's power input port.
2. Plug the other end of the power cord into a suitable electrical outlet (AC 220V).

3.3 Initial Setup and Network Connection

1. Press the power button on the remote control or TV to turn it on.
2. Follow the on-screen instructions to select your language, region, and connect to your Wi-Fi network.
3. Log in with your Google account to access Google TV features and download applications.

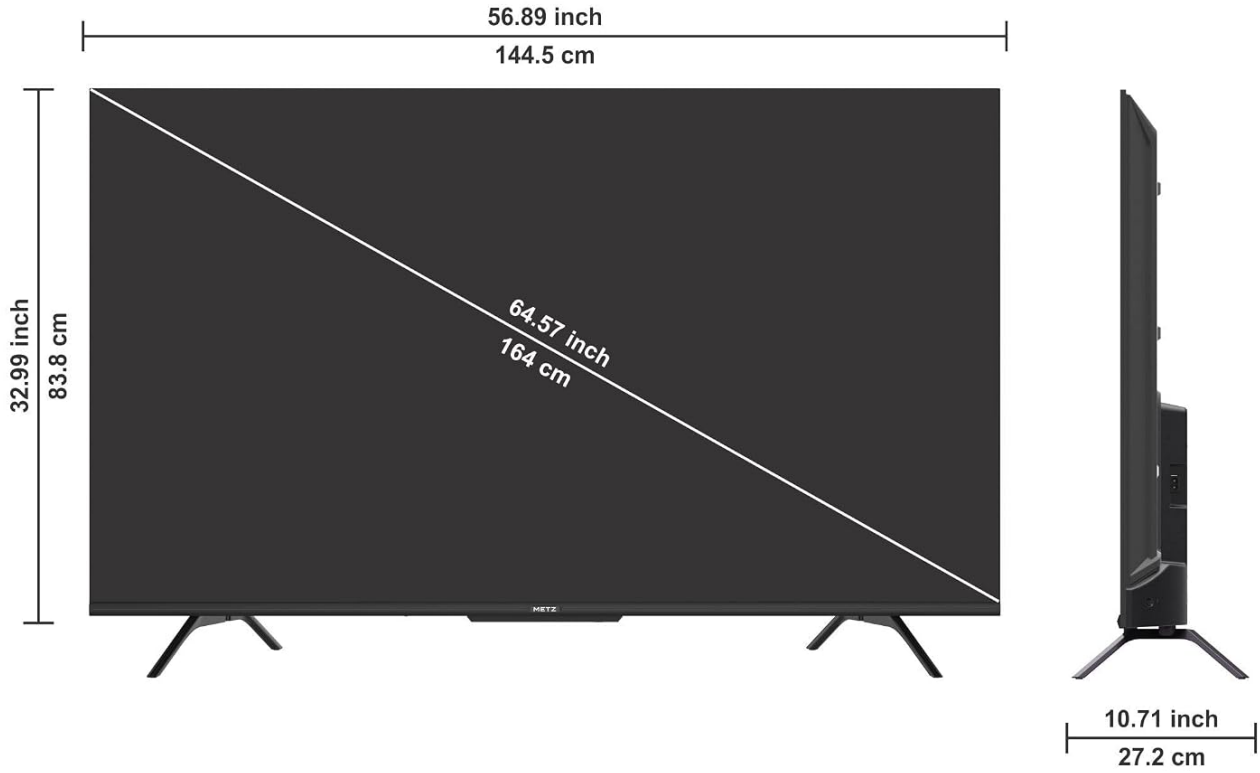

A technical diagram providing the precise dimensions of the Metz 50MUE7600 TV, including its width (144.5 cm / 56.89 inches), height (83.8 cm / 32.99 inches), and depth (27.2 cm / 10.71 inches), useful for installation planning.

4. Operating the TV

4.1 Remote Control Functions

The remote control allows you to navigate the TV's interface and control various functions.



The remote control for the Metz 50MUE7600 Smart TV, featuring standard navigation buttons, volume controls, and dedicated quick-access buttons for popular streaming services like Netflix, Prime Video, and YouTube.

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Accesses the Google TV home screen.
- **Volume +/-:** Adjusts the volume level.
- **Dedicated App Buttons:** Quick access to Netflix, Prime Video, and YouTube.

4.2 Google TV Interface

Google TV organizes movies, shows, live TV, and more from your apps and subscriptions into one place. It provides personalized recommendations based on your viewing history.




A visual representation of the Metz Google TV interface, demonstrating the wide range of movies, shows, and apps available for personalized entertainment.

- **Home Screen:** Displays recommended content, installed apps, and quick access to settings.
- **Apps:** Access the Google Play Store to download and manage applications.
- **Search:** Use voice or text search to find content across all your services.

4.3 Picture and Sound Settings

Access the TV settings menu to adjust picture and sound preferences.

- **Picture Modes:** Select from various presets (e.g., Standard, Vivid, Movie, Sport) or customize settings like brightness, contrast, color, and sharpness. The TV features Chameleon Extreme 2.0 for enhanced picture quality and HDR10 support.
- **Sound Modes:** Choose audio presets (e.g., Standard, Music, Movie, Speech) or adjust bass and treble. The TV supports Dolby Audio for an immersive sound experience.
- **Eye Care Features:** Utilize Low Blue Light and Flicker Free technologies for reduced eye strain during extended viewing.

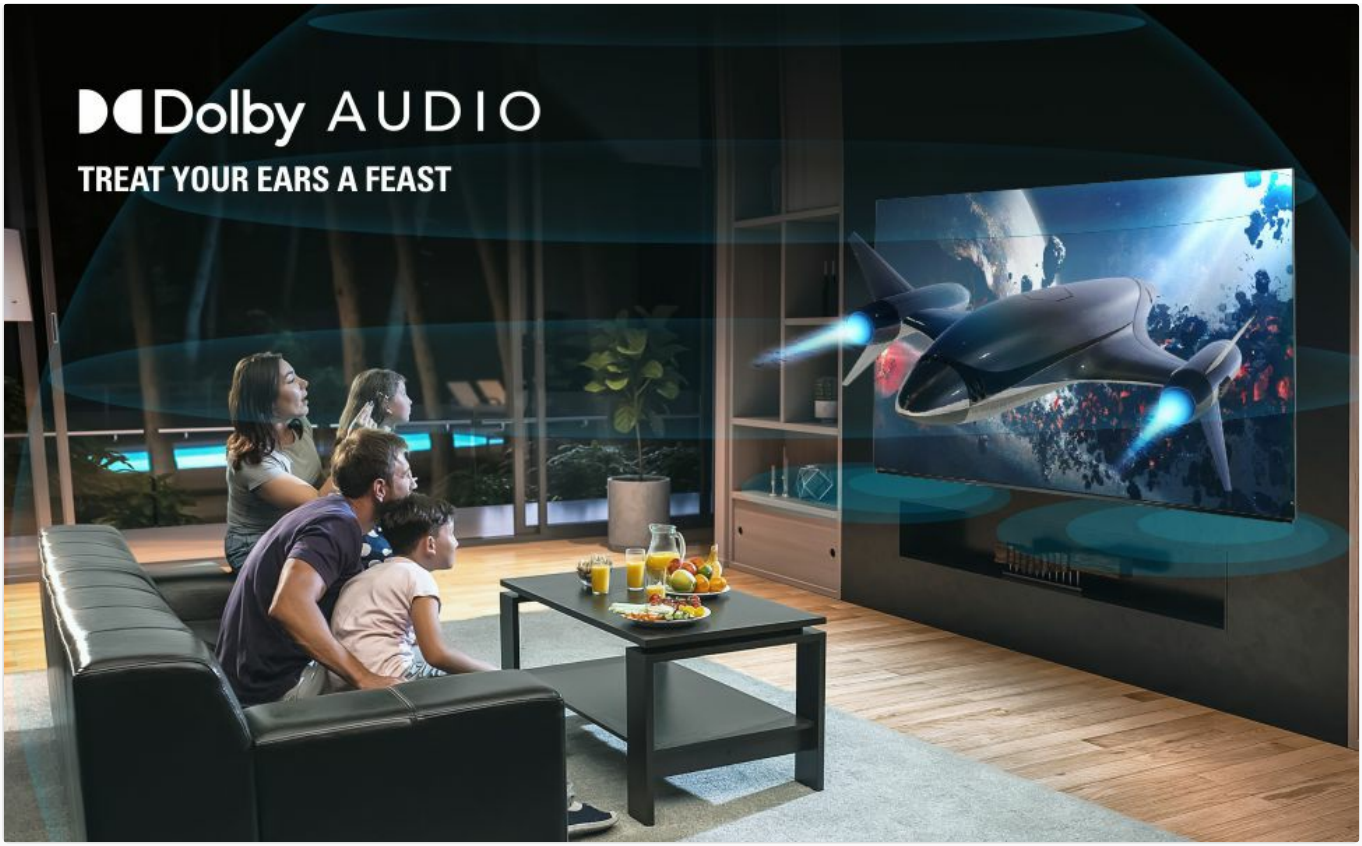

A family watching the Metz TV, experiencing enhanced audio quality provided by Dolby Audio, creating an immersive sound experience.

5. Maintenance

5.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Never spray cleaner directly onto the screen.
- Avoid using harsh chemicals, abrasive pads, or solvents as they can damage the TV's surface.

5.2 General Care

- Ensure adequate ventilation around the TV to prevent overheating.
- Keep the TV away from direct sunlight, heat sources, and excessive dust.
- Do not place heavy objects on top of the TV.

6. Troubleshooting

Before contacting support, try the following solutions for common issues:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into both the TV and the electrical outlet. Ensure the outlet is functional.

Problem	Possible Solution
No picture, but sound is present	Verify the correct input source is selected. Check cable connections (HDMI, etc.).
No sound, but picture is present	Check the volume level and mute status. Ensure external audio devices are correctly connected and configured.
Remote control not working	Replace the batteries (2 AAA batteries required). Ensure there are no obstructions between the remote and the TV.
Wi-Fi connection issues	Restart your router and the TV. Re-enter the Wi-Fi password in the TV's network settings. Ensure the TV is within range of the router.
Apps not loading or freezing	Close and reopen the app. Clear the app's cache in TV settings. Ensure the TV's software is up to date.

7. Specifications

Feature	Detail
Brand	Metz
Model	50MUE7600
Model Year	2022
Screen Size	50 Inches (126 cm)
Display Technology	IPS LED
Resolution	3840 x 2160 pixels (4K Ultra HD)
Refresh Rate	60 Hz
Operating System	Android (Google TV)
Memory Storage Capacity	16 GB
RAM Memory Installed Size	1 GB
Audio Output Power	30 Watts
Audio Features	Dolby Audio, Surround Sound
Connectivity	HDMI, USB, Wi-Fi
Total USB Ports	2

Feature	Detail
Product Dimensions (LxWxH)	110 x 9.2 x 64.9 cm
Item Weight	8.4 kg
Power Source	Corded Electric (220V AC)
Special Features	Flat Screen, Chameleon Extreme 2.0, HDR10, Low Blue Light, Boundless Screen, Eye Care TV, Flicker Free, Skin Tone Enhancer Technology
Mounting Type	Table Mount (VESA compatible for wall mount, mounting hardware not included)

8. Warranty Information

The Metz 50MUE7600 TV comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please refer to the included Warranty Card for detailed terms and conditions, exclusions, and claim procedures.

Retain your proof of purchase for warranty claims.

9. Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Metz customer support.

- **Online Support:** Visit the official Metz website for FAQs and support resources.
- **Contact Information:** Refer to the contact details provided on your Warranty Card or the Metz official website.

© 2024 Metz. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BSV8SLTV

More documents and user manuals: **https://manuals.plus/**