Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BT3421

Braun Series 3 BT3421 Beard Trimmer

User Manual

1. Introduction

This manual provides essential information for the safe and effective use of your Braun Series 3 BT3421 Beard Trimmer. Please read these instructions carefully before using the device for the first time and keep them for future reference. The Braun Series 3 BT3421 is designed for precise beard trimming and styling, offering ultra-sharp blades and a wide range of length settings for a customized grooming experience.

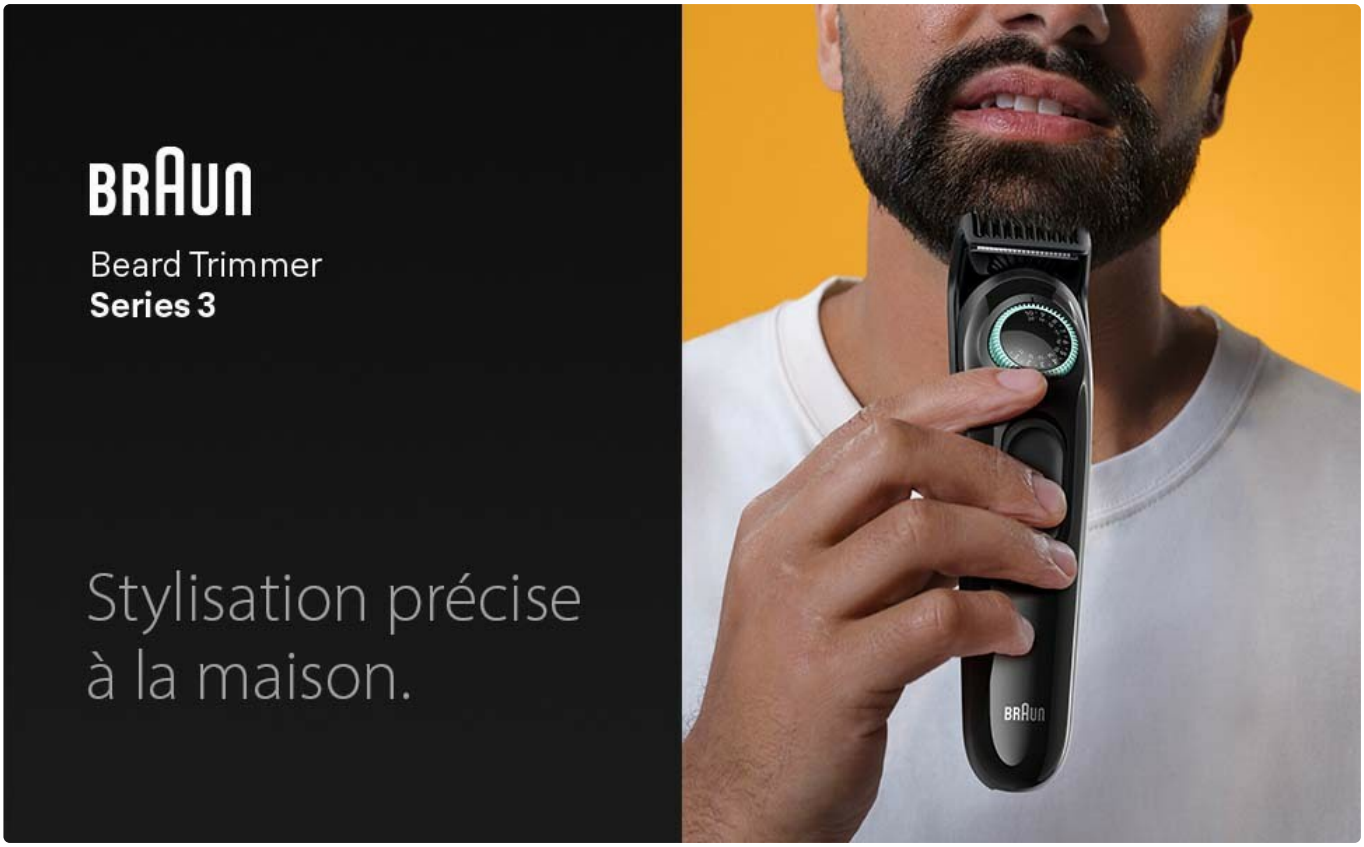


Image 1: A man using the Braun Series 3 beard trimmer to style his beard, demonstrating the product's application for precise at-home grooming.

2. Package Contents

Ensure all items are present in the package:

- 1 Braun Series 3 BT3421 Beard Trimmer with plastic trimmer attachment
- 1 Mini Precision Shaving Head
- 1 Precision Comb (0.5–10 mm)
- 1 Precision Comb (10.5–20 mm)
- 1 Cleaning Brush

3. Safety Information

WARNING: To reduce the risk of electric shock, injury, or fire, please observe the following safety precautions:

- Avoid using the device near water or in wet conditions.
- Do not use the device on wet skin.
- Exercise extreme caution when using the device near your eyes.
- Always ensure the device is properly charged before each use.
- Do not use the device on the scalp or head for prolonged periods to prevent overheating and potential burns.
- Keep the device out of reach of children.
- Do not use the device if it is damaged or malfunctioning.
- Only use attachments provided or recommended by the manufacturer.

4. Setup

4.1 Charging the Device

1. Before first use, fully charge the trimmer. Connect the charging cord to the trimmer and plug it into a suitable power outlet.
2. The charging indicator light will show the charging status. Refer to the specific indicator behavior in your quick start guide for details.
3. A full charge provides approximately 50 minutes of cordless trimming time.

4.2 Attaching Combs and Heads

1. Ensure the trimmer is switched off before attaching or detaching any accessories.
2. To attach a precision comb, align the comb with the trimmer head and push it down until it clicks into place.
3. To attach the mini precision shaving head, remove any comb, then align the shaving head and press it onto the trimmer body until it secures.
4. To remove, gently pull the attachment upwards.



Image 2: The two primary attachments for the Braun Series 3 beard trimmer: a precision comb for length control and a mini precision shaving head for detailed styling and clean edges.

5. Operating Instructions

5.1 Preparing for Trimming

- Ensure your skin is dry and intact before trimming.
- Select the appropriate precision comb or trimming head for the desired area.

5.2 Selecting Length Settings

1. With a precision comb attached, use the precision dial to select your desired trimming length.
2. The trimmer offers 40 length settings in precise 0.5 mm intervals.

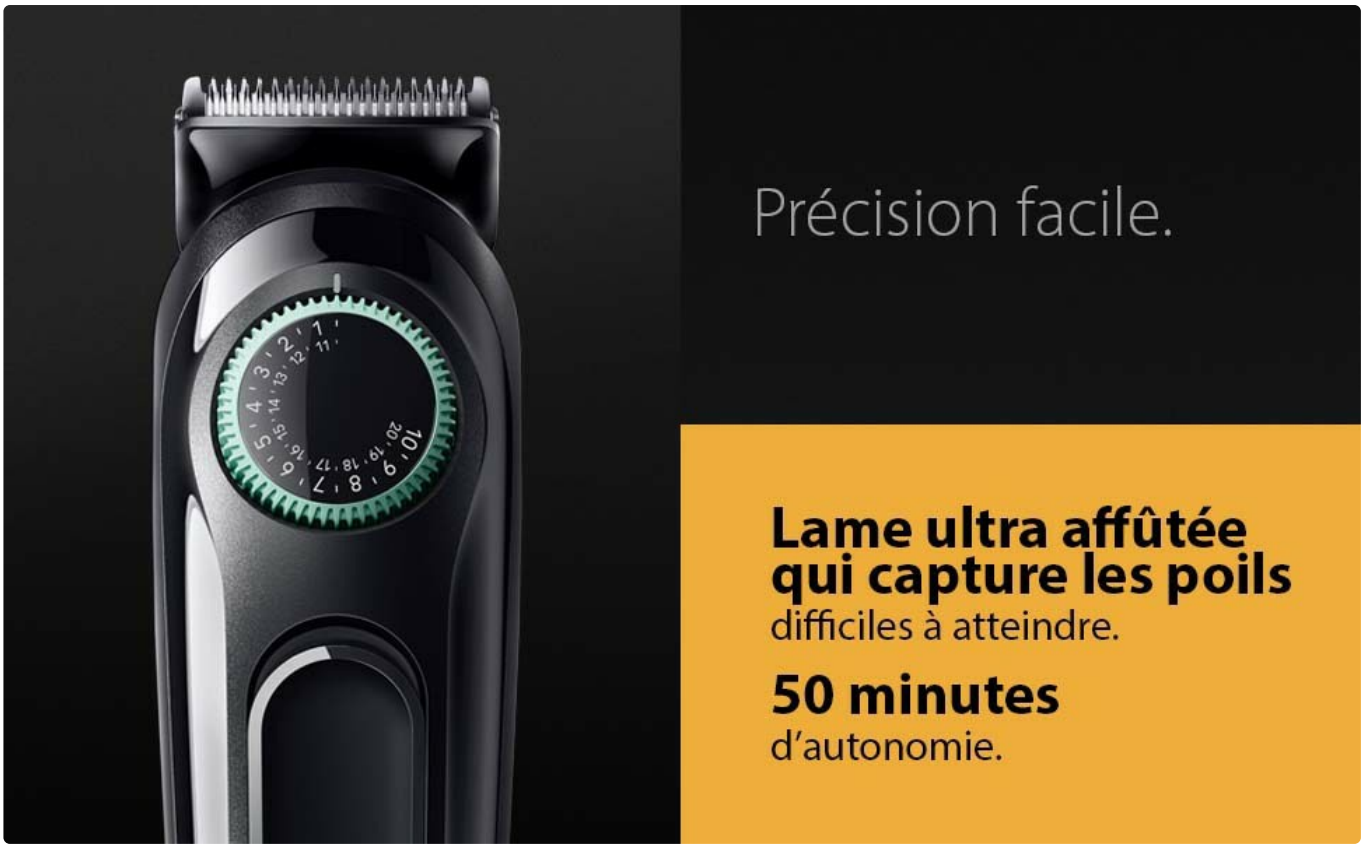


Image 3: A detailed view of the Braun Series 3 beard trimmer's precision dial, illustrating the various length settings available for customized trimming.

5.3 Trimming Technique

1. Switch on the device.
2. Gently and carefully move the trimmer against the direction of hair growth.
3. For best results, maintain even pressure and a consistent speed.
4. Use the mini precision shaving head for defining edges and achieving a clean finish.

6. Maintenance

6.1 Cleaning After Use

1. After each use, switch off the trimmer and disconnect it from the power source if charging.
2. Remove the trimming head and comb.
3. Use the provided cleaning brush to remove hair clippings from the trimmer head and blades.
4. The trimmer head and combs can be rinsed under running water. Ensure they are completely dry before reattaching.
5. Do not immerse the main body of the trimmer in water.

6.2 Storage

Store the trimmer and its accessories in a dry, safe place, away from direct sunlight and extreme temperatures.

7. Troubleshooting

- **Device not turning on:** Ensure the device is fully charged. Check if the power button is pressed firmly.
- **Poor trimming performance:** Clean the blades and trimming head thoroughly to remove any hair buildup.

Ensure the battery is sufficiently charged. Check if the correct comb is properly attached.

- **Device overheating:** Discontinue use immediately. Allow the device to cool down completely before attempting to use it again. Ensure proper ventilation during use.
- **Unusual noise:** Switch off the device and clean the blades. If the noise persists, contact customer support.

8. Specifications

Feature	Specification
Product Name	Styler
Model Number	BT3421 (447917)
Brand	Braun
Power Source	Battery Powered (Rechargeable)
Battery Type	1 x 12V (included)
Operating Time	Approx. 50 minutes (cordless)
Blade Material	Stainless Steel
Body Material	Plastic
Length Settings	40 precision settings
Precision Steps	0.5 mm
Dimensions (L x W x H)	13.7 x 5.7 x 28.2 cm
Item Weight	222 Grams
Color	Black/Vivid Green
Country of Origin	China

9. Warranty and Support

For warranty information, technical assistance, or to purchase replacement parts, please refer to the warranty card included with your product or visit the official Braun website. Do not attempt to repair the device yourself, as this may void your warranty.

© 2024 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BT5245HN

More documents and user manuals: **https://manuals.plus/**