Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun MGK7470

Braun Series 7 MGK7470 All-in-One Grooming Kit User Manual

Model: MGK7470

1. Introduction

This manual provides instructions for the safe and effective use of your Braun Series 7 MGK7470 All-in-One Grooming Kit. Please read all instructions carefully before use and retain for future reference.

1.1 Product Overview

The Braun Series 7 MGK7470 is a versatile 16-in-1 grooming kit designed for comprehensive head-to-toe styling. It features an ultra-sharp metal blade, AutoSense technology for consistent performance, and a 100% waterproof design for wet and dry use.



Image: The Braun Series 7 MGK7470 grooming kit, showcasing the main trimmer unit, various comb attachments, detail trimmer, body groomer, nose/ear trimmer, and a Gillette ProGlide razor.

1.2 Safety Information

- Avoid direct contact with eyes, skin, and water, except as specified for wet use.
- Follow all cleaning and maintenance instructions.
- Do not use the appliance on infants or young children.
- Ensure the appliance is completely dry before use or charging.
- This appliance is equipped with a special cord set with an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise, there is a risk of electric shock.
- Never use the appliance with a damaged accessory, such as a broken comb or blade.
- Do not open the appliance.

2. Package Contents

Verify that all items listed below are included in your package:

- 1x Trimmer Unit
- 1x Metal Trimmer Attachment
- 1x Body Groomer Attachment
- 1x Detail Trimmer Head
- 1x Nose and Ear Trimmer
- 1x Sliding Beard Comb (3-11 mm)
- 1x Sliding Hair Comb (13-21 mm)
- 1x Fixed Comb (1 mm)
- 1x Fixed Comb (2 mm)
- 1x Beard Comb
- 1x Hair Comb
- 1x Sensitive Comb
- 1x Eyebrow Comb
- 1x Gillette ProGlide Razor
- 1x Gillette ProGlide Replacement Blade
- 1x Cleaning Brush
- 1x Charging Stand
- 1x Storage Pouch

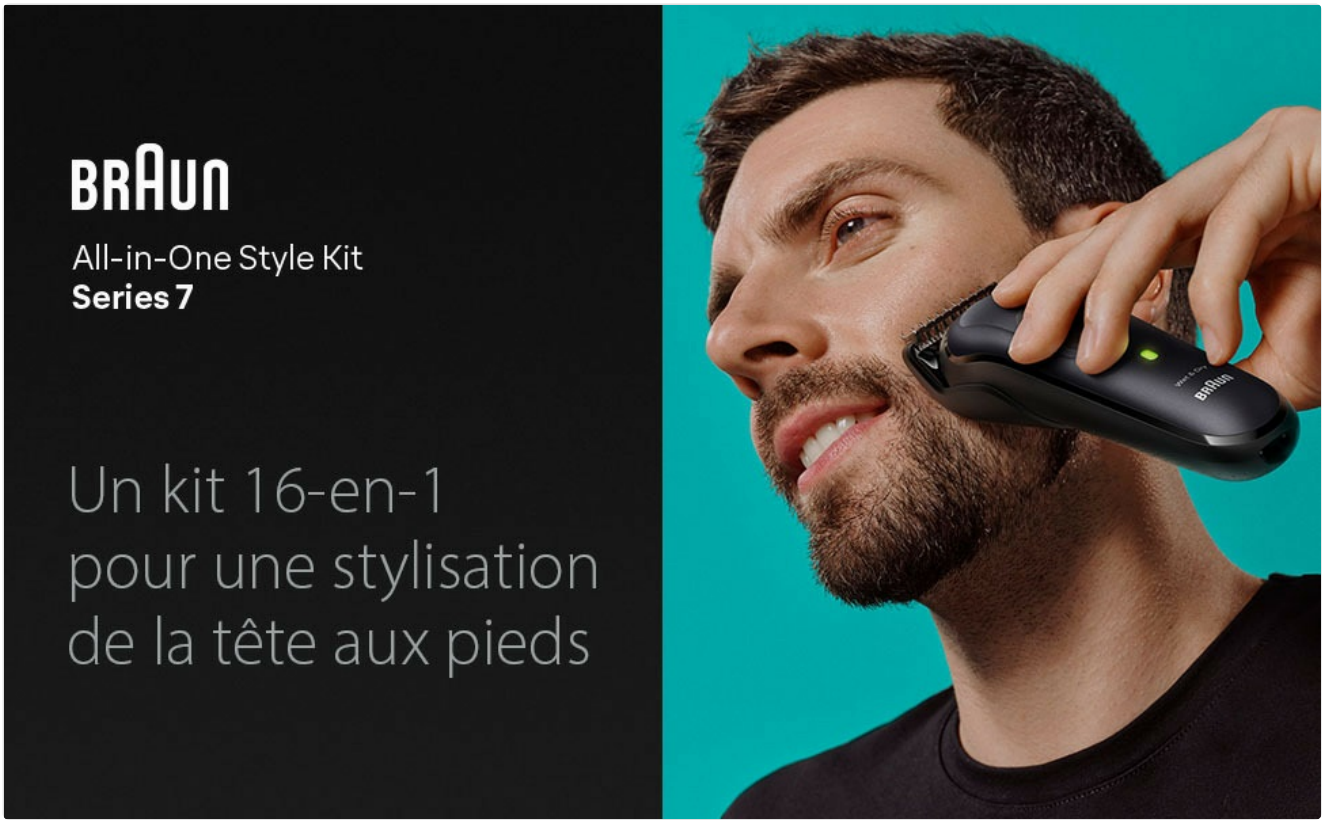

Image: All components of the Braun Series 7 MGK7470 kit, including the trimmer, various combs, attachments, razor, charging stand, and storage pouch.

3. Setup

3.1 Charging the Appliance

1. Connect the special cord set to the trimmer and plug it into an electrical outlet.
2. The charging indicator light will illuminate. A full charge takes approximately 1 hour and provides up to 100 minutes of cordless operation.
3. For first use, charge the appliance fully.

3.2 Attaching and Detaching Trimmer Heads and Combs

1. To attach a trimmer head (e.g., metal trimmer, body groomer, detail trimmer, nose/ear trimmer), align it with the main unit and press until it clicks into place.
2. To detach, pull the head upwards away from the main unit.
3. To attach a comb, slide it onto the desired trimmer head until it locks.
4. To detach a comb, gently pull it off the trimmer head.

4. Operating Instructions

The Braun Series 7 MGK7470 is 100% waterproof and can be used for wet or dry grooming.

4.1 General Usage

1. Ensure the appliance is charged.
2. Select the appropriate trimmer head and comb attachment for your desired grooming task.
3. Press the power button to turn on the appliance.
4. Guide the trimmer against the direction of hair growth for optimal results.
5. Press the power button again to turn off the appliance.

4.2 Beard Trimming

Use the metal trimmer attachment with the sliding beard comb (3-11 mm) or fixed combs (1 mm, 2 mm) for various beard lengths.

- For shorter beards, use the 1 mm or 2 mm fixed combs.
- For longer beards, use the 3-11 mm sliding comb. Adjust the comb to your desired length setting.
- Trim against the direction of hair growth, ensuring even coverage.

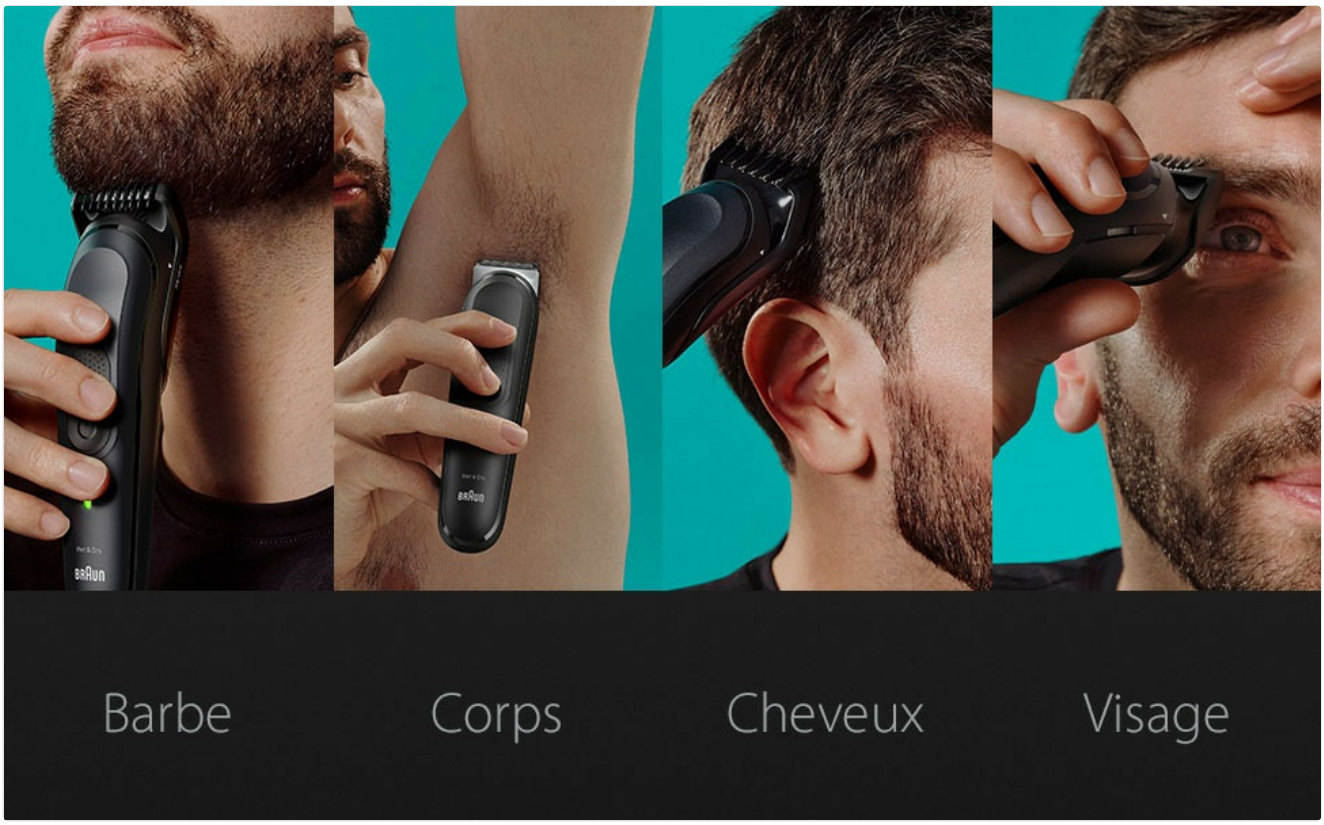

Image: A man using the Braun Series 7 MGK7470 to trim his beard, demonstrating precise control.

4.3 Hair Clipping

Use the metal trimmer attachment with the sliding hair comb (13-21 mm) for hair clipping.

- Select the desired hair length using the sliding comb.
- Move the trimmer slowly against the direction of hair growth.
- For detailing, remove the comb and use the metal trimmer directly.

4.4 Body Grooming

Attach the body groomer head for body hair trimming. The sensitive comb can be used for delicate areas.

- Use the body groomer attachment for larger areas.
- For sensitive areas, attach the sensitive comb to the body groomer head.
- Trim carefully, stretching the skin if necessary.

4.5 Nose and Ear Trimming

Attach the nose and ear trimmer head.

- Gently insert the trimmer into the nostril or ear canal.
- Move it in a circular motion to trim unwanted hair.

4.6 Detail Trimming and Edging

Use the detail trimmer head for precise lines and edges, or for intricate styling.

- Attach the detail trimmer head.
- Use short, controlled strokes to define beard lines, sideburns, or other facial hair.

4.7 Gillette ProGlide Razor

The included Gillette ProGlide razor can be used for a clean shave on the neck, cheeks, or other areas after trimming.

- Apply shaving gel or foam to the desired area.
- Shave with light, even strokes.
- Rinse the blade frequently during use.

5. Maintenance

5.1 Cleaning

The appliance is 100% waterproof and can be rinsed under running water.

1. Turn off the appliance and detach the trimmer head and comb.
2. Rinse the trimmer head and combs under warm running water.
3. Use the cleaning brush to remove any stubborn hair from the blades and combs.
4. For thorough cleaning, you can apply a drop of light machine oil to the blades periodically.
5. Allow all parts to air dry completely before reassembling or storing.

5.2 Storage

Store the appliance and its accessories in the provided storage pouch or on the charging stand when not in use.

- Ensure the appliance is dry before storing.
- Keep out of reach of children.

6. Troubleshooting

Appliance does not turn on or operate.

- Ensure the battery is charged. Connect to the charger and allow it to charge for at least 1 hour.
- Check if the power button is pressed firmly.
- If the appliance is new, ensure it has been charged for the recommended initial period.

Trimmer pulls hair or cuts unevenly.

- The blades may be dull or clogged. Clean the trimmer head and blades thoroughly.
- Ensure the comb attachment is securely fitted.
- Trim against the direction of hair growth.
- The battery might be low. Charge the appliance.

Charging indicator light does not illuminate.

- Check if the power cord is securely connected to both the appliance and the electrical outlet.
- Ensure the outlet is functional.
- The cord set or appliance may be damaged. Do not use and contact customer service.

7. Specifications

Feature	Specification
Model	MGK7470
Power Source	Rechargeable Lithium-ion Battery
Runtime	Up to 100 minutes (cordless)
Charging Time	Approximately 1 hour
Waterproof	Yes (100% waterproof)
Blade Material	Ultra-sharp Metal
Weight	790 grams
Country of Origin	China

8. Warranty and Support

This Braun appliance comes with a 5-year warranty. For detailed terms and conditions, please refer to the official Braun website.

For product support, troubleshooting assistance, or to inquire about replacement parts, please visit the official Braun support website or contact their customer service.

Website: www.braun.com

Customer Service: Refer to your regional Braun contact information.

© 2024 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BT52DBCL

More documents and user manuals: **https://manuals.plus/**