Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Funsicle Sea Thru Quickset Round Inflatable Pool Set

Funsicle Sea Thru Quickset Round Inflatable Pool Set

Instruction Manual

Important Safety Information

Read and understand all instructions before installing and using this product. Failure to follow these instructions can result in serious injury or death. This manual contains important information about the installation, operation, and maintenance of the Funsicle Sea Thru Quickset Round Inflatable Pool Set.

- **Adult Supervision Required:** Always supervise children and individuals with disabilities in and around the pool. Never leave children unattended.
- **Water Safety:** The pool depth is 30 inches. Do not dive or jump into the pool. Serious injury can result.
- **Electrical Safety:** Ensure the filter pump is connected to a grounded outlet protected by a Ground Fault Circuit Interrupter (GFCI). Do not use extension cords. Keep all electrical components away from water.
- **Site Selection:** Install the pool on a firm, level surface, free of sharp objects. Do not install on slopes or uneven ground.
- **Chemicals:** Use pool chemicals according to manufacturer instructions. Keep chemicals out of reach of children.
- **Emergency Preparedness:** Keep emergency contact information readily available.

Setup Instructions

Proper setup is crucial for the stability and longevity of your pool. Follow these steps carefully.

1. Site Preparation

- Choose a flat, level area in your backyard. The area must be free of rocks, roots, or any sharp objects that could puncture the pool liner.
- Ensure the chosen site is clear of overhead power lines and at least 10 feet away from any electrical outlets.
- Consider drainage. The area should allow for proper water runoff away from your home or other structures.

2. Unpacking and Laying Out the Pool

- Carefully remove the pool from its packaging. Avoid using sharp tools that could damage the liner.
- Spread the pool liner out on the prepared ground, ensuring the bottom is flat and wrinkle-free.

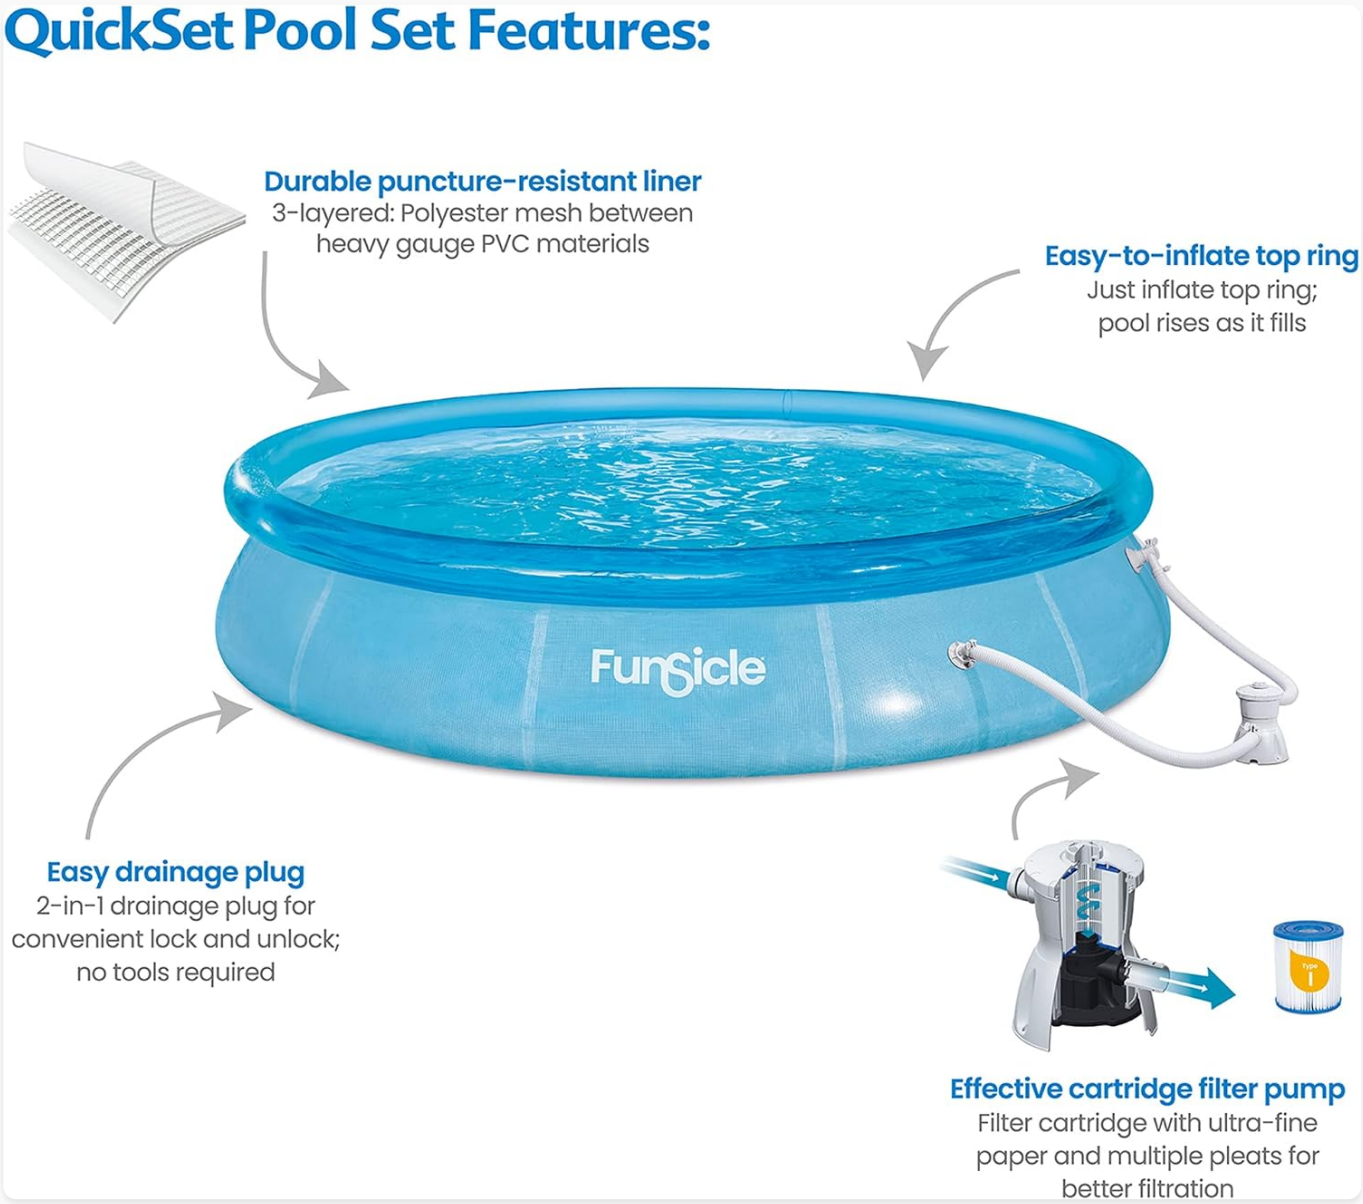

Figure 1: Overview of the Funsicle Quickset Pool Set features, highlighting the durable 3-ply ToughMesh liner, the easy-to-inflate top ring, the convenient drainage plug, and the included cartridge filter pump.

3. Inflating the Top Ring

- Locate the air valve on the top inflatable ring of the pool.
- Using an air pump (not included), inflate the top ring until it is firm to the touch but not over-inflated. Do not use a high-pressure air compressor.

4. Filling the Pool with Water

- Begin filling the pool with water. As the water level rises, the inflatable top ring will float, and the pool walls will rise.
- Smooth out any wrinkles in the bottom of the pool as it fills.
- Continue filling until the water reaches the fill line indicated on the pool wall, or just below the inflatable ring. Do not overfill.



Figure 2: The Funsicle pool filled to its operational height of 30 inches.

5. Connecting the Filter Pump

- Refer to the separate filter pump manual for detailed connection instructions.
- Connect the hoses from the pool's inlet and outlet fittings to the filter pump. Ensure all connections are secure to prevent leaks.
- Place the filter pump on a stable, level surface at least 6 feet away from the pool.
- Plug the filter pump into a GFCI-protected electrical outlet.



Figure 3: The RX330 Filter Pump and a Type I filter cartridge, essential components for water circulation and filtration.

Operating Instructions

To ensure clean and safe water, operate the filter pump daily and maintain proper water chemistry.

1. Filter Pump Operation

- Operate the filter pump for a minimum of 4-6 hours per day to circulate and filter the pool water.
- Consult the filter pump manual for specific operating instructions and safety precautions.

2. Water Treatment

- Regularly test your pool water using a pool test kit (not included) to check pH and sanitizer levels.
- Maintain pH levels between 7.4 and 7.6.
- Add appropriate pool chemicals (e.g., chlorine) as needed, following the chemical manufacturer's instructions.

Maintenance

Regular maintenance will extend the life of your pool and ensure a clean swimming environment.

1. Filter Cartridge Cleaning and Replacement

- Turn off and unplug the filter pump before performing any maintenance.

- Open the filter pump housing and remove the Type I filter cartridge.
- Rinse the cartridge thoroughly with a garden hose to remove debris.
- Replace the filter cartridge every 2 weeks, or more frequently if the water flow is reduced or the cartridge remains dirty after cleaning.

2. Pool Cleaning

- Skim debris from the water surface daily using a pool skimmer net.
- Brush the pool walls and bottom regularly to prevent algae growth.
- Vacuum the pool bottom as needed to remove settled debris.

3. Draining the Pool

- Locate the drainage plug on the side of the pool.
- Attach a garden hose to the drainage plug (if applicable) to direct water away from the pool area.
- Open the plug to allow the water to drain.



Figure 4: The 2-in-1 drainage plug allows for convenient and tool-free water removal.

4. Winterization and Storage

- Completely drain the pool and clean all surfaces.
- Allow the pool liner to dry thoroughly to prevent mold and mildew.
- Deflate the top ring and fold the pool carefully.
- Store the pool and all accessories in a dry, cool place, protected from rodents and extreme temperatures.

Troubleshooting

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Top ring loses air	Puncture or loose valve cap	Check valve cap for tightness. Inspect the ring for punctures and repair with a vinyl repair kit (not included).
Filter pump not working	Not plugged in, GFCI tripped, clogged filter, motor issue	Ensure pump is plugged into a working GFCI outlet. Reset GFCI if tripped. Clean or replace filter cartridge. Refer to pump manual for motor troubleshooting.
Water not clear	Insufficient filtration, improper chemical balance, heavy use	Increase pump operating time. Clean or replace filter cartridge. Test and adjust water chemistry (pH, sanitizer). Shock treat the pool if necessary.

Problem	Possible Cause	Solution
Pool walls buckling during filling	Uneven ground, insufficient top ring inflation	Ensure pool is on a perfectly level surface before filling. Inflate the top ring firmly. Stop filling, adjust, and restart if buckling occurs.

Specifications

- **Model:** Sea Thru Quickset Round Inflatable Pool Set
- **Dimensions (L x W x H):** 144 inches x 144 inches x 30 inches (12 ft diameter x 30 in height)
- **Water Capacity:** Approximately 7260 Gallons
- **Material:** 3-ply ToughMesh (Polyvinyl Chloride (PVC) and Polyester Mesh)
- **Shape:** Round
- **Included Components:** RX330 Filter Pump with GFCI, Type I Filter Cartridge
- **Recommended Age:** 6 years and older

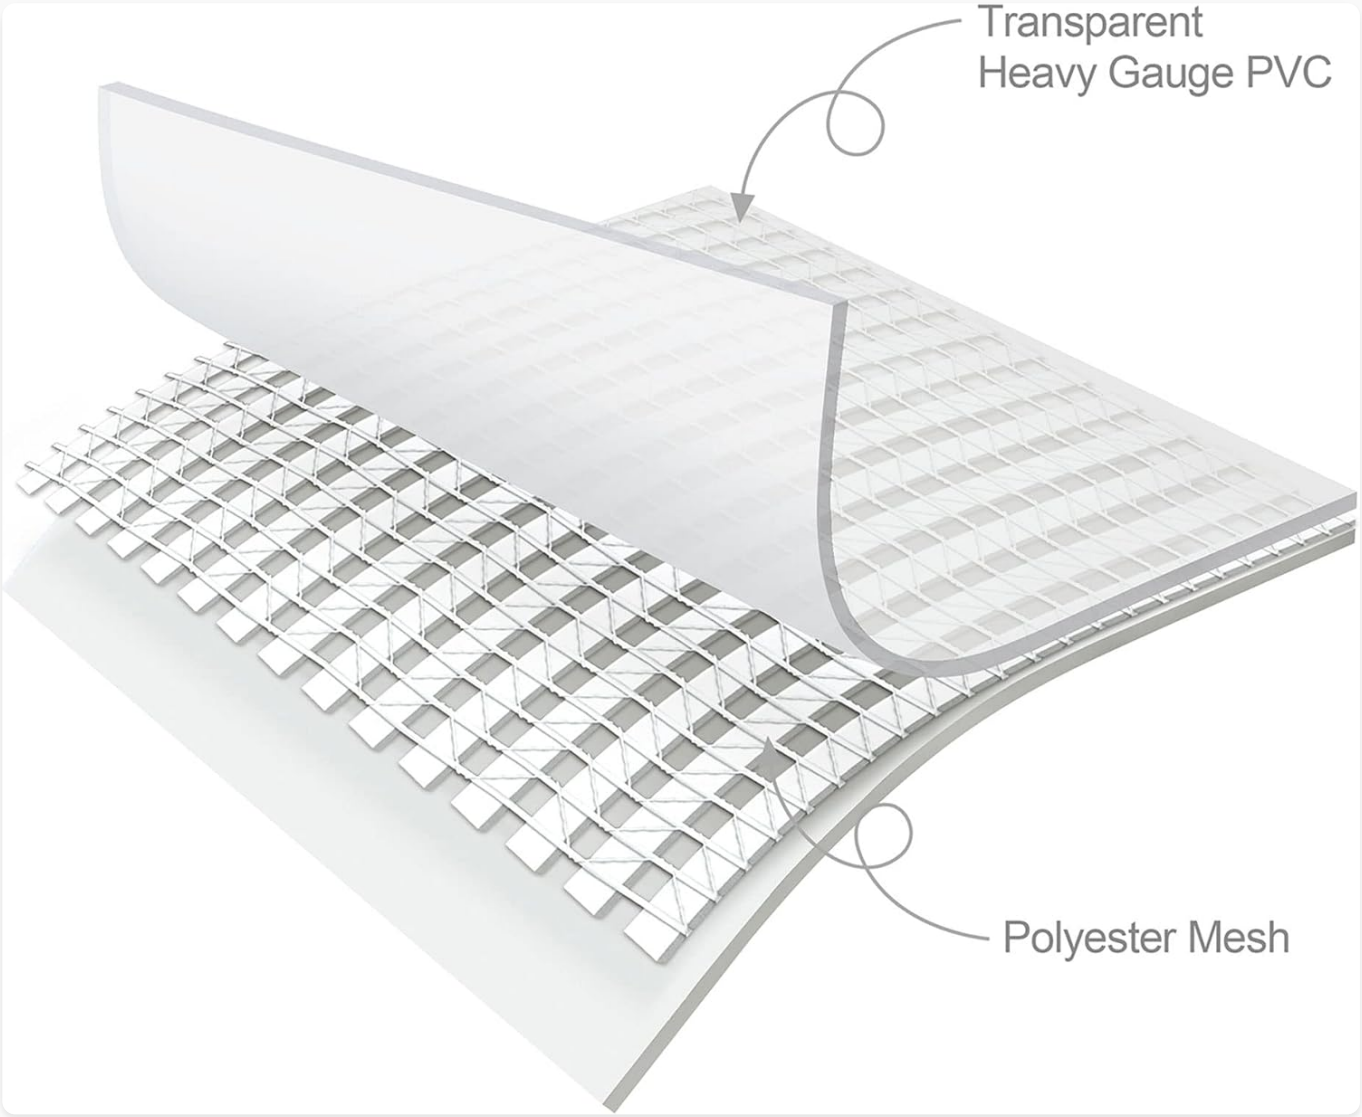

Figure 5: Detailed view of the 3-ply ToughMesh material, consisting of transparent heavy gauge PVC and polyester mesh for enhanced durability.

Warranty Information

This Funsicle pool set comes with a manufacturer's warranty.

- **Pool and Pump:** 1-year limited warranty from the date of purchase.
- This warranty covers manufacturing defects. It does not cover damage due to misuse, improper installation, neglect, or normal wear and tear.
- Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, parts, or warranty claims, please contact Funsicle customer support.

- Refer to the contact information provided in your product packaging or visit the official Funsicle website for the most current support details.
- When contacting support, please have your model number and proof of purchase readily available.

© 2024 Funsicle. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BVN1GVNZ

More documents and user manuals: **https://manuals.plus/**