Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ENDORFY EY5A073

ENDORFY Thock 75% Wireless Keyboard User Manual

Model: EY5A073

Introduction

This manual provides comprehensive instructions for the ENDORFY Thock 75% Wireless Keyboard (Model: EY5A073). It covers setup, operation, features, maintenance, troubleshooting, and technical specifications to ensure optimal use of your new mechanical keyboard.



The ENDORFY Thock 75% Wireless Keyboard, featuring Kailh Box Red switches and vibrant RGB backlighting.

Setup

1. Unboxing and Initial Inspection

Carefully remove the keyboard and all accessories from the packaging. Ensure all components are present and undamaged.

- ENDORFY Thock 75% Wireless Keyboard

- USB-C to USB-A Cable
- 2.4 GHz Wireless Dongle (stored in the keyboard)
- Keycap/Switch Puller Tool



The product packaging for the ENDORFY Thock 75% Wireless Keyboard, indicating Kailh Box Red switches and 2 years warranty.

2. Charging the Keyboard

Before first use, it is recommended to fully charge the keyboard. Connect the provided USB-C cable to the keyboard's USB-C port and the other end to a powered USB-A port on your computer or a wall adapter.
The keyboard's indicator light will show charging status and turn off when fully charged.

3. Connecting the Keyboard

The Thock 75% Wireless Keyboard offers multiple connection options:

- **2.4 GHz Wireless:** Locate the 2.4 GHz wireless dongle, typically stored in a dedicated slot on the keyboard. Plug the dongle into an available USB-A port on your computer. Switch the keyboard's connectivity mode to 2.4 GHz.
- **Bluetooth:** Switch the keyboard's connectivity mode to Bluetooth. On your device (computer, tablet, smartphone), search for Bluetooth devices and select "ENDORFY Thock 75%" to pair. The keyboard supports connection to up to three Bluetooth devices.
- **Wired (USB-C):** Connect the keyboard directly to your computer using the provided USB-C to USB-A cable. This connection also charges the keyboard.



The keyboard offers versatile connectivity options including 2.4 GHz wireless (with a dedicated dongle storage), Bluetooth, and wired USB-C connection.

Operating the Keyboard

1. Basic Functions

The Thock 75% keyboard features a compact layout while retaining essential keys. Standard alphanumeric and modifier keys function as expected.

2. Media Control and Volume Knob

The dedicated volume knob located on the top right of the keyboard allows for easy audio control. Rotate to adjust volume, and press down to mute/unmute.



Close-up of the multi-functional volume knob, allowing for quick and convenient sound adjustments and muting.

3. Backlight Customization (ARGB)

The keyboard features ARGB backlighting, allowing for extensive customization of lighting effects and colors. Use the dedicated software for advanced control, or utilize onboard shortcuts for basic adjustments.

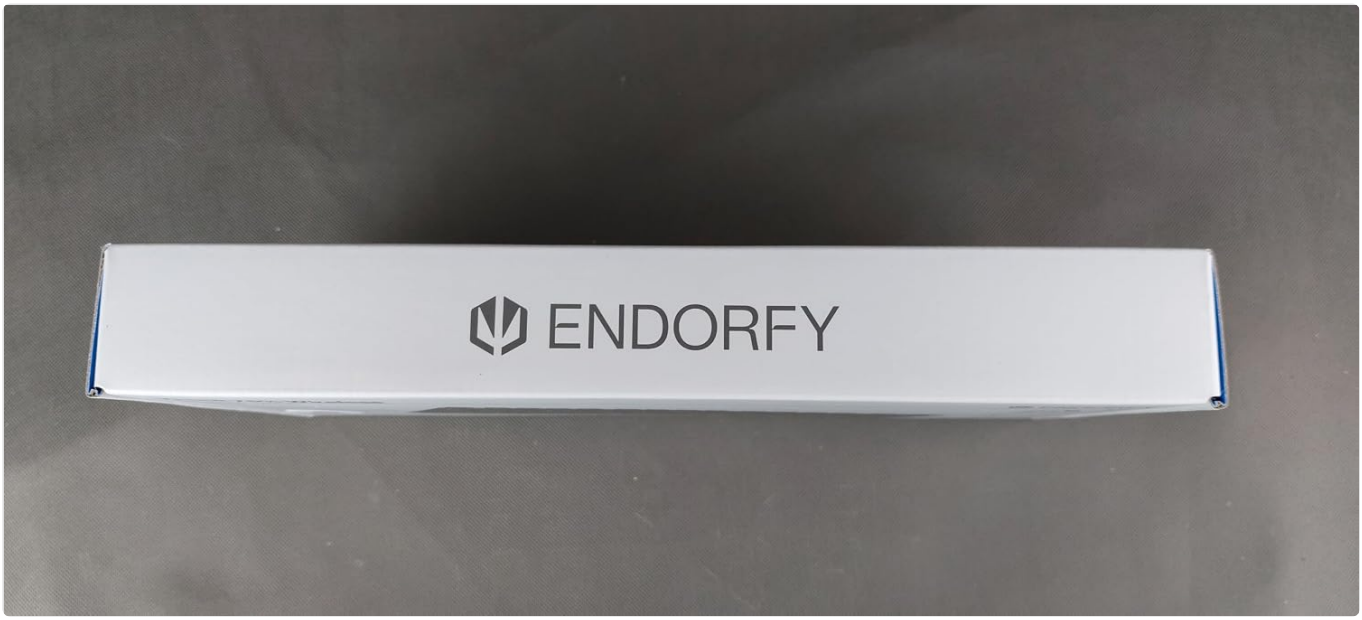

The keyboard illuminated with ARGB backlighting, showcasing customizable lighting effects.

4. Software Customization

For full control over key bindings, macros, and advanced lighting effects, download and install the official ENDORFY software from the product support page. This software allows you to personalize your keyboard experience to your preferences.

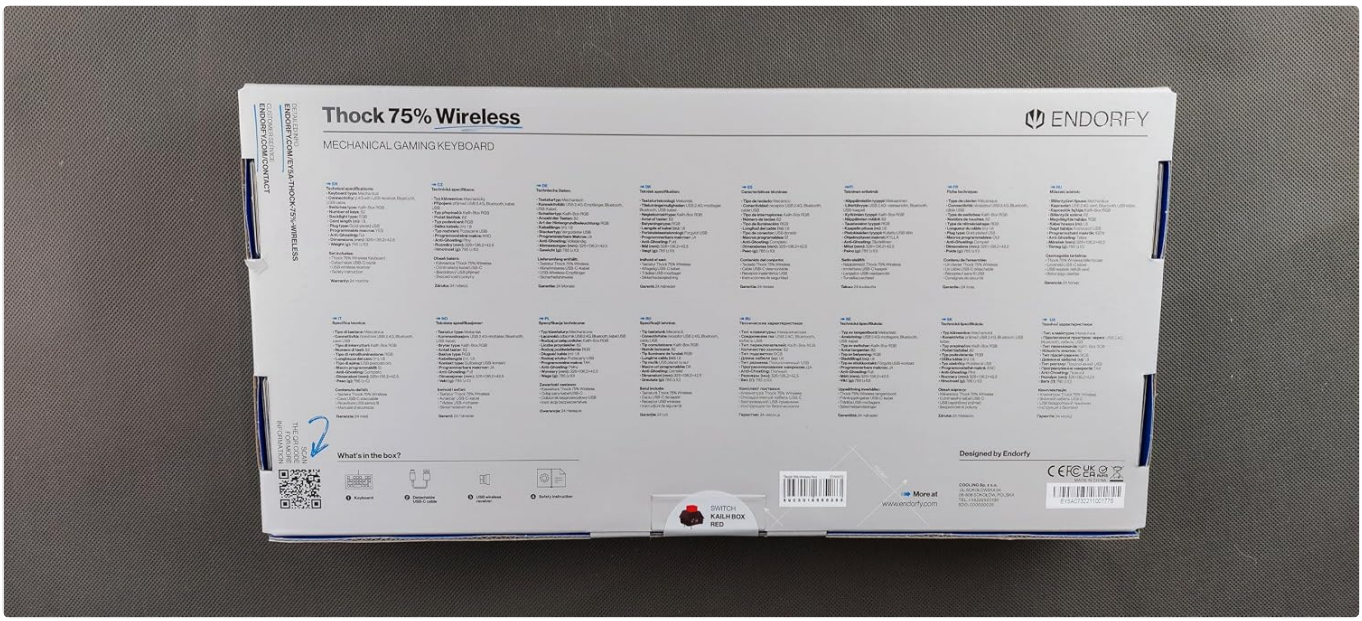

A computer screen displaying the ENDORFY software interface, used for customizing keyboard settings, lighting, and key bindings.

Key Features

- **75% Compact Layout:** Optimized for space-saving without sacrificing essential functionality, ideal for various desk sizes.



The compact 75% layout of the keyboard, designed to fit comfortably on any desk while providing ample space for mouse movement.

- **Kailh Box Red Switches:** Equipped with durable Kailh Box Red linear mechanical switches, rated for 70 million clicks, providing a smooth and responsive typing experience.



Two Kailh Box Red switches, known for their linear feel and high durability, ideal for fast-paced gaming and typing.

- **Hot-Swappable PCB:** Easily change out switches with the included tool. The PCB supports both 3-pin and 5-pin mechanical switches, allowing for extensive customization.

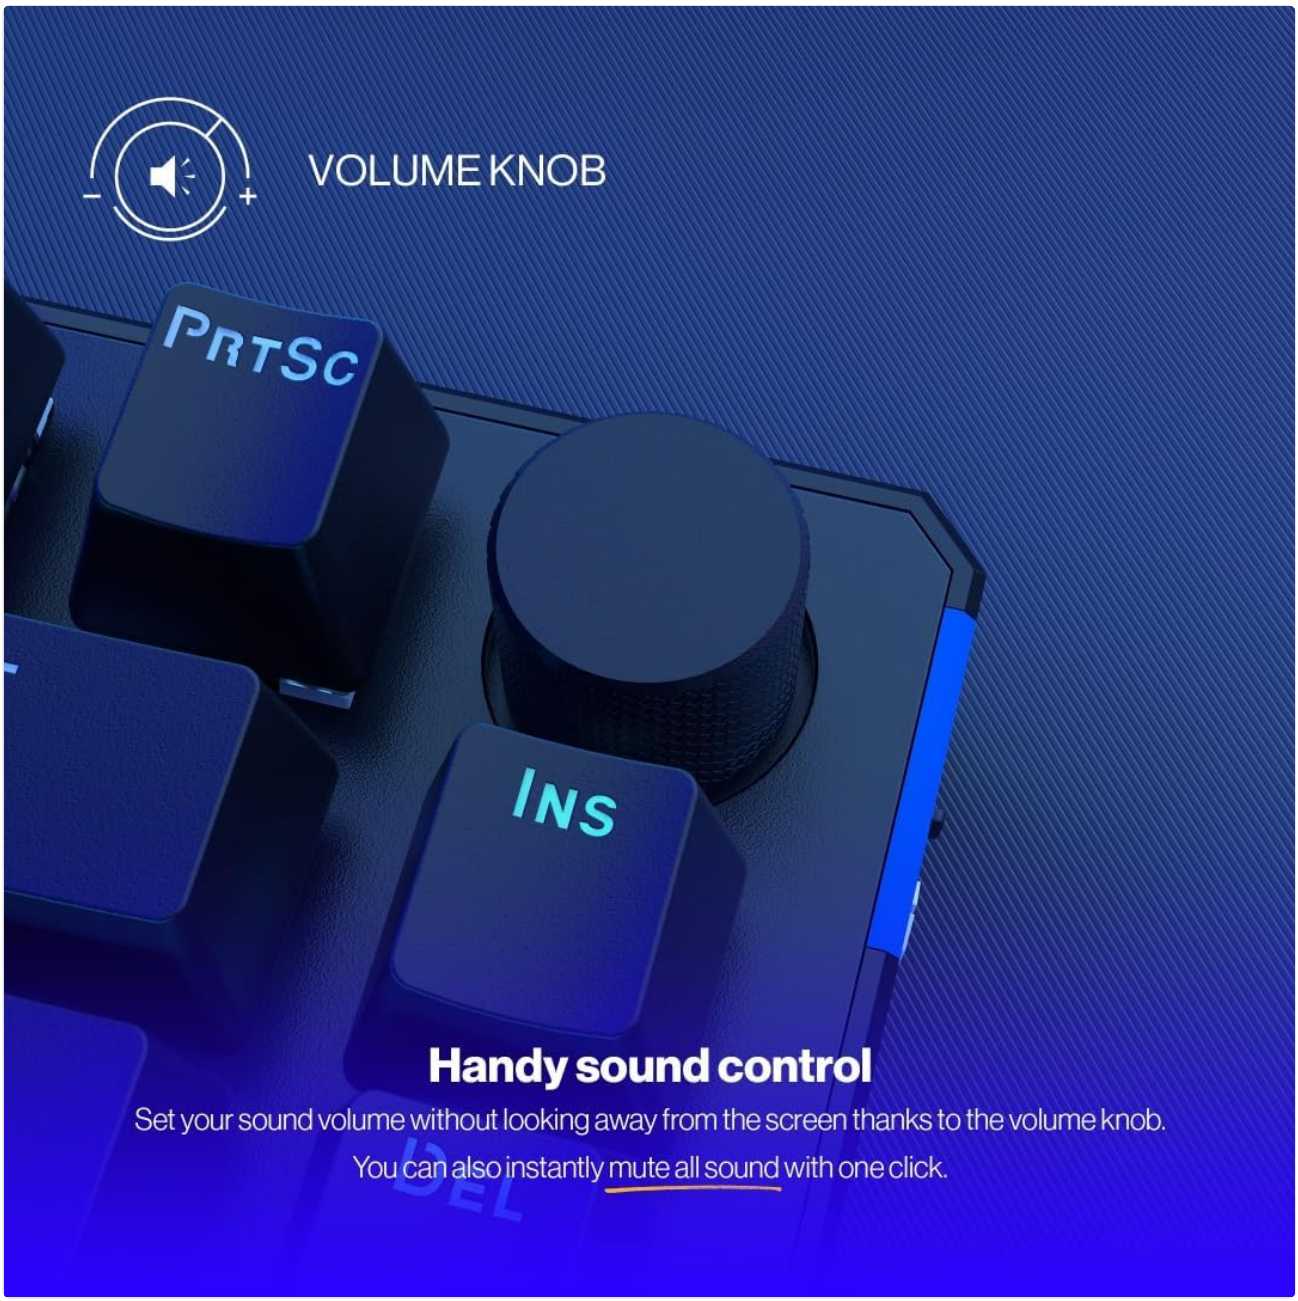

An illustration of the hot-swap feature, demonstrating how switches can be easily replaced for customization or maintenance.

- **PBT Double Shot Keycaps:** Manufactured using Double Shot technology, these keycaps are highly durable, scratch-resistant, and maintain their legends even after prolonged use.



A transparent and a black PBT Double Shot keycap, highlighting their robust construction and resistance to wear.

Maintenance

1. Cleaning the Keyboard

To maintain the keyboard's appearance and functionality:

- Disconnect the keyboard from power before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the keycaps and chassis.
- For dust and debris between keycaps, use compressed air or a small brush.
- Avoid using harsh chemicals or abrasive materials.

2. Replacing Keycaps and Switches

Thanks to the hot-swappable design, keycaps and switches can be easily replaced:

- Use the included keycap puller to gently remove keycaps.
- Use the included switch puller to carefully remove switches. Grip the switch firmly and pull straight up.

- When inserting new switches, align the pins with the holes on the PCB and press down gently until it clicks into place. Do not force.
- Ensure the keyboard is disconnected or in a safe mode before replacing components.

Troubleshooting

Problem	Possible Solution
Keyboard not responding (wired)	Ensure the USB-C cable is securely connected to both the keyboard and the computer. Try a different USB port on your computer. Test with a different USB-C cable.
Keyboard not connecting (wireless/Bluetooth)	Ensure the keyboard is charged. Verify the connectivity switch on the keyboard is set to the correct mode (2.4 GHz or Bluetooth). For 2.4 GHz, ensure the dongle is properly inserted into a USB port. For Bluetooth, ensure Bluetooth is enabled on your device and the keyboard is in pairing mode. Try re-pairing. Move the keyboard closer to the receiver/device to reduce interference.
Backlight not working or incorrect	Check if the backlight is turned off via onboard controls. Ensure the keyboard firmware and software are up to date. Reset keyboard settings via the software or a factory reset combination (refer to software manual for specific key combinations).
Specific keys not working	Carefully remove the keycap and switch for the affected key. Inspect the switch pins for bends or damage. Straighten gently if bent. Reinsert the switch firmly. If the problem persists, consider replacing the switch.

Specifications

Feature	Detail
Model Number	EY5A073
Product Dimensions	12.83 x 5.36 x 1.67 inches (326 x 136.20 x 42.50-55.50 mm)
Item Weight	1.61 pounds
Connectivity Technology	USB-C (Wired), 2.4 GHz Wireless, Bluetooth
Switch Type	Kailh Box Red (Linear, Hot-Swappable)
Number of Keys	82
Keycap Material	PBT Double Shot
Backlight	ARGB
Battery	1 Lithium Ion battery (included)

Feature	Detail
Compatible Devices	PC, Tablet, Smartphone





Diagram illustrating the dimensions of the ENDORFY Thock 75% Wireless Keyboard.

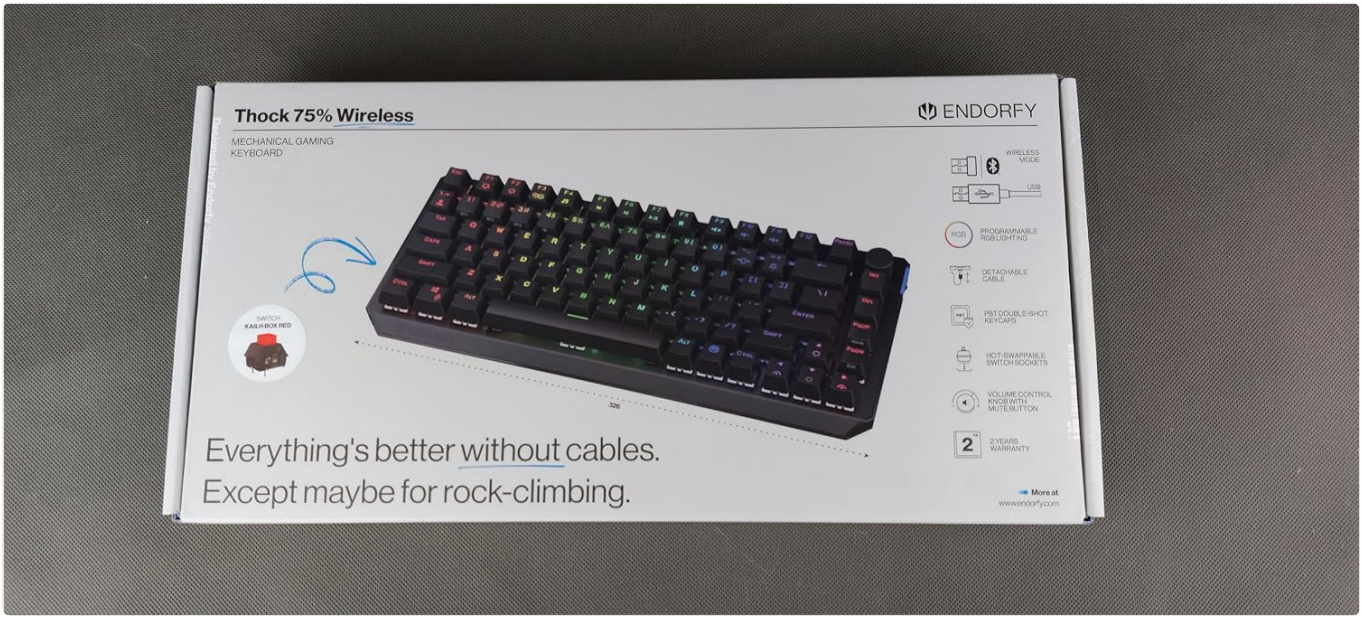

Diagram showing the side profile and adjustable height options of the keyboard.

Warranty and Support

The ENDORFY Thock 75% Wireless Keyboard comes with a**2-year warranty** from the date of purchase, covering manufacturing defects.
For technical support, driver downloads, firmware updates, and more detailed information, please visit the official ENDORFY support website:

endorfy.com/kb/EY5A-THOCK-75%-WIRELESS

Please retain your proof of purchase for warranty claims.

© 2024 ENDORFY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BWRNSXJG

More documents and user manuals: **https://manuals.plus/**