Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VLOXO AT-42CT

VLOXO Cordless Electric Cardboard Cutter

Model: AT-42CT

Brand: VLOXO

Safety Contents Overview Setup Operation Maintenance Specifications Troubleshooting Warranty

1. Safety Information

Always prioritize safety when operating the VLOXO Cordless Electric Cardboard Cutter. This device is equipped with a safety lock-off switch to prevent accidental activation.

- **Safety Lock-Off:** The electric scissors feature a safety lock switch. To operate, first press and hold the safety switch, then press the trigger. This sequence prevents unintended starts. Once the scissors are running, the safety switch can be released.
- Keep hands and fingers clear of the rotating blade during operation.
- Store the device in its provided storage case when not in use, especially if children are present.
- Do not use the cutter for materials it is not designed for, such as very thick metals or precision fabric cuts.



Image 1.1: The VLOXO Cordless Electric Cardboard Cutter highlighting its safety lock and blade guard for secure operation.

2. Package Contents

The VLOXO electric scissor set includes the following items:

- Cordless Electric Scissors Unit (1)
- TYPE-C Charge Cable (1)
- Storage Case (1)
- User Manual (1)



Image 2.1: All items included in the VLOXO Cordless Electric Cardboard Cutter package, neatly organized within its storage case.

3. Product Overview and Features

The VLOXO Cordless Electric Cardboard Cutter is designed for efficient and effortless cutting of various materials. Its ergonomic and lightweight design ensures comfortable use for both left-handed and right-handed individuals.

- **Extraordinary Cutting Capability:** This cordless cutter is suitable for materials such as paper, plastic, cardboard, leather, fabric, bubble wrap, canvas, carpet, wallpaper, wire, and flower stems. *Note: Not recommended for precision fabric cuts.*
- **Automatic Sharpening System:** The octagonal blade features an automatic sharpening system, ensuring the blade remains sharp for smooth and consistent cuts.
- **Lightweight and Portable:** Weighing less than 1 pound and measuring under 9 inches long, the cutter is easy to store and carry in its dedicated storage box.
- **Ergonomic Design:** Engineered for comfort, reducing hand fatigue during extended use.

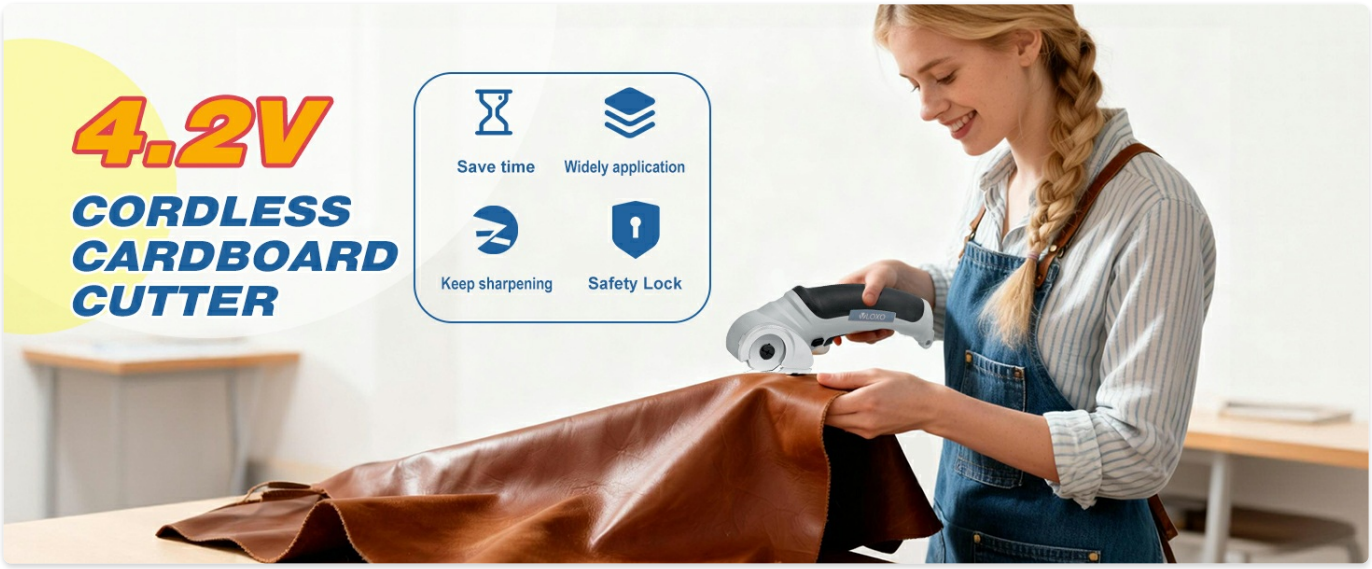

Image 3.1: The VLOXO cutter demonstrating its versatility across a range of materials.



Image 3.2: The cutter's 1/4 inch cutting capacity, ideal for various materials.

4. Setup

Before first use, ensure the VLOXO Cordless Electric Cardboard Cutter is fully charged.

1. **Charging:** Connect the provided TYPE-C Charge Cable to the charging port on the cutter and to a suitable USB power source. The charging indicator light will show the charging status.
2. Allow the device to charge completely before initial operation to ensure optimal battery life and performance.

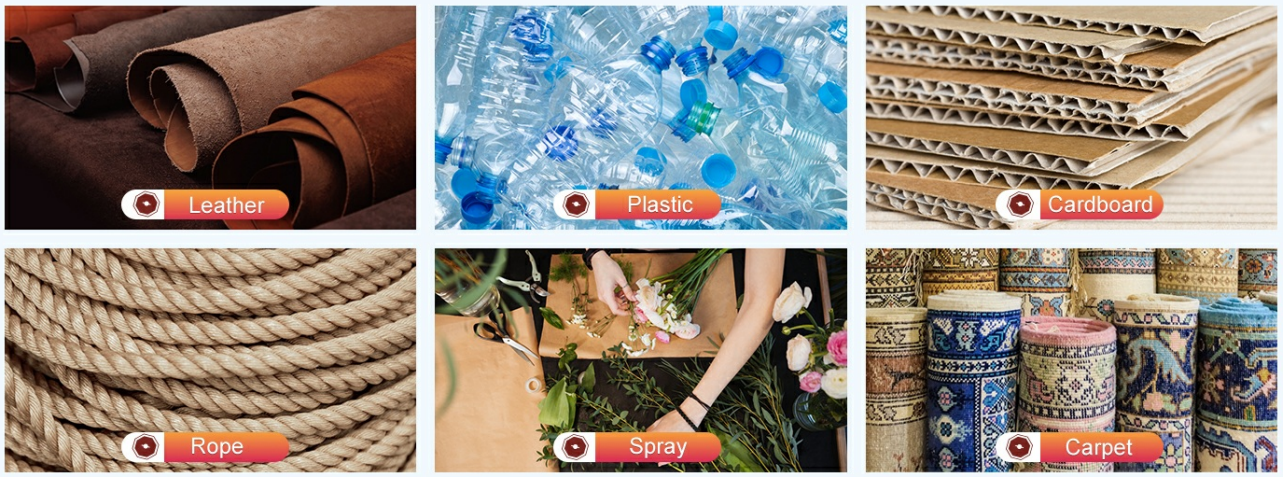

Image 4.1: Location of the Type-C charging port and indicator light on the VLOXO cutter.

5. Operating Instructions

Follow these steps for safe and effective operation of your VLOXO Cordless Electric Cardboard Cutter:

1. **Activate Safety Lock:** Press and hold the safety lock switch located on the side of the handle.
2. **Start Cutting:** While holding the safety lock, press the power switch (trigger) to start the blade rotation. You can then release the safety lock.
3. **Guide the Cutter:** Gently guide the rotating blade along the material you wish to cut. The self-sharpening blade will effortlessly cut through various materials.
4. **Power Off:** Release the power switch to stop the blade. The safety lock will automatically re-engage with an audible click. To resume cutting, repeat step 1.



Image 5.1: Demonstrating the VLOXO cutter in action on fabric.



Image 5.2: The VLOXO cutter easily slicing through paper.

Official Product Video: VLOXO 2023 Electric Scissors Gray

Your browser does not support the video tag.

Video 5.3: This video demonstrates the VLOXO 2023 Electric Scissors in gray, showcasing its cutting capabilities on various materials and ease of use.

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your VLOXO Cordless Electric Cardboard Cutter.

- **Blade Care:** The cutter is equipped with an automatic sharpening system. To maintain smooth cuts, regularly keep the area around the blade guard clean.
- **Cleaning:** Remove any dust and chips by blowing them out with compressed air or using a soft brush.
- **Storage:** Store the cutter in its provided storage case in a cool, dry place to protect it from damage and dust.



Image 6.1: The self-sharpening blade ensures consistent cutting performance.

7. Troubleshooting

If you encounter any issues with your VLOXO Cordless Electric Cardboard Cutter, please refer to the following common solutions:

- **Cutter not turning on:** Ensure the device is fully charged. Check the charging cable and power source. Confirm the safety lock is engaged correctly before pressing the trigger.
- **Poor cutting performance:** Clean any debris from around the blade guard. Ensure the blade is free from obstructions. The automatic sharpening system should keep the blade sharp, but excessive build-up can hinder performance.
- **Unusual noise during operation:** Stop using the device immediately. Check for any loose parts or foreign objects near the blade. If the issue persists, contact customer support.

8. Specifications

Feature	Detail
Brand	VLOXO
Model Number	AT-42CT
Material	Plastic (body), Stainless Steel/High Carbon Steel (blade)
Color	Grey
Item Length	9 Inches
Item Weight	14.9 ounces (approx. 0.9 lbs)
Battery	1 Lithium Metal battery (included)
Charging Port	Type-C



Image 8.1: The VLOXO cutter highlighting its lightweight design for ease of use.

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official VLOXO website.

Keep your purchase receipt as proof of purchase for any warranty claims.

© 2026 VLOXO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BXSBSVNL

More documents and user manuals: **https://manuals.plus/**