Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun MGK7470

Braun All-in-One Style Kit Series 7 MGK7470 User Manual

Model: MGK7470

1. Introduction

Welcome to the Braun All-in-One Style Kit Series 7 MGK7470. This manual provides essential information for the safe and effective use of your grooming device. Please read all instructions carefully before first use and retain for future reference.

2. Important Safety Information

Always keep the trimmer away from water sources to prevent damage. Do not submerge the trimmer in water. Keep the trimmer away from children and use it only on adult body hair. Always use the trimmer with caution, as the blades are sharp and can cause injury if not handled properly. Follow the recommended cleaning and maintenance procedures to ensure the trimmer's longevity and safety.

3. Package Contents

Verify that all items listed below are present in your package:

- 1x Trimmer device
- 1x Metal trimmer head
- 1x Body groomer head
- 1x Detail trimmer head
- 1x Ear & nose trimmer head
- 1x Sliding beard comb (3 – 11 mm)
- 1x Sliding hair comb (13 – 21 mm)
- 1x Standard fix comb (1 mm)
- 1x Standard Fix comb (2 mm)
- 1x Beard fading comb
- 1x Hair fading comb
- 1x Sensitive comb

- 1x Eyebrow comb
- 1x Gillette Proglide razor
- 1x Gillette Proglide cartridge
- 1x Cleaning brush
- 1x Charging stand
- 1x Organizer case



Image: The Braun All-in-One Style Kit Series 7 MGK7470 with all 16 included attachments, including various combs, trimmer heads, a Gillette Proglide razor, charging stand, and organizer case.

4. Setup

4.1 Initial Charging

Before first use, fully charge the device. Connect the charging cable to the trimmer and plug it into a power outlet. The charging indicator light will show the charging status. A full charge provides approximately 100 minutes of cordless runtime.



Image: The Braun All-in-One Style Kit Series 7 MGK7470 trimmer standing upright on its charging base, with a green indicator light illuminated, signifying charging or full battery.

4.2 Attaching Trimmer Heads and Combs

To attach a trimmer head, align it with the trimmer body and press until it clicks into place. To remove, pull the head away from the body. For combs, slide them onto the desired trimmer head until secure.

5. Operating Instructions

5.1 Power On/Off

Press the power button to turn the device on or off.

5.2 Beard Trimming

Use the metal trimmer head with the sliding beard comb (3-11 mm) or standard fix combs (1 mm, 2 mm) to achieve desired beard length. For precise lines, use the metal trimmer head without a comb.

5.3 Hair Clipping

Attach the sliding hair comb (13-21 mm) or hair fading comb to the metal trimmer head for hair cutting. Move the trimmer against the direction of hair growth.

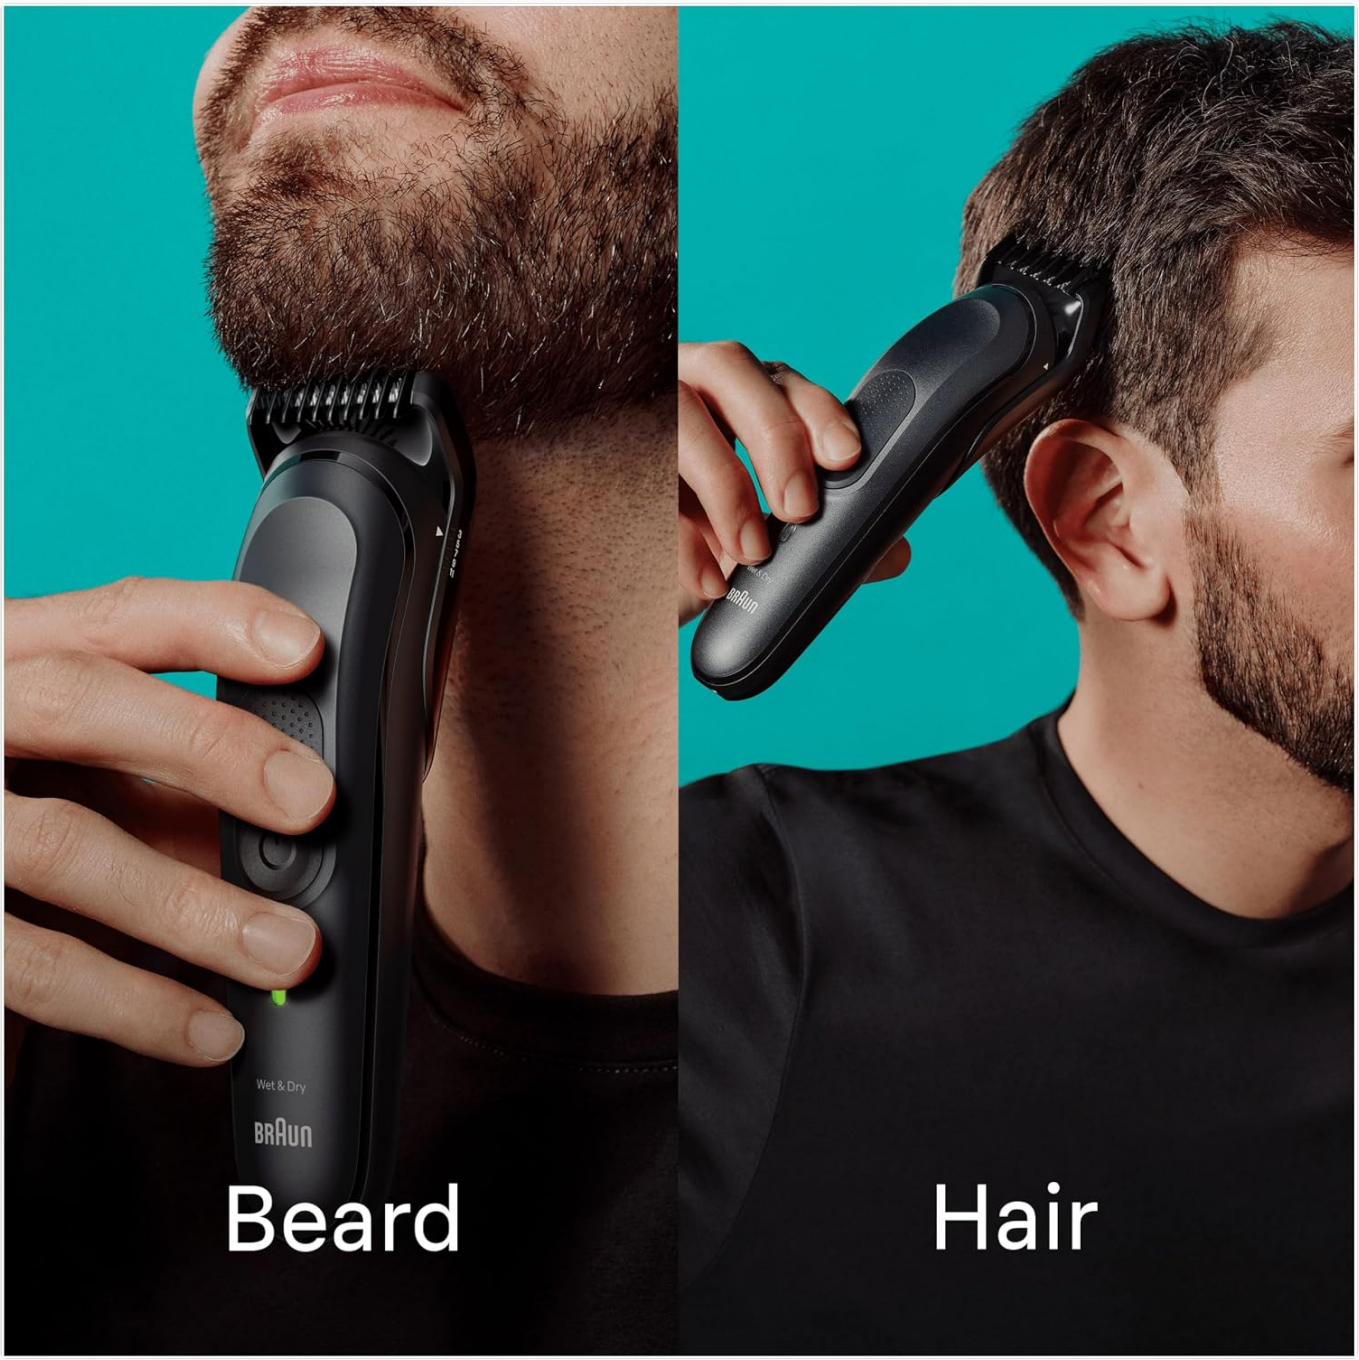

Image: A person demonstrating the use of the Braun All-in-One Style Kit Series 7 MGK7470 for both beard trimming and hair clipping, illustrating proper technique for each application.

5.4 Body Grooming

Use the body groomer head with the sensitive comb for manscaping. Always use caution in sensitive areas.

5.5 Detail Trimming

The detail trimmer head is designed for precise styling and intricate lines.

5.6 Ear & Nose Trimming

Gently insert the ear & nose trimmer head into the nostril or ear canal. Do not insert too deeply.

6. Maintenance

6.1 Cleaning

The device is 100% waterproof. After each use, remove the trimmer head and rinse it under running water. Use the cleaning brush to remove any trapped hairs. Ensure the device is dry before storing or recharging.



Image: A hand holding the Braun All-in-One Style Kit Series 7 MGK7470 trimmer under running water, demonstrating its waterproof feature for easy cleaning.

6.2 Storage

Store the trimmer and its attachments in the provided organizer case in a dry place, away from direct sunlight and extreme temperatures.

7. Troubleshooting

7.1 Device Not Turning On

- Ensure the device is fully charged.
- Check if the power button is pressed firmly.

7.2 Poor Trimming Performance

- Ensure the trimmer head is clean and free of hair.
- Check if the blades are damaged. Replace if necessary.
- Ensure the device is adequately charged.

8. Specifications

Feature	Detail
Model	MGK7470
Brand	Braun
Power Source	Battery Powered (Lithium Ion)
Runtime	Up to 100 minutes cordless
Waterproof	Yes, 100% waterproof
Blade Material	Metal
Item Weight	0.8 Kilograms
Product Dimensions	1 x 1 x 1 cm
Manufacturer	Procter & Gamble

9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included in your package or visit the official Braun website. Keep your proof of purchase for warranty claims.

© 2025 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BZQ36R84

More documents and user manuals: **https://manuals.plus/**