Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FANGOR 102KZ

Uhale Digital Picture Frame User Manual

Brand: FANGOR
Model: 102KZ

1. Introduction

Thank you for choosing the Uhale Digital Picture Frame. This manual provides detailed instructions for setting up, operating, and maintaining your new digital photo frame. With its 10.1-inch HD IPS touchscreen and 32GB of built-in storage, you can easily share and display your cherished memories with family and friends from anywhere in the world.



Image: The Uhale Digital Picture Frame, showcasing its display and connectivity features.

2. Package Contents

Please verify that all items are present in the package before proceeding with the setup.

- 1 x Uhale Digital Photo Frame
- 1 x Stand
- 1 x AC Adapter
- 1 x User Manual



Image: A visual representation of the items included in the product packaging.

3. Setup Guide

3.1 Initial Power On

1. Connect the AC adapter to the digital picture frame and plug it into a power outlet.
2. The frame will automatically power on. Follow the on-screen prompts to select your language and time zone.

3.2 Network Connection (Wi-Fi)

1. From the main menu, navigate to 'Settings' and select 'Wi-Fi'.
2. Choose your Wi-Fi network from the list and enter the password.
3. Once connected, the Wi-Fi icon will appear on the screen.

3.3 Uhale App Setup

The Uhale app allows for easy photo and video sharing from your smartphone.

1. Download the "Uhale" app from the App Store (iOS) or Google Play Store (Android).

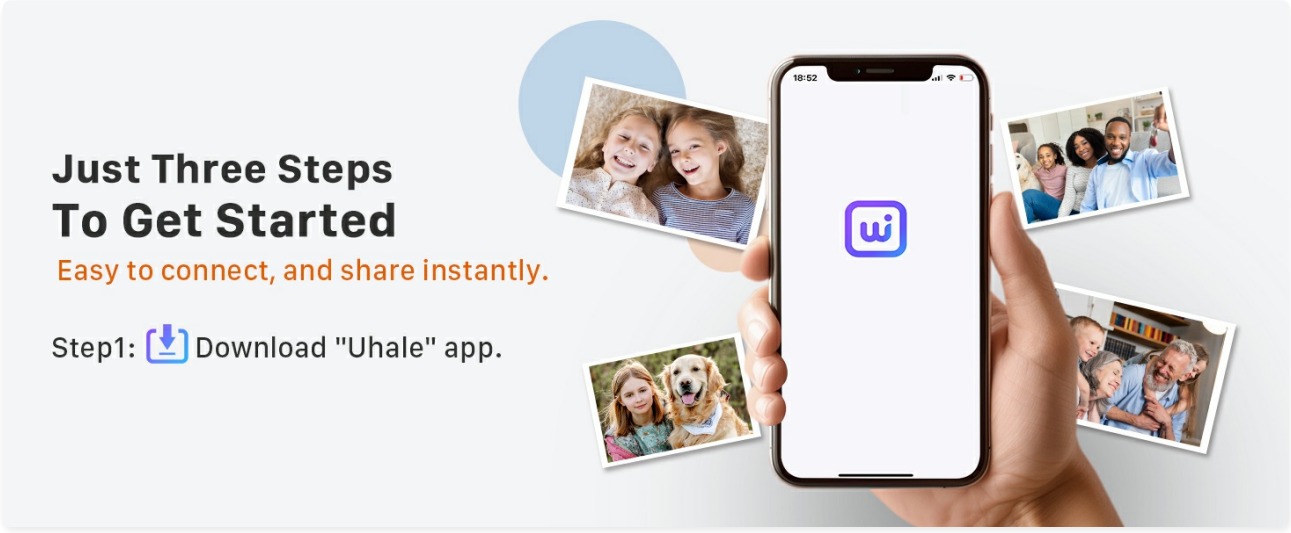

Image: Step 1 of the setup process, illustrating the download of the Uhale app.

2. Open the app and create an account or log in.
3. Add your digital picture frame by scanning the QR code displayed on the frame or by entering the unique frame ID.

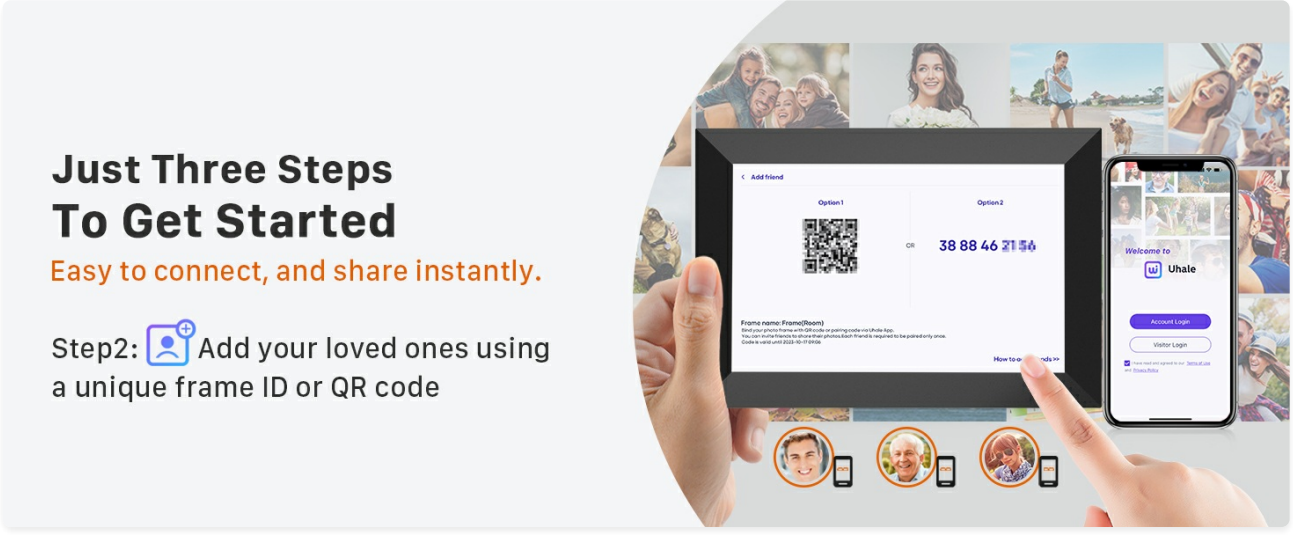

Image: Step 2 of the setup process, showing how to connect the app to the frame using a QR code or ID.

4. You can invite unlimited users to connect to your frame by sharing the frame code.

Image: Illustration of multiple users connecting to the digital frame, emphasizing unlimited user connections.

3.4 Flexible Placement

The frame supports both desktop and wall-mounted placement. Its auto-rotate feature ensures photos are always displayed correctly, whether in landscape or portrait orientation.



Image: Examples of the digital frame in both landscape and portrait orientations, suitable for desktop or wall mounting.

4. Operating Instructions

4.1 Sharing Photos and Videos

There are several ways to upload content to your Uhale Digital Picture Frame:

- **Uhale App:** Send up to 100 pictures or 2-minute videos at a time directly from your phone.

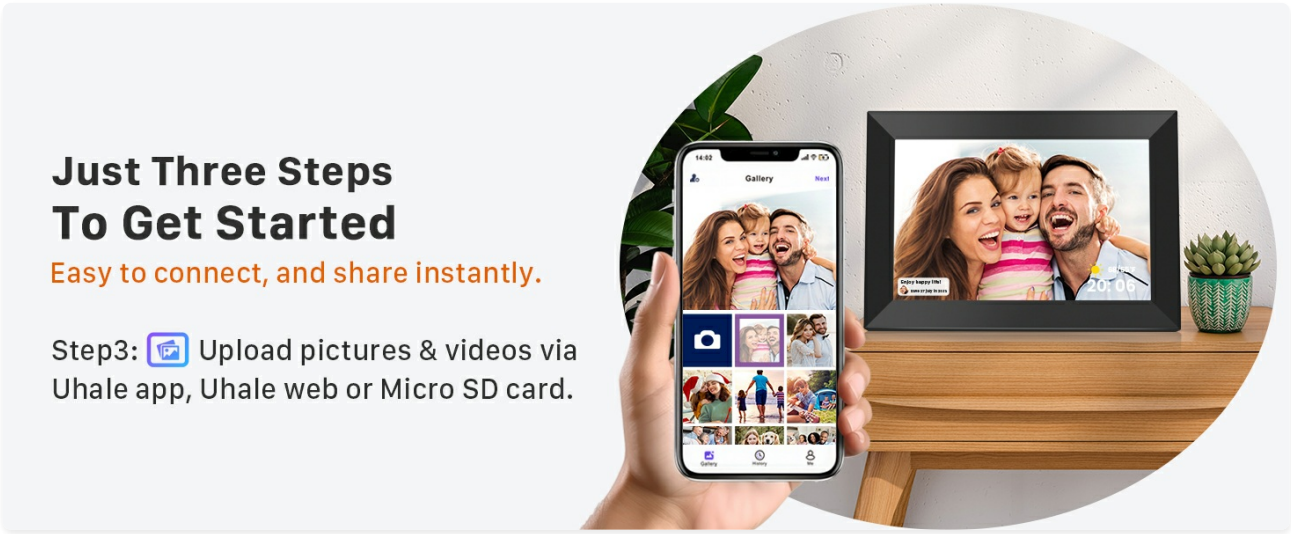

Image: Step 3 of the setup process, showing the various methods for uploading content to the frame.



Image: The digital frame playing a video with sound, demonstrating the video playback feature.

- **PC Web Transfer:** Log in to the "Uhale" web portal on your computer to upload up to 500 photos at once without software installation.



Image: The digital frame and a laptop, illustrating the PC web transfer method for uploading photos.

- **Micro SD Card:** Insert a Micro SD card (up to 32GB) to import or backup photos and videos. There is no time limit for videos uploaded via SD card.



Image: The digital frame and a smartphone, highlighting the instant and wireless sharing capabilities.

4.2 Display and Navigation

- **Touchscreen:** The 10.1-inch IPS HD touchscreen (1280x800 resolution) allows for easy navigation, browsing photos, deleting videos, and pausing slideshows with a touch.



Image: A close-up of the digital frame's touchscreen, highlighting its responsiveness and clarity.

- **Brightness/Volume Adjustment:** Swipe up or down on the left side of the screen to adjust brightness. Swipe up or down on the right side to adjust volume.

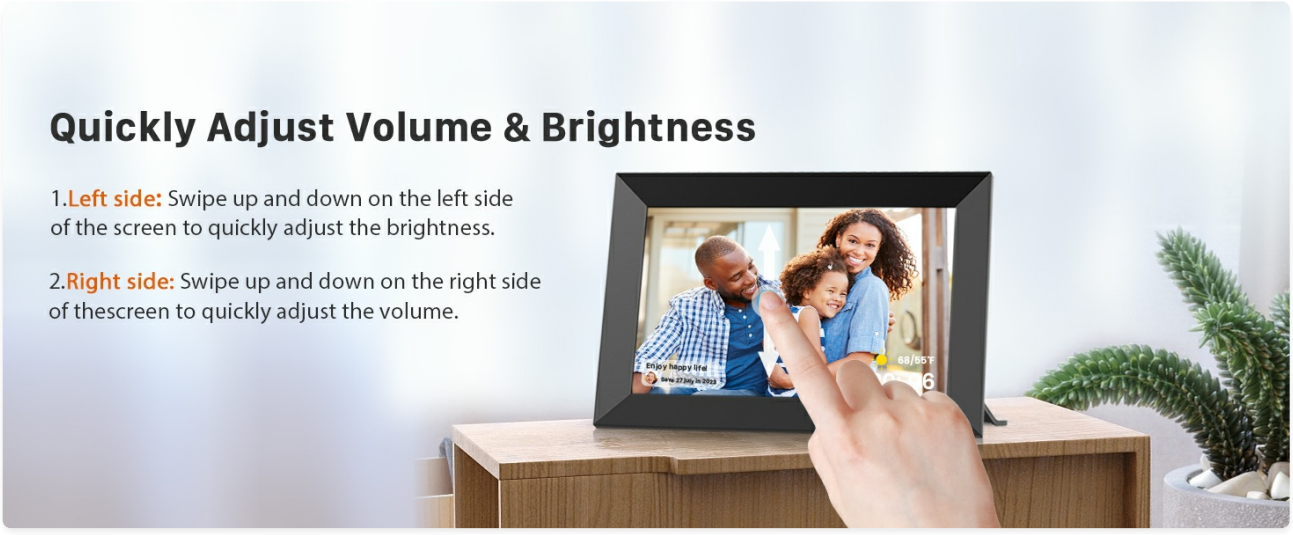

Image: Demonstrating how to adjust brightness and volume directly on the frame's touchscreen.

- **Slideshow Mode:** After uploading pictures, select the slideshow mode for automatic playback.
- **Auto-Rotate:** The frame automatically rotates photos to fill the screen without compromising image quality, regardless of orientation.

4.3 Sending Best Wishes

The Uhale App features a blessing template function, allowing you to send instant or predetermined blessings to the frame on specific holidays or occasions.



Image: The Uhale app's 'Best Wishes' feature, enabling users to send personalized messages to the frame.

4.4 Sleep Mode & Clock

The frame can be set to enter sleep mode at a predetermined time, saving energy while still allowing it to receive new photos.

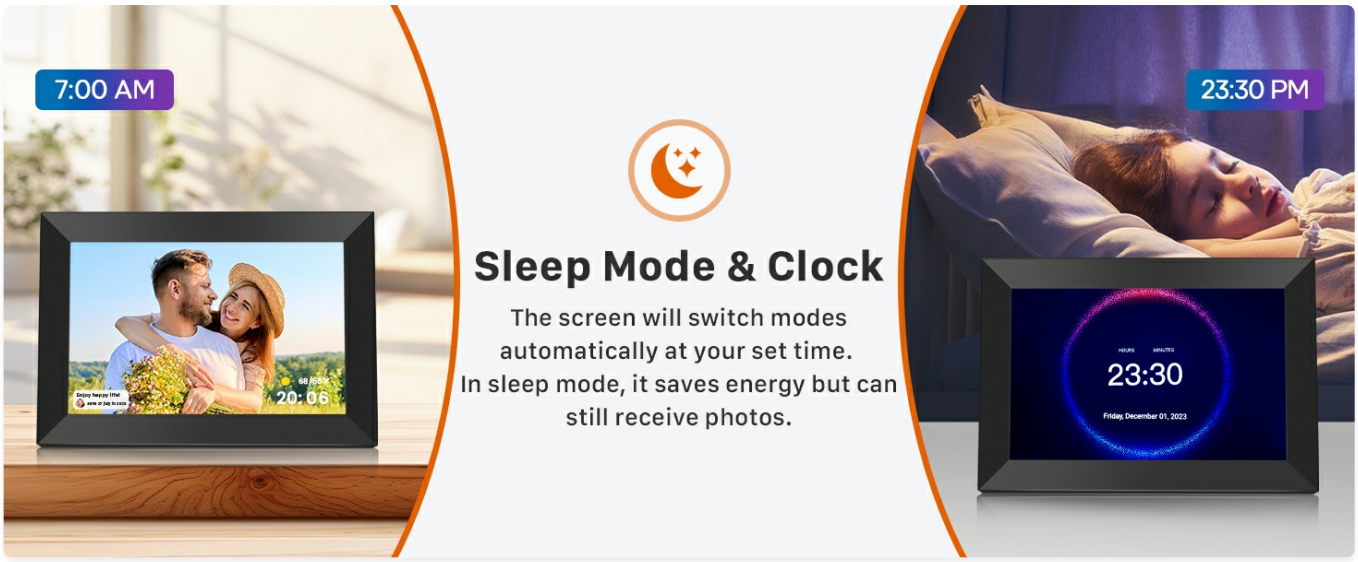

Image: The digital frame transitioning between active display and energy-saving sleep mode with a clock display.

5. Maintenance

To ensure the longevity and optimal performance of your digital picture frame, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the screen with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Dust Removal:** Use a soft brush or compressed air to remove dust from the frame's edges and ports.
- **Software Updates:** Periodically check the Uhale app or the frame's settings for available software updates to ensure you have the latest features and security enhancements.
- **Storage Management:** While the frame has 32GB of storage, regularly review your content and delete unwanted photos or videos to optimize performance. You can also back up content to a Micro SD card or PC.

6. Troubleshooting

If you encounter any issues with your Uhale Digital Picture Frame, please refer to the following common solutions:

Problem	Possible Cause	Solution
Frame does not power on	Power adapter not connected or faulty outlet.	Ensure the AC adapter is securely connected to the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi	Incorrect password, weak signal, or network issue.	Double-check the Wi-Fi password. Move the frame closer to the router. Restart your router and the frame.
Photos/Videos not uploading via app	Frame not connected to Wi-Fi, incorrect frame ID, or app issue.	Verify Wi-Fi connection on the frame. Ensure the correct frame ID is entered in the app. Restart the app or your phone.

Problem	Possible Cause	Solution
Screen is unresponsive	Temporary software glitch.	Restart the frame by unplugging and re-plugging the power adapter.
Images appear distorted or low quality	Low resolution source image.	Ensure the uploaded images are of sufficient resolution (e.g., 1280x800 or higher for best results).

If the problem persists, please contact FANGOR customer support for assistance.

7. Specifications

Feature	Detail
Product Dimensions	7.3 x 10.5 x 0.99 inches
Item Weight	1.45 pounds
ASIN	B0C3DCBQDT
Item Model Number	102KZ
Brand	FANGOR
Color	Black
Resolution	1280x800 HD
Compatible Devices	Smartphone
Screen Size	10.1 Inches
Internal Storage	32GB
External Storage Support	Micro SD card (Max: 32GB)

8. Warranty and Support

FANGOR is committed to providing high-quality products and excellent customer service.

- **One-Year Warranty:** All FANGOR digital frames come with a one-year warranty.



Image: Icon for One Year Warranty.

- **Lifetime Technical Support:** FANGOR offers lifetime technical support for its products.



Image: Icon for Lifetime Technical Support.

- **365-Day No-Reason Replacement:** Enjoy peace of mind with a 365-day no-reason replacement policy.
- **24-Hour Customer Service:** Our professional after-sales team is available to handle your inquiries within 24 hours.



Image: Icon for 24-hour Excellent Service.

For support, please refer to the contact information provided with your product or visit the official FANGOR website.

© 2025 FANGOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does my FANGOR 102KZ digital picture frame say 'content not found' or only import some photos from my 32GB SD card?

If your FANGOR 102KZ digital picture frame is displaying a "content not found" message or only importing a portion of your photos from a 32GB SD card, please check the following: SD Card Capacity:...

Read full answer

Open the live page

https://manuals.plus/asin/B0C3DCBQDT

More documents and user manuals: **https://manuals.plus/**