Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Erivess WA01

Erivess Portable Twin Tub Washing Machine

Model: WA01 | **Brand:** Erivess

1. Introduction

Thank you for choosing the Erivess Portable Twin Tub Washing Machine. This semi-automatic appliance is designed for efficient laundry care in compact living spaces such as dorms, apartments, RVs, and small homes. It features separate tubs for washing and spinning, offering convenience and flexibility. This manual provides essential information for safe and effective use of your new washing machine.

2. Safety Instructions

Please read all safety instructions carefully before operating the appliance to prevent injury or damage.

- Ensure the appliance is placed on a stable, flat surface to prevent tipping during operation.
- Connect the appliance to a grounded electrical outlet with the correct voltage (120 Volts). Avoid using extension cords if possible.
- Do not immerse the appliance in water or operate it with wet hands.
- Keep children and pets away from the appliance during operation.
- Do not overload the wash or spin tubs beyond their specified capacities (11 lbs for washing, 7 lbs for spinning). Overloading can damage the motor and affect performance.
- Always ensure the spin tub cover plate is properly placed before starting the spin cycle to prevent clothes from flying out and causing imbalance or damage.
- If any unusual sounds, smells, or sparks are observed, immediately unplug the appliance and contact customer support.
- Always unplug the machine before cleaning or performing any maintenance.

3. Package Contents

Verify that all items are present in the package:

- Erivess Portable Twin Tub Washing Machine
- Clothes Drying Rod
- Instruction Manual (this document)
- Warranty Card

4. Product Overview

Familiarize yourself with the components and controls of your Erivess Portable Twin Tub Washing Machine.



Figure 1: Overall view of the Erivess Portable Twin Tub Washing Machine.

Control Panel



Figure 2: Close-up of the control panel with Wash Timer, Wash Selector, and Spin Timer.

- **Wash Timer:** Sets the duration for the wash cycle (up to 15 minutes).
- **Wash Selector:** Selects the wash mode (Gentle, Normal) or Drain function.
- **Spin Timer:** Sets the duration for the spin cycle (up to 5 minutes).
- **Water Inlet:** Port for adding water to the wash tub.

Tubs and Hoses

Figure 3: The wash tub features an agitator for effective cleaning.



Figure 4: The spin tub includes a removable cover plate for safety during operation.

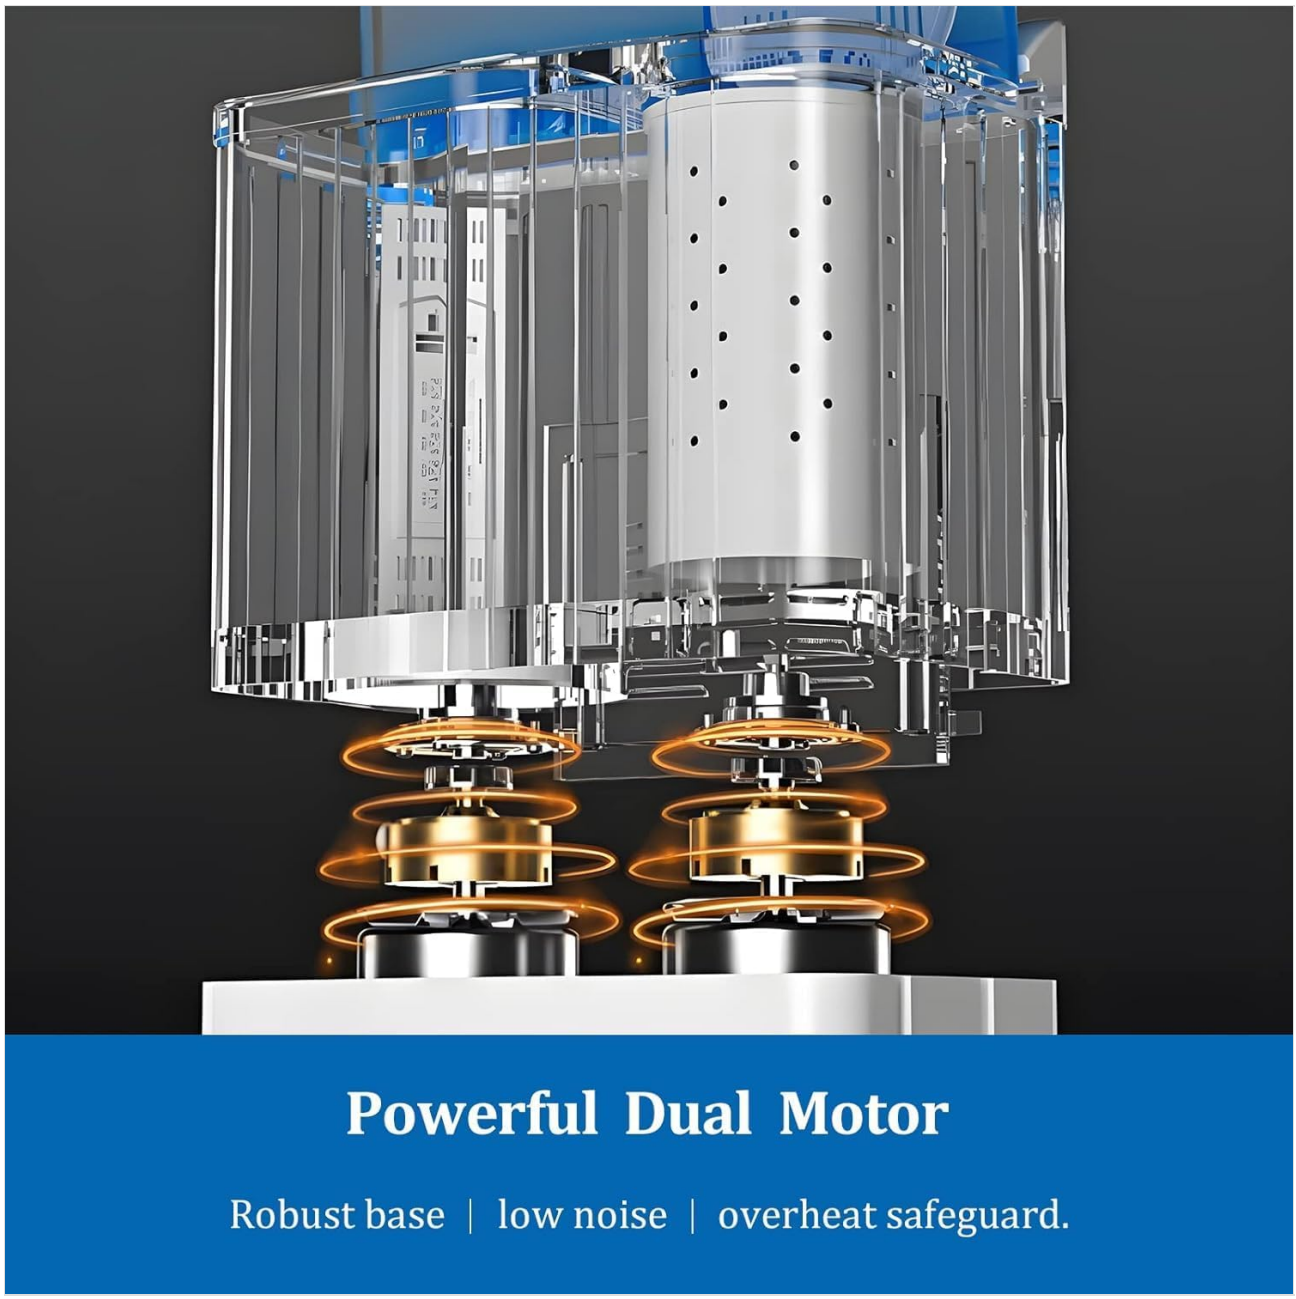


Figure 5: The drain hose is located at the bottom side of the machine for water discharge.

5. Setup

Proper setup ensures optimal performance and safety.

1. **Placement:** Position the washing machine on a firm, level surface. Ensure it is near a water source (sink or shower) and a drain. The overall dimensions are approximately 15"D x 23.5"W x 26.6"H.
2. **Water Supply:** Connect the water inlet hose to a faucet or use a shower head to fill the wash tub directly.
3. **Drainage:** Ensure the drain hose is positioned lower than the machine's base and directed into a sink, bathtub, or floor drain to allow for gravity drainage.
4. **Power Connection:** Plug the power cord into a standard 120V electrical outlet.

Setup Demonstration Video

▶ **Watch video online**

Great Portable Washing Machine For Small Spaces

Video 1: This video demonstrates the setup and initial filling of the Erivess Portable Twin Tub Washing Machine, showing how to connect the water hose and fill the wash tub.

6. Operating Instructions

Follow these steps for washing, rinsing, and spinning your laundry.

6.1. Washing Cycle

1. **Fill Water:** Open the wash tub lid. Fill the wash tub with water through the water inlet or directly using a shower head. Do not exceed the maximum fill line.
2. **Add Detergent:** Add the appropriate amount of laundry detergent.
3. **Load Clothes:** Place clothes into the wash tub. Do not overload; the maximum capacity is 11 lbs. Ensure clothes can move freely for effective cleaning.
4. **Select Wash Mode:** Turn the **Wash Selector** knob to either 'Gentle' for delicate items or 'Normal' for regular loads.
5. **Set Wash Timer:** Turn the **Wash Timer** knob to the desired wash duration (up to 15 minutes). The machine will start agitating.
6. **Monitor:** Close the lid and allow the machine to complete the wash cycle.

Washing Demonstration Video

▶ **Watch video online**
Erivess Portable Washing Machine - HONEST customer review!

Video 2: This video provides a detailed demonstration of the washing process, including filling the tub, adding clothes, and starting the wash cycle.

6.2. Draining

1. **Position Drain Hose:** Ensure the drain hose is securely placed in a suitable drain.
2. **Activate Drain:** Turn the **Wash Selector** knob to 'Drain'. The water will begin to discharge from the wash tub.
3. **Wait for Completion:** Allow all water to drain completely.

Draining Demonstration Video

▶ **Watch video online**
Great for apartments, can be used in the tub

Video 3: This video illustrates the draining process, showing how to activate the drain function and the water flowing out.

6.3. Rinsing (Optional)

For a thorough rinse, repeat the washing cycle steps (6.1) using clean water and no detergent.

6.4. Spinning Cycle

1. **Transfer Clothes:** Move the wet clothes from the wash tub to the spin tub. Do not overload; the maximum capacity is 7 lbs.
2. **Place Cover Plate:** Ensure the spin tub cover plate is securely placed on top of the clothes inside the spin tub. This is crucial for safety and to prevent clothes from being ejected during high-speed spinning.
3. **Set Spin Timer:** Turn the **Spin Timer** knob to the desired spin duration (up to 5 minutes). The machine will begin spinning.
4. **Safety Feature:** The spin cycle will automatically stop if the spin tub lid is opened during operation.
5. **Remove Clothes:** Once the timer completes, remove the spun clothes. They will be damp but significantly drier than after washing.

Spinning Demonstration Video

▶ **Watch video online**
Efficient, easy to use, I love my little washer.

Video 4: This video demonstrates the spinning cycle, showing how to load clothes into the spin tub and operate the spin timer.

7. Maintenance

Regular maintenance helps prolong the life of your washing machine.

- **Cleaning the Filter Net:** The wash tub has a filter net on the side. Regularly remove and clean this filter to prevent lint buildup and ensure efficient drainage.
- **Cleaning Tubs:** After each use, wipe down the interior of both tubs with a soft cloth to remove any detergent residue or lint.
- **Exterior Cleaning:** Clean the exterior of the machine with a damp cloth. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, ensure the machine is dry and store it in a cool, dry place.

8. Troubleshooting

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Timer not set.	Check power connection; Verify power supply; Set wash/spin timer.
Water not draining	Drain hose improperly positioned; Drain selector not set to 'Drain'; Drain hose clogged.	Ensure drain hose is lower than machine; Turn Wash Selector to 'Drain'; Check and clear drain hose for obstructions.
Spin tub vibrates excessively	Uneven load distribution; Machine not on a level surface; Overloaded spin tub.	Redistribute clothes evenly; Place machine on a flat, stable surface; Reduce load size (max 7 lbs). Ensure cover plate is in place.
Clothes not clean	Insufficient detergent; Overloaded wash tub; Incorrect wash mode.	Use recommended detergent amount; Reduce load size (max 11 lbs); Select appropriate wash mode (Normal/Gentle).

If the problem persists after attempting these solutions, please contact Erivess customer support.

9. Specifications

- **Brand:** Erivess
- **Model:** WA01
- **Product Dimensions:** 15"D x 23.5"W x 26.6"H
- **Item Weight:** 26.4 pounds
- **Wash Capacity:** 11 lbs
- **Spin Capacity:** 7 lbs
- **Washing Power:** 240 W
- **Spinner Power:** 110 W
- **Wattage:** 350 watts

- **Voltage:** 120 Volts
- **Operation Mode:** Semi-automatic
- **Control Type:** Knob
- **Material Type:** ABS, Polypropylene
- **Special Features:** Compact, Lightweight, Portable

10. Warranty and Support

Your Erivess Portable Twin Tub Washing Machine comes with a warranty. Please refer to the included Warranty Card for detailed terms and conditions.
For any questions, technical assistance, or warranty claims, please contact Erivess customer support. Contact information can be found on the Warranty Card or the official Erivess website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

The timer on my Erivess WA01 Portable Twin Tub Washing Machine won't stay in place and winds back by itself; how do I fix or restart it?

If the timer knob on your Erivess WA01 Portable Twin Tub Washing Machine immediately winds back to zero without the machine running, or fails to "catch" when turned, it usually indicates a mechanical failure...

Read full answer

Open the live page

https://manuals.plus/asin/B0C3VCDTHW

More documents and user manuals: **https://manuals.plus/**