WOTSTA 9

WOTSTA Gaming Chair Instruction Manual

Model: 9
Brand: WOTSTA

Introduction

This instruction manual provides detailed guidance for the assembly, operation, maintenance, and troubleshooting of your WOTSTA Gaming Chair. Please read this manual thoroughly before assembly and use to ensure proper function and safety. This gaming chair is designed to provide comfort and support for extended periods of use, whether for gaming or office work, featuring adjustable recline, a retractable footrest, and a massage lumbar pillow.

Safety Information

Always follow the assembly instructions carefully. Keep fingers and body parts away from moving parts during assembly and use. Do not exceed the maximum weight capacity of 113 kg (250 lbs). Keep the chair on stable surfaces to prevent tipping. Be cautious when adjusting the backrest height and recline function to avoid injury.

Package Contents

Before beginning assembly, ensure all components are present and undamaged. Refer to the following list:

- Backrest
- Seat Cushion with Armrests and Footrest mechanism
- Lumbar Support Pillow (with massage function)
- Headrest Pillow
- Gas Lift Cylinder
- Gas Lift Cover
- Star Base
- Caster Wheels (5x)
- Mechanism Plate
- Hardware Pack (screws, washers, Allen wrench)



Figure 1: Key components of the WOTSTA Gaming Chair, including the lifting lever, gas cylinder, metal base, and rolling wheels.

Setup and Assembly

Assembly typically takes 10-15 minutes. Follow these steps carefully:

1. **Attach Caster Wheels to Base:** Insert each of the five caster wheels into the holes at the end of each leg of the star base until they click securely into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the star base. Cover the gas lift with the telescopic cover.
3. **Attach Mechanism Plate to Seat:** Align the mechanism plate with the pre-drilled holes on the underside of the seat cushion. Secure it using the provided screws and Allen wrench. Ensure the front of the mechanism faces the front of the seat.
4. **Connect Seat to Base:** Carefully place the assembled seat cushion onto the gas lift cylinder, ensuring it is centered and stable.
5. **Attach Backrest to Seat:** Align the backrest with the mounting brackets on the seat cushion. Secure it using the remaining screws.
6. **Install Pillows:** Attach the headrest pillow to the top of the backrest and the lumbar support pillow to the lower back area using their integrated straps. The lumbar pillow features a USB cable for its massage function; connect this to a suitable USB power source (e.g., power bank, computer USB port).





Figure 2: Fully assembled WOTSTA Gaming Chair, ready for use.

Operating Instructions

Your WOTSTA Gaming Chair offers several adjustable features for personalized comfort:

- **Height Adjustment:** To adjust the seat height, pull the lever located on the right side of the seat upwards. While seated, lift the lever to lower the chair. To raise the chair, lift the lever while standing. The seat height is adjustable

from 44 cm to 54.6 cm (17.3 inches to 21.5 inches).

- **Backrest Recline:** The backrest can be reclined between 90 and 135 degrees. Pull the recline lever on the left side of the seat upwards to adjust the angle. Release the lever to lock the backrest in your desired position.
- **Retractable Footrest:** Pull the footrest out from underneath the seat when desired. Push it back in when not in use.
- **Lumbar Massage Function:** The lumbar pillow is equipped with a massage function. Connect the USB cable from the pillow to a USB power source (e.g., computer, power bank) to activate the massage.
- **360-Degree Swivel and Mobility:** The chair features 360-degree swivel capability and smooth-rolling caster wheels for easy movement across various floor surfaces.



Figure 3: Illustration of the adjustable backrest and 360-degree swivel feature.



Figure 4: Detailed view of the angle adjusting lever and height adjustment mechanism.



Figure 5: Ergonomic design of the chair, illustrating support for various body parts.

Maintenance

Regular maintenance will prolong the life and appearance of your gaming chair:

- **Cleaning:** Wipe clean with a damp cloth. For stubborn stains on the PVC leather, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary to maintain stability and prevent squeaking.
- **Caster Wheels:** Keep the caster wheels free of hair, dust, and debris to ensure smooth rolling.
- **General Care:** Avoid exposing the chair to direct sunlight or extreme temperatures, which can damage the material.

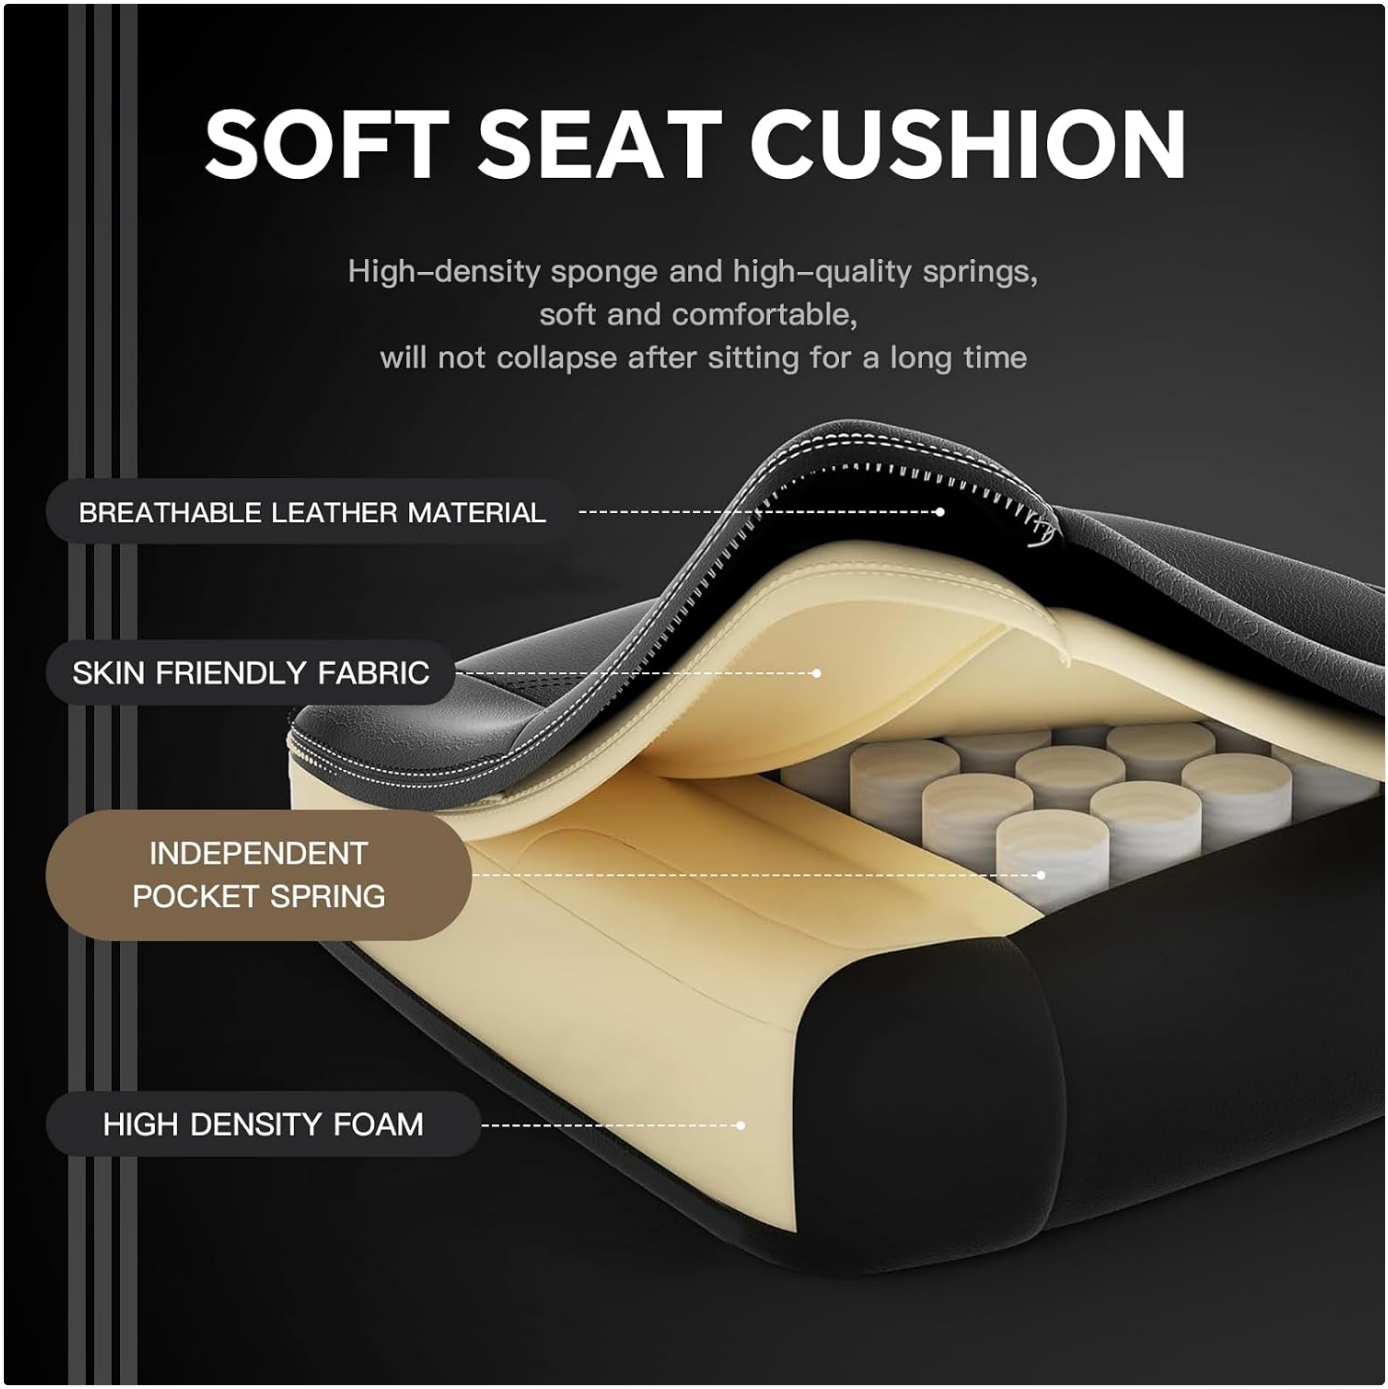

Figure 6: Construction of the soft seat cushion, highlighting its durable and comfortable layers.

Troubleshooting

Problem	Possible Cause	Solution
Chair is wobbly or unstable.	Loose screws or uneven assembly.	Check and tighten all assembly screws, especially those connecting the backrest to the seat and the mechanism to the seat. Ensure the base is on a flat surface.
Chair does not adjust height smoothly.	Gas lift issue or obstruction.	Ensure the gas lift lever is fully engaged. Check for any obstructions around the gas lift cylinder. If the issue persists, the gas lift may need replacement.
Backrest does not recline or lock.	Recline mechanism obstruction or damage.	Check for any objects obstructing the recline mechanism. Ensure the lever is fully pulled and released. If damaged, contact customer service.

Problem	Possible Cause	Solution
Caster wheels do not roll smoothly.	Debris in wheels or damaged casters.	Remove any hair, dust, or debris from the wheels. If wheels are damaged, they may need to be replaced.
Lumbar massage pillow not working.	USB power issue or cable disconnection.	Ensure the USB cable is securely connected to a working power source. Try a different USB port or power bank.

Specifications

Feature	Detail
Model Number	9
Product Dimensions (D x W x H)	52D x 63W x 132H Centimetres (20.5D x 24.8W x 52H inches)
Seat Adjustable Height	44 to 54.6 cm (17.3 to 21.5 inches)
Item Weight	19 Kilograms (41.9 lbs)
Maximum Weight Capacity	113 kg (250 lbs)
Material	Premium PVC Leather, Sponge, Thick Steel Frame, Nylon Base
Back Style	Cushion Back
Special Features	Adjustable Height, Adjustable Lumbar, Arm Rest, Swivel, Upholstered Leather, Retractable Footrest, Massage Function
Recline Function	90-135 degrees
Caster Wheels	360-degree swivel, quiet rolling



Figure 7: Detailed product dimensions for the WOTSTA Gaming Chair.

Warranty and Customer Support

WOTSTA is committed to providing high-quality products and excellent customer service.

- **30-Day Guarantee:** Free replacement or money back for any reason within 30 days of purchase.
- **12-Month Warranty:** Free replacement for damaged or defective parts within 12 months of purchase.
- **Contact Us:** For any dissatisfaction with our products or service, please contact WOTSTA customer service. You can typically find contact information on the product packaging or through the retailer's website where you purchased the chair.

© 2025 WOTSTA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question