Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun MBS5

Braun Series 5 MBS5 Wet & Dry Electric Shaver User Manual

Model: MBS5

Important Safety Information

For your safety, please read all instructions carefully before using the Braun Series 5 MBS5 electric shaver.

- Avoid use near water while charging.
- Allow shaver to cool before storing.
- Always follow cleaning instructions to prevent bacterial growth.
- Do not submerge or use while charging.
- Keep the appliance dry when not in use and during charging.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Product Overview



Image: The Braun Series 5 MBS5 electric shaver, its travel case, and a precision trimmer attachment. The shaver features a black finish and an ergonomic design.

The Braun Series 5 MBS5 is a Wet & Dry electric shaver designed for efficient and comfortable shaving. It features SensoFlex technology for adapting to facial contours and AutoSense technology for adjusting motor power to beard density. This model includes a travel kit and a precision trimmer attachment.



Image: A visual breakdown of the Braun Series 5 MBS5's shaving technology, including SensoFoil, Middle Trimmer, and MicroComb. It also illustrates the EasyClean System and Precision Trimmer, alongside the shaver, travel case, and trimmer attachment.

Setup and Initial Use

1. Unpacking and Inspection

- Carefully remove all components from the packaging.
- Verify that the package contains the shaver, charging cable, precision trimmer attachment, and travel case.
- Inspect the shaver and accessories for any visible damage.

2. Charging the Shaver

1. Ensure the shaver is dry before charging.
2. Connect the charging cable to the shaver and then to a power outlet.
3. The charging indicator lights on the shaver will illuminate to show charging progress. A full charge provides approximately 50 minutes of shaving time.

4. For optimal battery life, allow the shaver to fully charge before its first use.

3. Attaching the Precision Trimmer

- Ensure the shaver is turned off.
- Remove the standard shaving head by pressing the release buttons on the sides.
- Align the precision trimmer attachment with the shaver body and press it firmly until it clicks into place.



Image: The Braun Series 5 MBS5 shaver and its precision trimmer attachment neatly stored within the included travel case, ready for transport.

Operating Instructions

1. Basic Shaving Technique

- Press the power button to turn on the shaver.
- Hold the shaver at a right angle (90°) to your skin.
- Stretch your skin and shave against the direction of beard growth.
- Apply gentle, even pressure. The SensoFlex head will adapt to your facial contours, and AutoSense technology

will adjust power for an efficient shave.



Image: A man demonstrating the use of the Braun Series 5 MBS5 electric shaver on his face, illustrating proper handling during a shave.

2. Wet & Dry Use

The Braun Series 5 MBS5 is designed for both dry shaving and wet shaving with foam or gel, or even in the shower. For a refreshing shave, apply shaving foam or gel to your skin before use. Ensure the shaver is not connected to the power supply when used with water.

3. Using the Precision Trimmer

Once the precision trimmer attachment is installed, turn on the shaver. Use the trimmer for shaping sideburns, mustaches, or for pre-trimming longer hairs before a close shave. Move the trimmer slowly and carefully over the desired area.

Maintenance and Cleaning

1. EasyClean System

The EasyClean system allows for quick and easy cleaning without removing the shaver head.

1. Turn on the shaver.
2. Rinse the shaver head under warm running water until all residue is flushed out.
3. Turn off the shaver and shake off excess water.
4. Allow the shaver to air dry completely before storing or recharging.

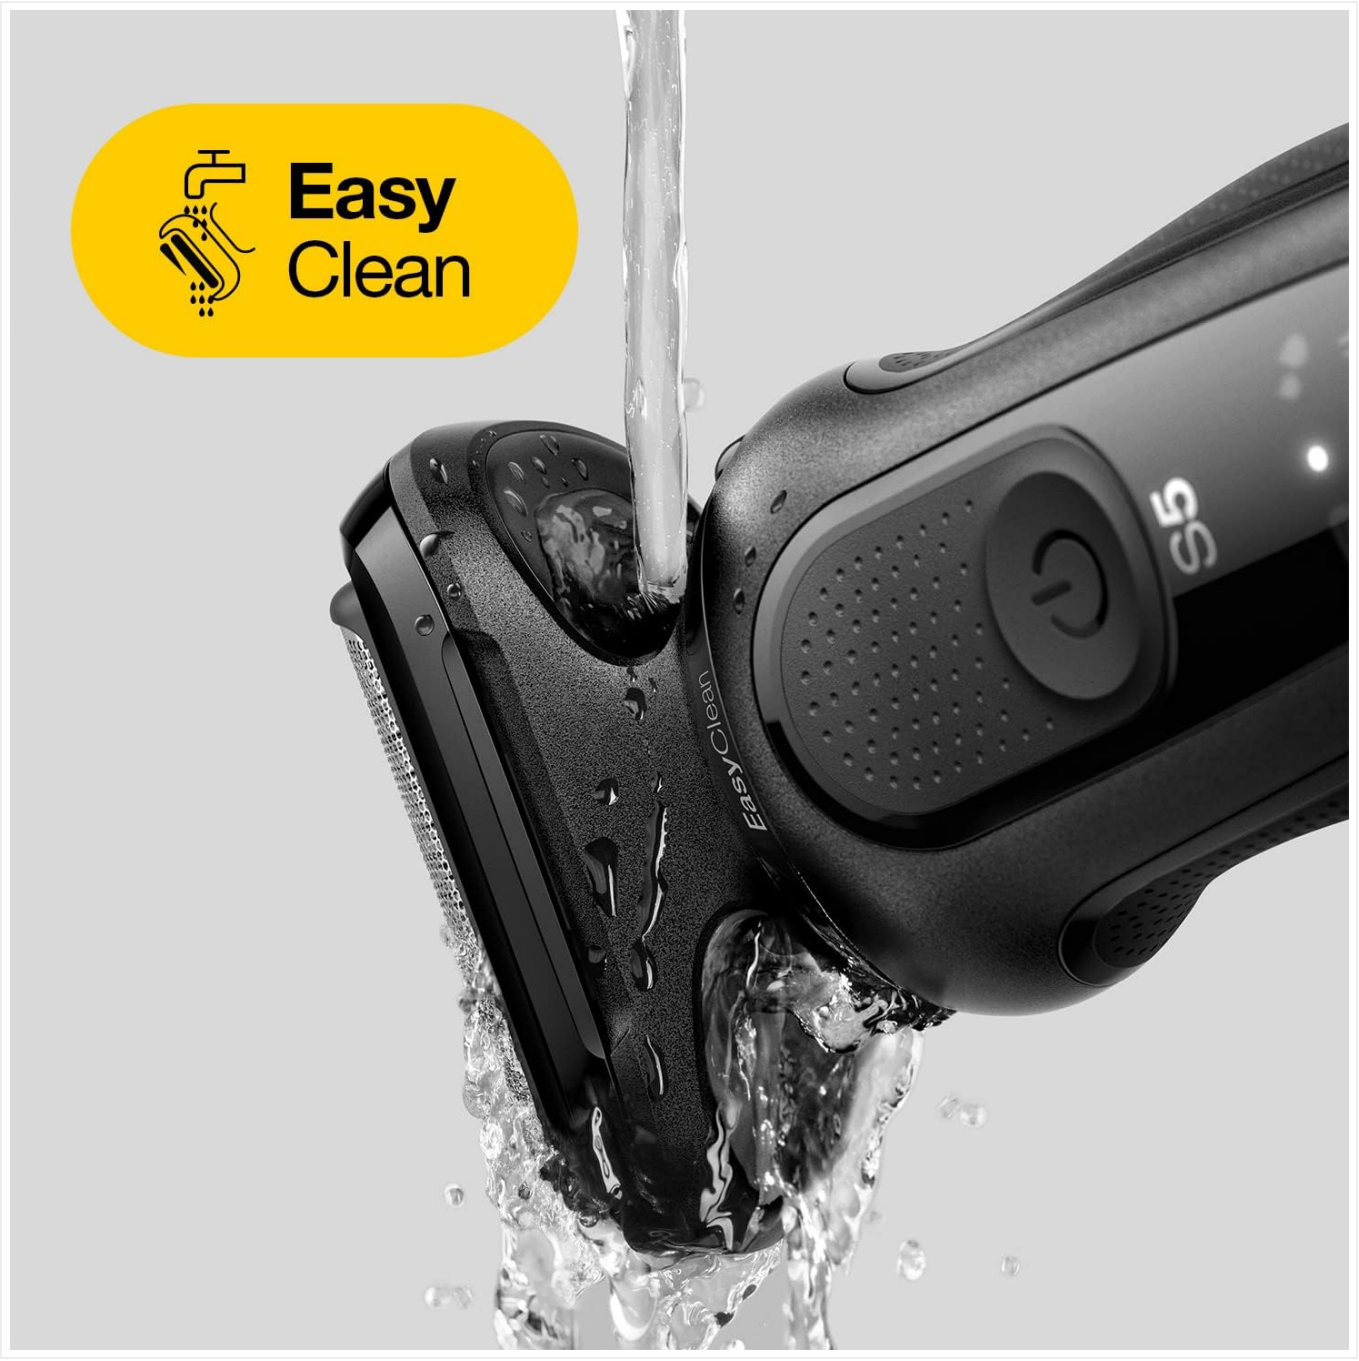


Image: The Braun Series 5 MBS5 electric shaver head being rinsed under running water, demonstrating its EasyClean feature for convenient cleaning.

2. Deep Cleaning

For a more thorough cleaning, especially if using shaving foam or gel:

1. Turn off the shaver and remove the shaving head.
2. Rinse both the shaver head and the inner part of the shaver body under warm running water.
3. Use a small brush (if provided) to remove stubborn hair particles. Do not use the brush on the foil itself, as this can damage it.
4. Allow all parts to air dry completely before reassembling.

3. Replacing Shaver Parts

To maintain optimal shaving performance, it is recommended to replace the shaver head (foil and cutter block) every 18 months, or when wear is visible. Replacement parts can be purchased from authorized Braun retailers.

Troubleshooting

- **Shaver not turning on:**
  - Ensure the shaver is fully charged. Connect it to the charger for at least 5 minutes.
  - Check if the power button is pressed firmly.
- **Poor shaving performance / pulling hairs:**
  - The shaver head might be worn out. Consider replacing the foil and cutter block.
  - Ensure the shaver head is clean and free of hair residue.
  - Shave against the direction of hair growth and stretch the skin.
  - The battery might be low. Charge the shaver fully.
- **Charging indicator not working:**
  - Check the charging cable and power outlet for proper connection.
  - Ensure the shaver is dry before charging.
- **Shaver making unusual noise:**
  - Clean the shaver head thoroughly.
  - Ensure the shaver head is correctly attached.
  - If the noise persists, the shaver head might be damaged and require replacement.

Specifications

Brand	Braun
Model Name	MBS5
Item Model Number	Braun Series 5 MBS5
Head Type	Foil
Number of Blades	3
Blade Material	Stainless Steel
Battery Life	50 minutes
Included Components	Battery, Precision Trimmer Attachment, Travel Case
Product Dimensions	26.2 x 13.7 x 8.8 cm
Item Weight	0.61 Kilograms
Country of Origin	Germany

Warranty and Support

Braun products are manufactured to meet high standards of quality, functionality, and design. This product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For further assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please visit the official Braun website or contact Braun customer service. Contact information can typically be found on the Braun website or in your product documentation.

Visit Braun's Official Website

© 2023 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C4HQ6DBF

More documents and user manuals: **https://manuals.plus/**