Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun 9510s

Braun Series 9 PRO+ 9510s Electric Shaver User Manual

Model: 9510s | Brand: Braun

1. Product Overview

The Braun Series 9 PRO+ 9510s is a premium electric shaver designed for men, offering an exceptionally close, comfortable, and precise shave. Engineered with advanced technology, it adapts to various beard types and lengths, ensuring optimal performance.



Image 1.1: Braun Series 9 PRO+ 9510s electric shaver, showcasing the device, charging base, and travel case.

Key Features:

- **Ultimate Shaving Performance:** The Series 9 PRO+ provides Braun's best shave, ensuring closeness, comfort, and precision.
- **Versatile for All Beard Lengths:** Equipped with 5 perfectly synchronized shaving elements, it delivers exceptional efficiency and skin comfort on 1, 3, or 7-day beards, even on longer, difficult hairs.
- **Precision ProTrimmer:** Features a surgical-grade steel ProTrimmer for maximum cutting efficiency on hard-to-reach areas like sideburns, mustaches, and under the nose.
- **Durable and Waterproof:** 100% made in Germany and 100% waterproof, designed for years of reliable use.
- **Long-lasting Battery:** Powerful Li-Ion battery provides 60 minutes of cordless shaving.
- **Wet & Dry Use:** Suitable for use on wet or dry skin.
- **AutoSense Technology:** With 10,000 sonic vibrations, the Series 9 PRO+ captures more hair in every stroke for maximum efficiency and skin comfort.



Image 1.2: Detailed view of the Braun Series 9 PRO+ shaving head, highlighting the 5 shaving elements and the integrated ProTrimmer.

2. Important Safety Warnings

To ensure safe operation and prevent injury or damage, please read and adhere to the following safety instructions:

- **Electrical Safety:** Do not use the appliance near water while it is connected to the power supply. Always ensure the appliance is completely dry before connecting it to the charger.
- **Water Exposure:** The shaver is waterproof and can be used in wet conditions (e.g., shower), but it must be disconnected from the power supply before use in water.
- **Charging:** Use only the charger provided by Braun. Do not attempt to charge the device with unauthorized chargers.
- **Children:** This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person

responsible for their safety.

- **Damage:** Do not use the shaver if the foil or trimmer is damaged, as this may cause skin irritation or injury.
- **Disassembly:** Do not attempt to open or repair the appliance yourself. Contact authorized service personnel for any repairs.

3. Package Contents

Upon unpacking your Braun Series 9 PRO+ 9510s, please verify that all the following items are included:

- Braun Series 9 PRO+ Electric Shaver
- Fabric Travel Case
- Charging Stand
- Cleaning Brush
- Charging Cable (Power Cord)



Image 3.1: All components included in the Braun Series 9 PRO+ 9510s package.

4. Setup

4.1 Initial Charging

1. Before the first use, fully charge your Braun Series 9 PRO+ shaver.
2. Connect the charging cable to the charging stand or directly to the shaver.
3. Plug the power adapter into an electrical outlet.
4. The battery indicator lights on the shaver will illuminate to show charging progress. A full charge typically takes about 1 hour and provides up to 60 minutes of cordless shaving.

4.2 Assembling the Shaver

The shaver comes pre-assembled. Ensure the shaving head is securely attached before use. To remove or attach the shaving head, press the release buttons on the sides of the shaver head and gently pull or push into place.

5. Operating Instructions

5.1 General Shaving

The Braun Series 9 PRO+ can be used for both wet and dry shaving.

- **Dry Shaving:** For best results, shave before washing your face. Ensure your skin is completely dry.
- **Wet Shaving:** You can use the shaver with foam, gel, or under the shower. Apply shaving foam or gel to your face, then shave as usual. Rinse the shaver head under running water during and after use.

Hold the shaver at a right angle (90°) to your skin and shave against the direction of hair growth. Stretch your skin with your free hand to ensure a smooth surface.



Image 5.1: Demonstrating the shaver's effectiveness on 1, 3, and 7-day beard growth.

5.2 Using the ProTrimmer

The integrated ProTrimmer is ideal for precise styling of sideburns, mustaches, and for trimming hair in hard-to-reach areas like under the nose.

1. To activate the ProTrimmer, slide the trimmer switch upwards.
2. Position the trimmer at the desired angle and carefully trim the hair.
3. After use, slide the trimmer switch back down to retract the trimmer.

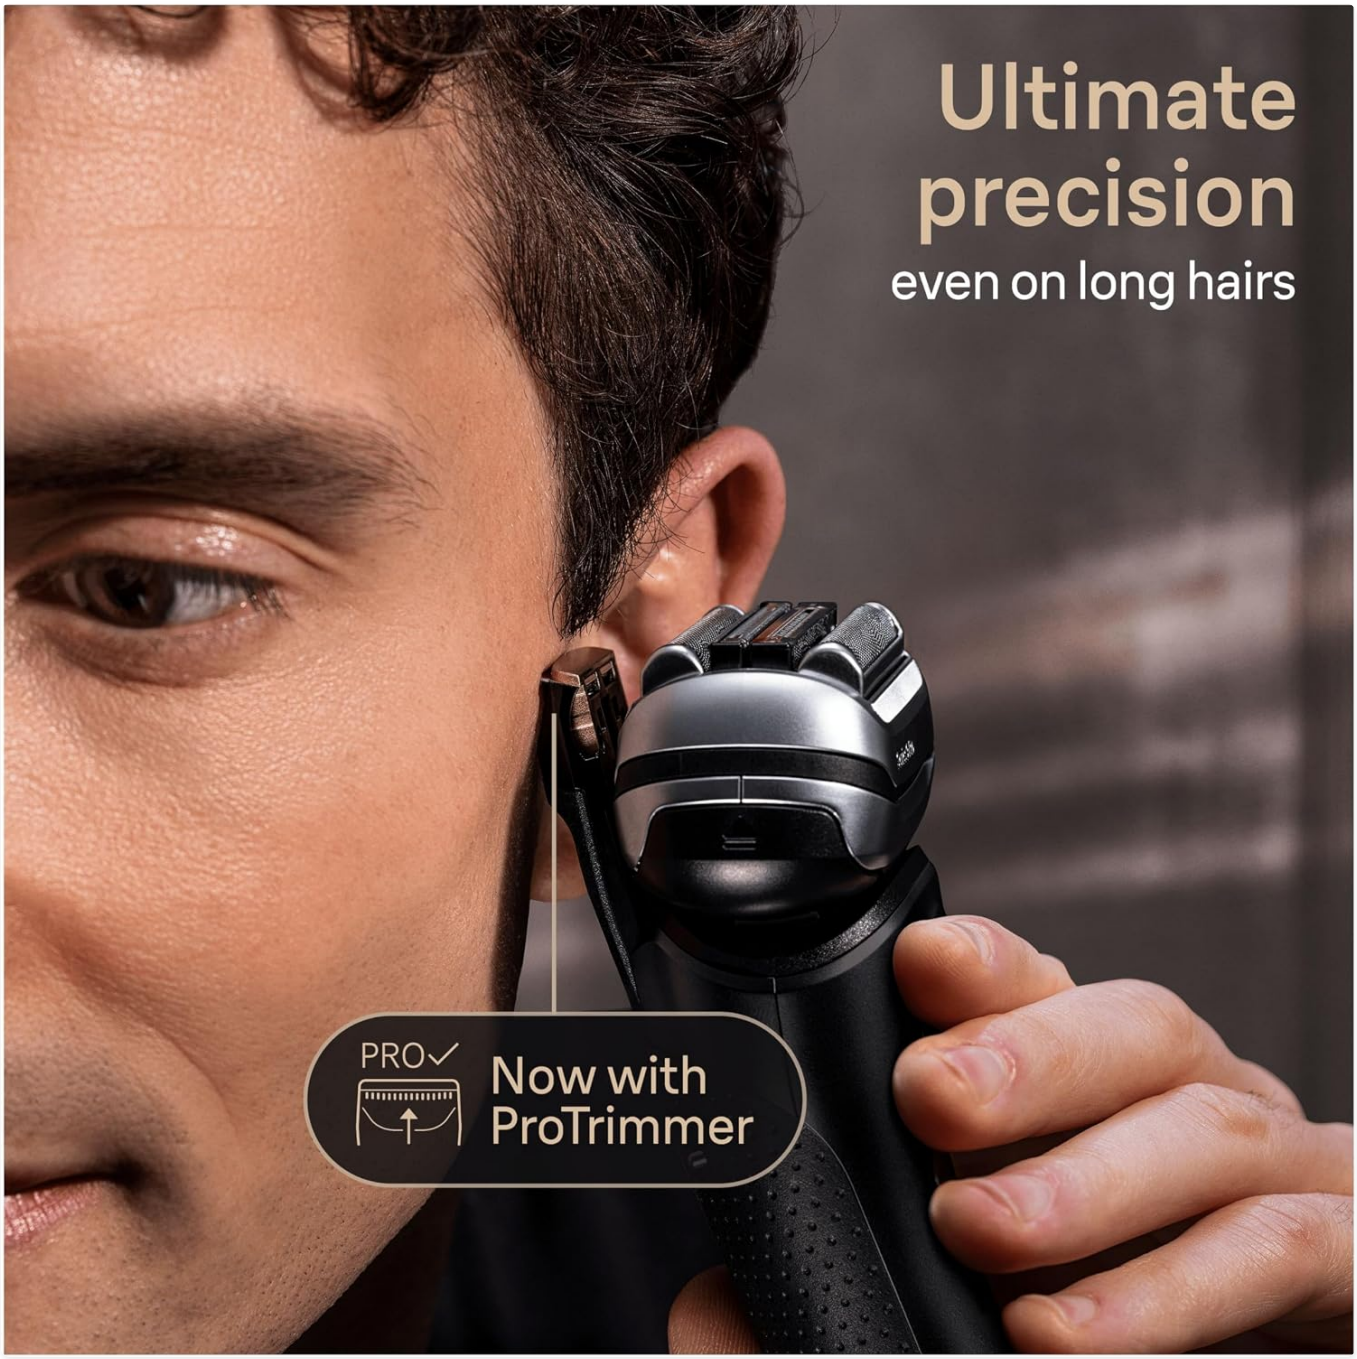

Image 5.2: Illustrating the use of the ProTrimmer for ultimate precision on longer hairs and detailing.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

6.1 Daily Cleaning

1. After each use, switch off the shaver.
2. Remove the shaving head by pressing the release buttons.
3. Tap out any excess hair from the shaving head and the shaver body.
4. Rinse the shaving head and the shaver body under hot running tap water until all residue is removed. You can use liquid soap for a more thorough clean.
5. Shake off excess water and let the shaver air dry before reattaching the shaving head or storing.

6.2 Deep Cleaning (Weekly/Bi-weekly)

For a more thorough clean, especially if using shaving foam/gel:

- Apply a drop of liquid soap to the shaving head and switch on the shaver for a few seconds.
- Rinse the shaving head thoroughly under running water until all foam is gone.
- Allow the shaver to dry completely before storing.

6.3 Replacing Shaving Parts

For continued 100% performance, replace the shaver cassette (foil and cutter block) every 18 months or when worn. Replacement parts are available from authorized Braun retailers or online.

7. Troubleshooting

If you encounter any issues with your Braun Series 9 PRO+ shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 5 minutes, then try again. Ensure the charging cable is properly connected.
Poor shaving performance / pulling hairs.	Shaver head is dirty or worn out.	Clean the shaver head thoroughly. If performance does not improve, replace the shaver cassette (foil and cutter block).
Battery indicator not working.	Connection issue or internal fault.	Ensure the shaver is correctly placed on the charging stand or connected directly. If the issue persists, contact customer support.
Shaver makes unusual noise.	Debris inside or damaged part.	Clean the shaver thoroughly. If the noise continues, do not use the shaver and contact customer support.

If the problem persists after attempting these solutions, please contact Braun Customer Service for further assistance.

8. Specifications

Feature	Detail
Model Name	Series 9 Pro+
Model Number	9510s
Brand	Braun
Power Source	Battery Powered (Li-ion)
Battery Life	Up to 60 minutes
Charging Time	Approx. 1 hour for full charge

Feature	Detail
Special Feature	Waterproof (Wet & Dry Use)
Blade Material	Stainless Steel
Color	Black
Weight	455 Grams
Dimensions (L x W x H)	25.2 x 13.8 x 7 cm
Manufactured In	Germany

9. Warranty and Support

9.1 Warranty Information

The Braun Series 9 PRO+ 9510s comes with a manufacturer's warranty. As indicated, it may be eligible for up to a **5-year warranty**. Please refer to the warranty card included in your product packaging or visit the official Braun website for specific terms and conditions, as well as registration details.

This warranty typically covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, neglect, accidents, alteration, or unauthorized repair.

9.2 Customer Support

For technical assistance, troubleshooting, or to inquire about replacement parts, please contact Braun Customer Service:

- **Online Support:** Visit the official Braun website (e.g.,www.braun.com) for FAQs, product registration, and support contact information specific to your region.
- **Phone Support:** Refer to your product packaging or the Braun website for local customer service phone numbers.

When contacting support, please have your product model number (9510s) and purchase date ready.

© 2023 Braun. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C5JS7JYK

More documents and user manuals: **https://manuals.plus/**