Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hoffen HO-18

Hoffen Electronic Digital Bathroom Scale HO-18 - Instruction Manual

Model: HO-18

Important Safety Information

- Always place the scale on a hard, flat surface for accurate measurements. Avoid carpets or uneven floors.
- Do not use the scale in wet or slippery conditions to prevent falls.
- Do not jump on the scale or subject it to excessive force, as this may damage the tempered glass platform.
- Keep the scale away from extreme temperatures and direct sunlight.
- This scale is for personal use only and not intended for commercial or medical purposes.

Product Overview

The Hoffen Electronic Digital Bathroom Scale HO-18 is designed for accurate body weight measurement. It features a high-precision strain gauge sensor system, a durable tempered glass platform, and an easy-to-read LCD display. The scale automatically turns on and off, and includes indicators for low battery and overload conditions.



Image: Hoffen Electronic Digital Bathroom Scale HO-18, showcasing its sleek design and digital display.

Key Features:

- High precision strain gauge sensor system for accurate readings.
- Thick tempered glass platform (280 x 280 mm) for durability and safety.
- Weight capacity: 2.3 kg to 180 kg (approximately 5 lbs to 400 lbs).
- Large, backlit LCD display for clear readability.
- Automatic turn-on and turn-off functionality.
- Low battery and overload indicators.
- Non-slip feet for stability on various surfaces.
- Displays room temperature in Celsius.

What's in the Box

- 1 x Hoffen Electronic Digital Bathroom Scale HO-18

- 2 x AAA Batteries

Setup

1. Battery Installation

Locate the battery compartment on the underside of the scale. Open the cover and insert the two AAA batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.

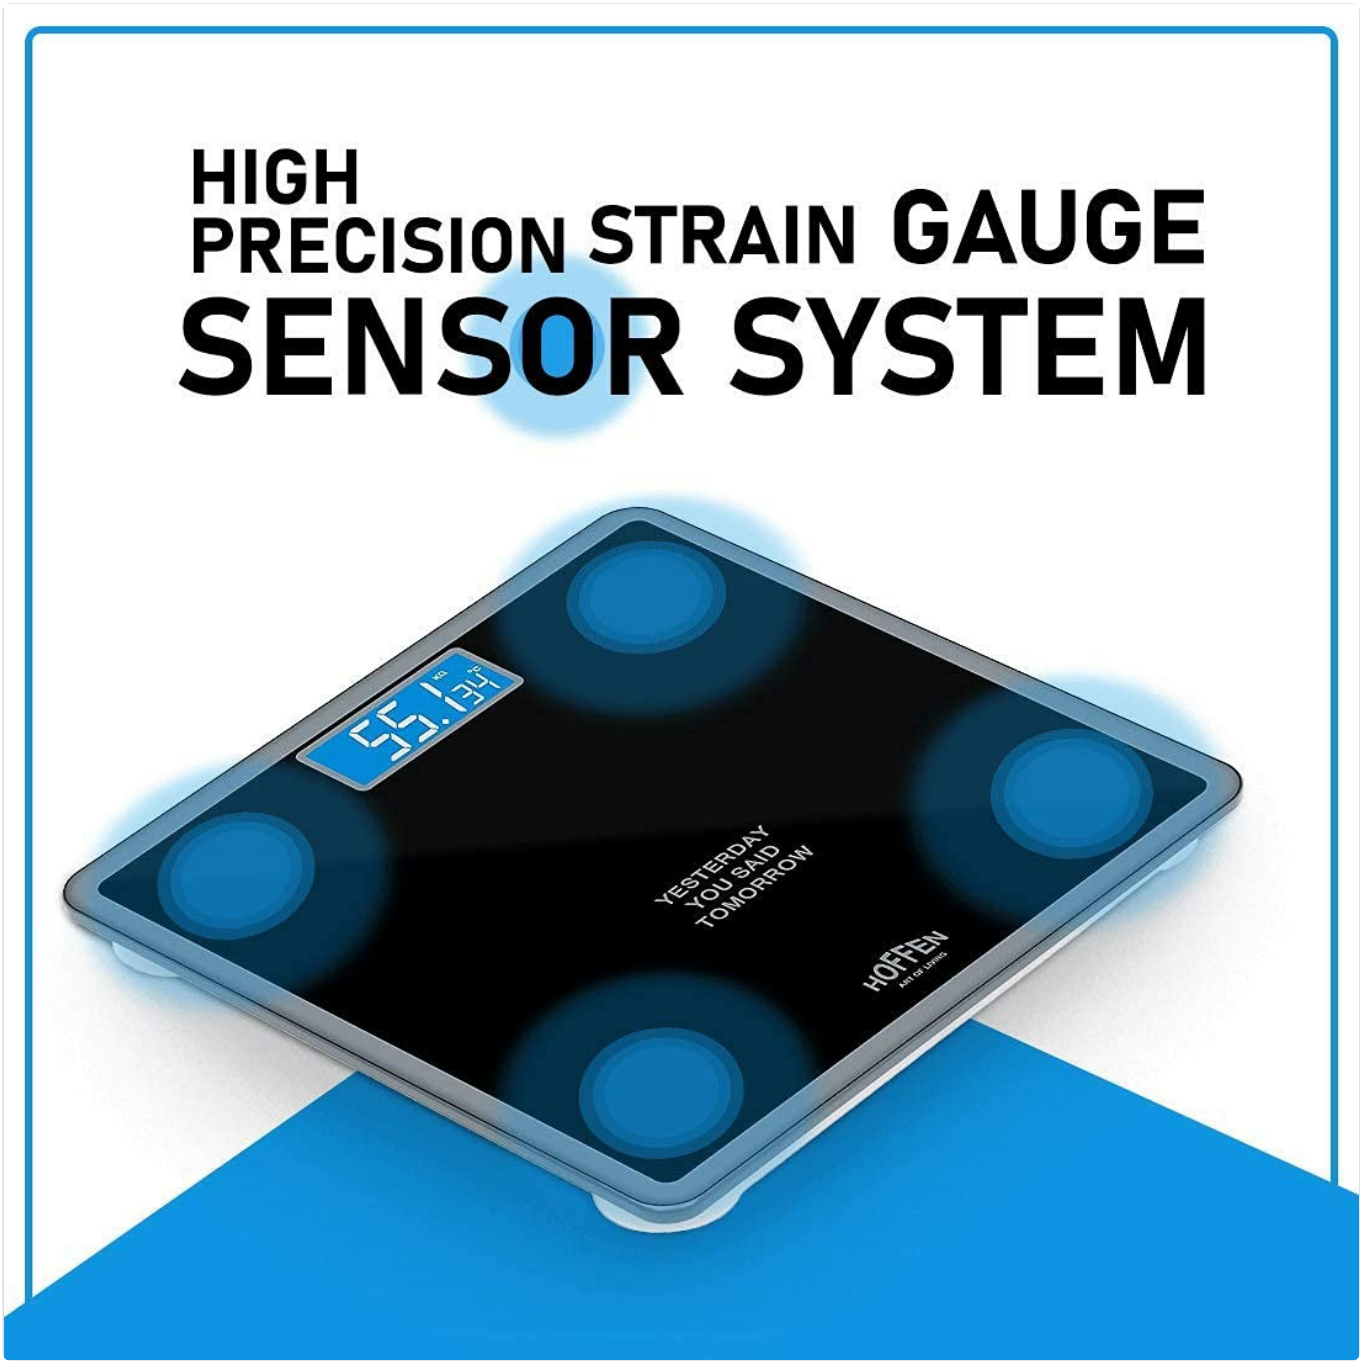

Image: A hand inserting AAA batteries into the battery compartment on the underside of the Hoffen scale.

2. Initial Calibration

Before first use, or if the scale has been moved, it needs to be calibrated. Place the scale on a hard, flat surface. Gently step onto the scale with one foot, then immediately step off. The display will show '0.0' or '0.00' and then turn off. The scale is now calibrated and ready for use.

▶ **Watch video online**
Hoffen Premium Scale

Video: This video demonstrates the setup process, including battery installation and initial calibration, as well as general operation of the Hoffen Electronic Digital Scale.

Operating Instructions

1. Taking a Measurement

1. Ensure the scale is on a hard, flat surface.
2. Gently step onto the scale with bare feet, centering your weight.
3. Stand still. The display will show your weight, which will blink when the measurement is stable and finalized.
4. Step off the scale. It will automatically turn off after a few seconds.

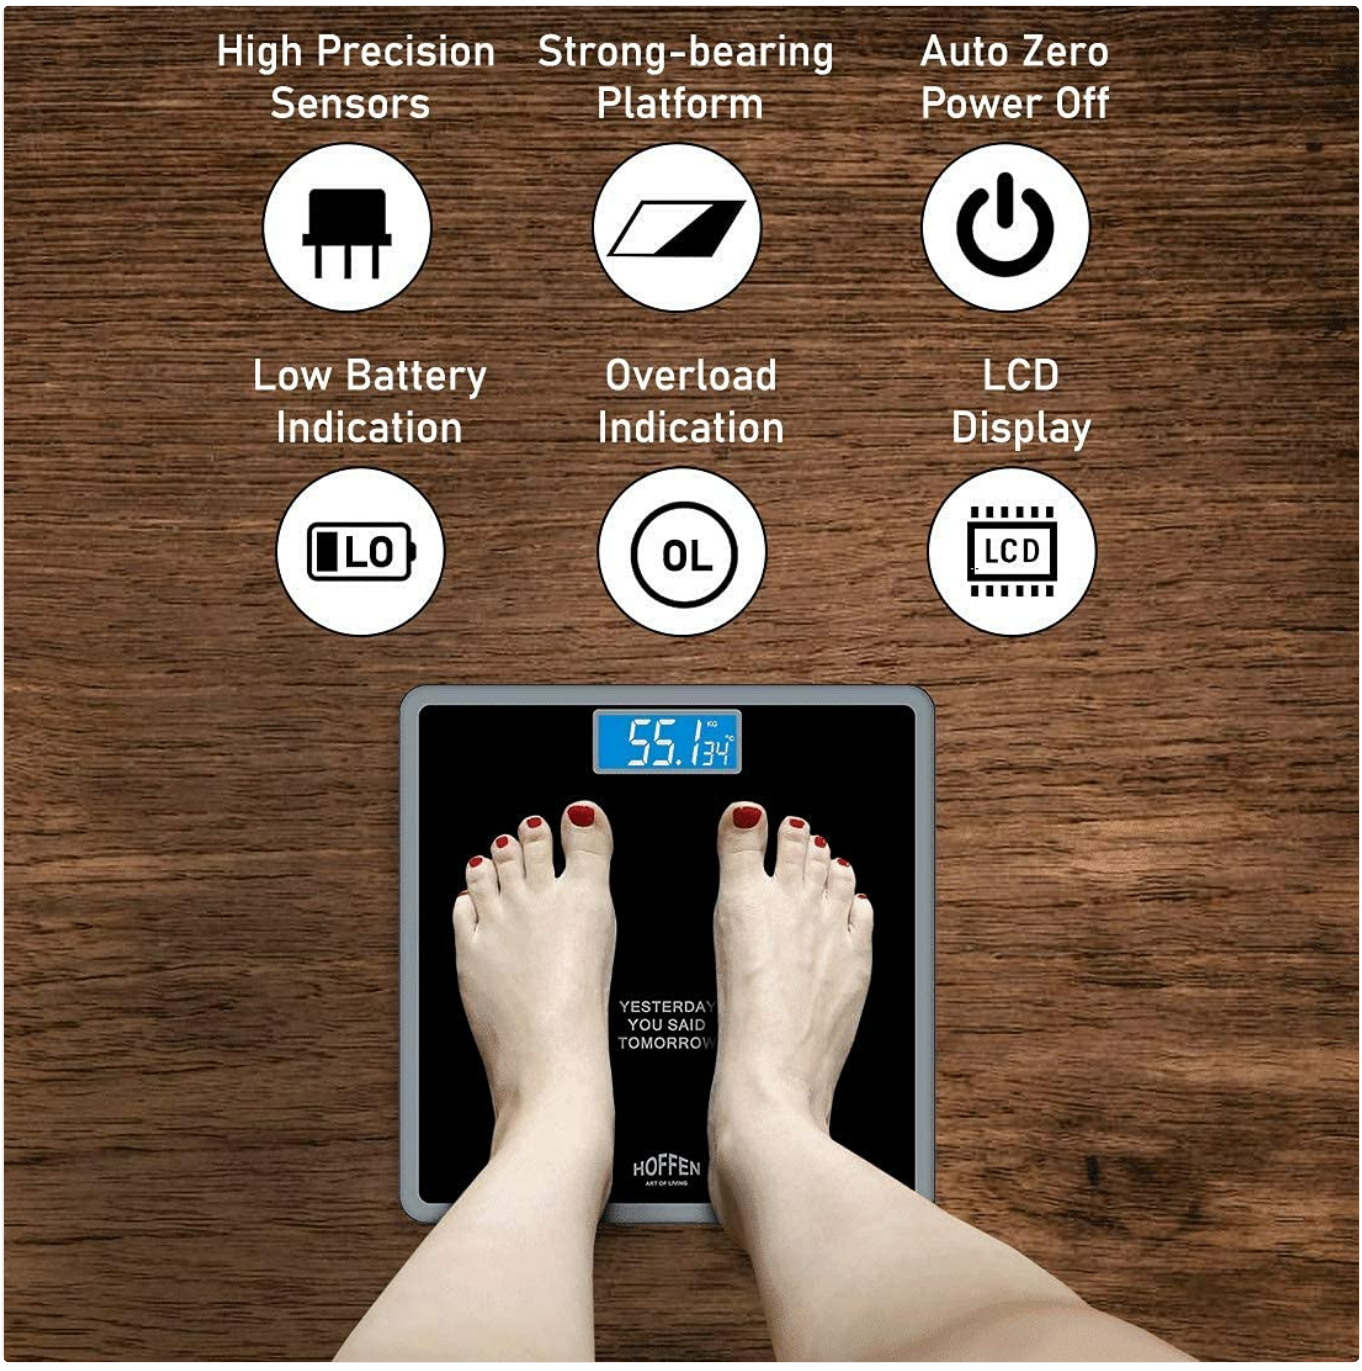

Image: A person's feet positioned on the Hoffen digital scale, ready for a weight reading.

2. Changing Weight Units

The scale can display weight in kilograms (kg), pounds (lb), or stones (st). To change the unit, locate the unit button on the underside of the scale, near the battery compartment. Press this button to cycle through the available units.

3. Understanding Display Indicators

- **LO:** Indicates low battery. Replace the batteries with new AAA batteries.
- **OL:** Indicates an overload. The weight on the scale exceeds its maximum capacity (180 kg / 400 lb). Remove weight immediately to prevent damage.
- **ERR:** Indicates a measurement error. This can occur if the scale is moved during measurement, or if there's an issue with calibration. Re-calibrate the scale and try again.



Image: A close-up view of the Hoffen scale's LCD display, showing a clear weight reading and unit indicator.

Maintenance

- **Cleaning:** Wipe the scale with a soft, damp cloth. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a cool, dry place. Avoid storing it vertically or placing heavy objects on it when not in use.
- **Battery Replacement:** Replace batteries promptly when the 'LO' indicator appears to ensure continued accurate operation.

Troubleshooting

Problem	Possible Cause	Solution
Inaccurate or inconsistent readings	Scale on uneven surface; not calibrated; moved during measurement.	Ensure scale is on a hard, flat surface. Re-calibrate by stepping on and off once. Stand still during measurement.
Display shows 'LO'	Low battery.	Replace both AAA batteries.
Display shows 'OL'	Weight exceeds maximum capacity.	Remove weight from the scale. The maximum capacity is 180 kg (400 lb).
Display shows 'ERR'	Measurement error.	Step off the scale, wait for it to turn off, then re-calibrate and try again.
No display	Batteries incorrectly installed or dead.	Check battery polarity. Replace batteries if necessary.

Specifications

Feature	Detail
Brand	Hoffen
Model	HO-18 (BS-6039)
Weight Limit	180 Kilograms (approx. 400 lbs)
Measurement Type	Kilograms, Pounds, Stones
Display Type	LCD with Backlit Display
Special Features	Strain Gauge Sensor System, Auto On/Off, Low Battery Indicator, Overload Indicator, Room Temperature Display
Material Type	Tempered Glass, Plastic
Item Weight	900 Grams
Platform Dimensions	280 x 280 mm

Warranty and Support

This Hoffen Electronic Digital Bathroom Scale HO-18 comes with a manufacturer's warranty. For specific warranty terms, duration, and to register your product, please refer to the warranty card included in your product packaging or visit the official Hoffen website.

If you encounter any issues or require technical assistance, please contact Hoffen customer support. Contact details can typically be found on the product packaging, in the warranty information, or on the Hoffen brand website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C5MFJNY8

More documents and user manuals: **https://manuals.plus/**