Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

iHome iBT840BZ

iHome iBT840BZ Waterproof Bluetooth Speaker User Manual

Model: iBT840BZ

1. Introduction

Thank you for purchasing the iHome iBT840BZ Waterproof Bluetooth Speaker. This speaker is designed for portable use, offering wireless audio streaming, vibrant color-changing LED lights, and a durable waterproof and sand-proof design. Please read this manual carefully to ensure proper use and to maximize your experience with the device.

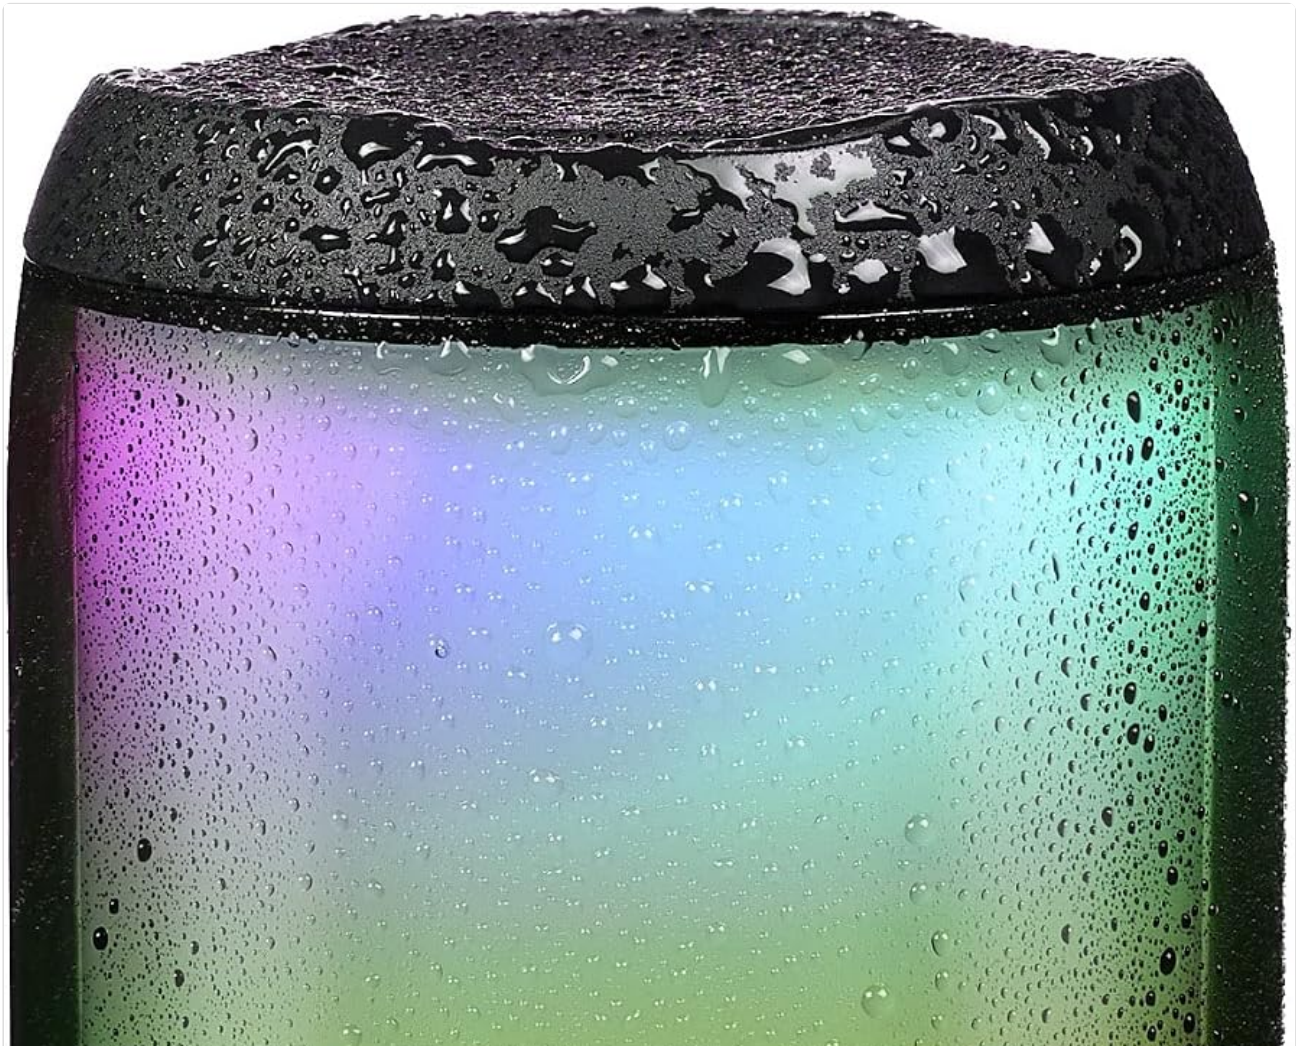




Image: The iHome iBT840BZ speaker, showcasing its waterproof design and dynamic LED lighting.

2. Package Contents

- iHome iBT840BZ Waterproof Bluetooth Speaker
- USB-C to USB-A Charging Cable
- User Manual (this document)

3. Product Overview

Familiarize yourself with the speaker's components and controls.



Image: An infographic detailing the speaker's features including 360° LED color, rechargeable battery, passive subwoofer, and wireless stereo capability.

Controls and Ports:

- **Power Button:** Turns the speaker on/off.
- **Volume Down Button (-):** Decreases volume.
- **Play/Pause Button (►):** Plays or pauses audio. Also used for Bluetooth pairing and light mode selection.
- **Volume Up Button (+):** Increases volume.
- **USB-C Charging Port:** Located under a protective flap, used for charging the internal battery.
- **LED Indicator:** Provides status feedback for power, charging, and Bluetooth connection.

4. Setup

4.1. Charging the Speaker

1. Locate the USB-C charging port on the speaker, usually protected by a rubber flap.
2. Open the flap and connect the included USB-C to USB-A charging cable to the speaker.
3. Connect the USB-A end of the cable to a powered USB port (e.g., computer, USB wall adapter).
4. The LED indicator will show charging status. A full charge provides up to 25 hours of playback.
5. Once fully charged, disconnect the cable and ensure the rubber flap is securely closed to maintain waterproof integrity.

4.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off and you hear an audible prompt.

5. Operation

5.1. Bluetooth Pairing

The speaker can stream audio wirelessly from Bluetooth-enabled devices up to 100 feet away.

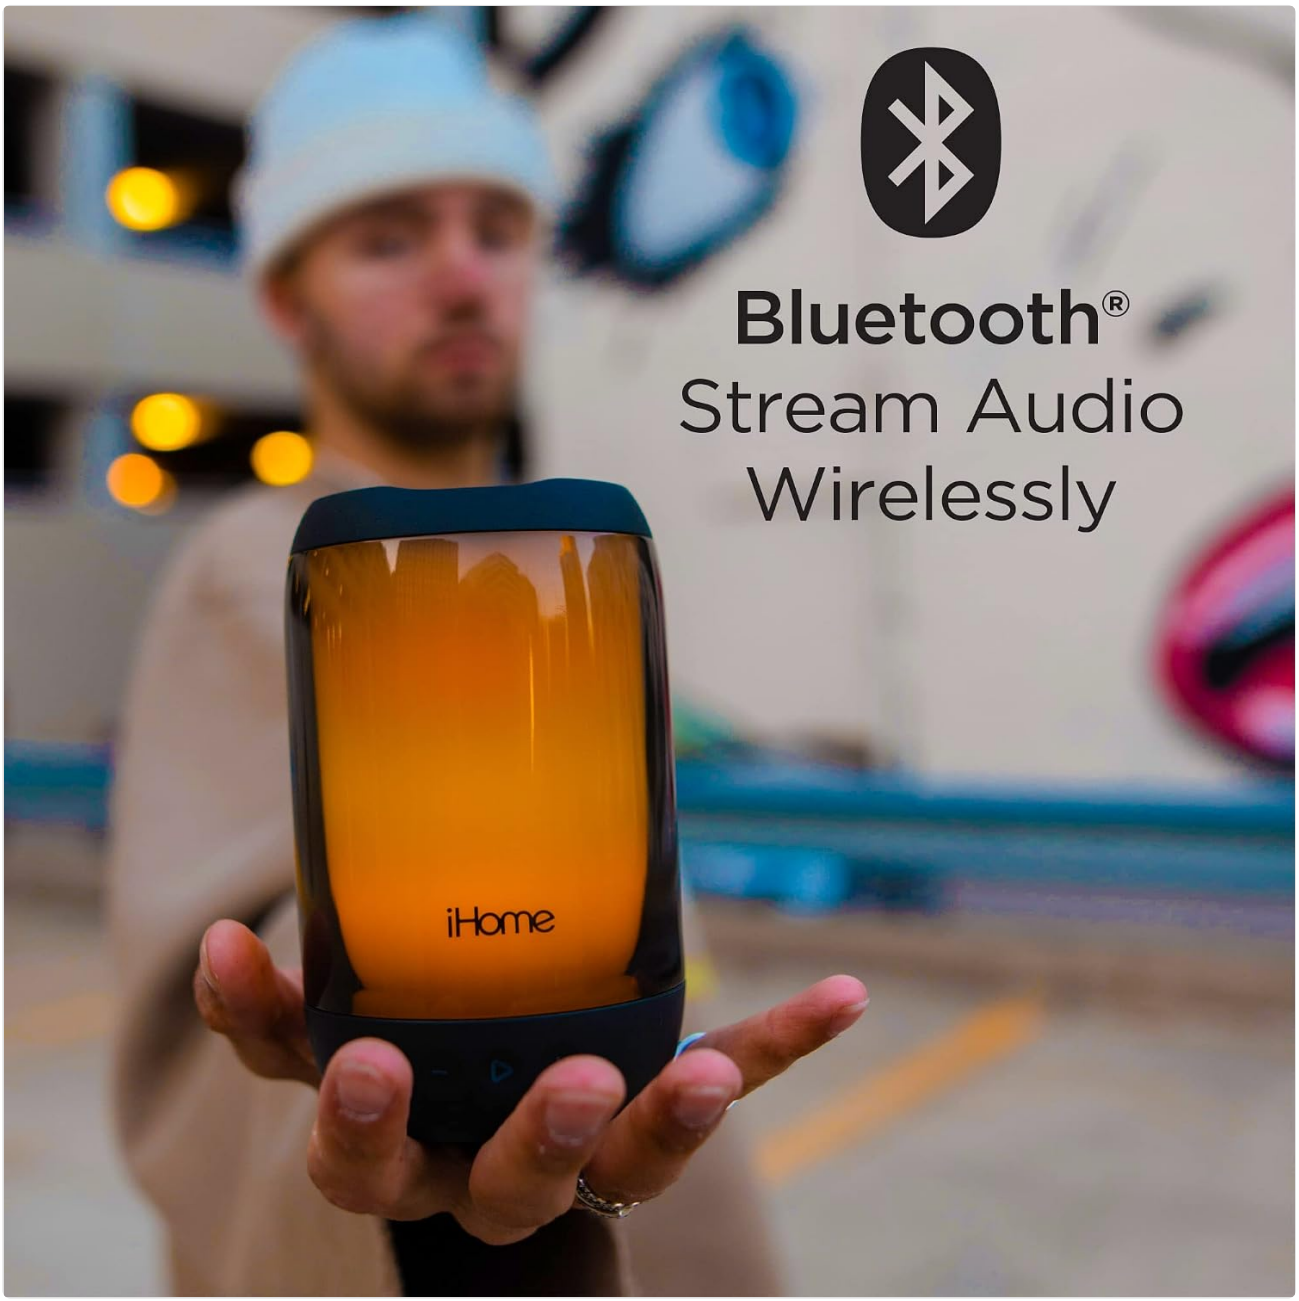


Image: The iHome iBT840BZ speaker being held, illustrating its Bluetooth wireless streaming capability.

1. Ensure the speaker is powered on and in pairing mode (the LED indicator will typically flash).
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings.
3. Search for available devices and select "iHome iBT840BZ" from the list.
4. Once paired, the LED indicator will show a solid light, and you will hear a confirmation tone.
5. If pairing fails, turn off the speaker and your device's Bluetooth, then repeat the steps.

5.2. Audio Playback

- **Play/Pause:** Press the Play/Pause button once to play or pause audio.
- **Volume Adjustment:** Press the Volume Up (+) button to increase volume, and the Volume Down (-) button to decrease volume.

5.3. Light Modes

The speaker features 11 full-spectrum LED color modes.



Image: Multiple iHome iBT840BZ speakers showcasing the variety of 360° LED color modes available.

- To cycle through the light modes (e.g., lamp, candle, slow fade, favorite color, pulse to music), press the dedicated Light Mode button (often integrated with the Play/Pause button or a separate button, refer to your specific unit's markings).
- Select the desired mode by pressing the button repeatedly.

5.4. Waterproof and Sand-proof Usage

The iBT840BZ is certified IP67 waterproof and sand-proof, making it suitable for outdoor and wet environments.



Image: The iHome iBT840BZ speaker demonstrating its waterproof and floatable capabilities in water near a beach.

Image: The iHome iBT840BZ speaker floating in water, highlighting its waterproof, sandproof, and floatable features.

- Ensure all port covers are securely closed before exposing the speaker to water or sand.
- The speaker is designed to float, making it ideal for use near pools or bodies of water.
- After exposure to water, wipe the speaker dry before opening any port covers for charging.

5.5. Wireless Stereo Pairing (TWS)

You can connect two iBT840BZ speakers together for an immersive stereo sound experience.

1. Ensure both iBT840BZ speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be your primary speaker), press and hold the Bluetooth pairing button (often the Play/Pause button) for a few seconds until you hear a prompt indicating TWS pairing mode.
3. The primary speaker will search for the second speaker.
4. Once connected, you will hear a confirmation tone, and the LED indicators on both speakers will change to reflect the stereo connection.

5. Now, connect your Bluetooth device to the primary speaker as described in section 5.1. Audio will play in stereo across both speakers.

6. Maintenance

- **Cleaning:** Use a soft, damp cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place when not in use. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in active use.
- Ensure all port covers are sealed when not charging to protect against dust and water.

7. Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.
No sound from the speaker.	Check if the speaker is paired correctly via Bluetooth. Increase the volume on both the speaker and your connected device. Ensure the audio source is playing.
Cannot pair with Bluetooth device.	Ensure the speaker is in pairing mode. Turn off and on Bluetooth on your device. Move the speaker closer to your device. Clear previous Bluetooth connections on your device.
Lights are not working or stuck.	Try cycling through the light modes again. Power off and restart the speaker.
Poor audio quality or disconnections.	Ensure your device is within the 100-foot Bluetooth range. Avoid obstacles between the speaker and your device. Check for interference from other wireless devices.

8. Specifications

Feature	Detail
Model Name	iBT840BZ
Speaker Type	Outdoor
Special Features	Shockproof, Waterproof, Color Changing Lights
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	Up to 100 Feet
Water Resistance Level	Waterproof (IP67 certified)
Power Source	Battery Powered (2 Lithium Ion batteries included)
Battery Life	Up to 25 Hours
Audio Output Mode	Stereo

Feature	Detail
Product Dimensions	4.02"D x 4.02"W x 6.26"H
Item Weight	1.81 pounds (0.82 Kilograms)
Material	Plastic
Manufacturer	SDI Technologies

9. Warranty Information

The iHome iBT840BZ Waterproof Bluetooth Speaker comes with a**1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10. Support

For further assistance, technical support, or warranty inquiries, please visit the official iHome website or contact their customer service department. Refer to the product packaging or iHome's official website for the most current contact information.

© 2025 iHome. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C6B5C1S8

More documents and user manuals: **https://manuals.plus/**