Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Eureka NEW400

Eureka NEW400 Wet Dry Vacuum Cleaner User Manual

Model: NEW400

Introduction

The Eureka NEW400 Cordless Wet Dry Vacuum Cleaner is designed to simplify your floor cleaning routine by vacuuming and mopping simultaneously. This versatile appliance is ideal for sealed hard floors, including hardwood, tile, laminate, vinyl, and marble, effectively tackling both wet and dry messes, including pet-related spills and debris. Its self-cleaning system ensures convenient maintenance, providing a fresh and streak-free clean every time.



Image: Eureka NEW400 Wet Dry Vacuum Cleaner and included accessories.

Key Features

- **Self-Propelled Function:** Facilitates effortless movement during cleaning, reducing user fatigue.
- **Simultaneous Vacuuming and Mopping:** Cleans wet and dry messes on sealed hard floors in one pass, saving time and effort.
- **Dual-Tank System:** Keeps clean water and dirty water separate, ensuring you always clean with fresh water.
- **Hands-Free Self-Cleaning:** Automatically flushes the inner tubing and brush roller for quick and mess-free maintenance.
- **Cordless Operation:** Provides up to 30 minutes of cleaning power on a single charge.
- **Fingertip Controls:** Easy-to-use buttons for power, mode selection (Low/High), and self-cleaning.
- **Lightweight Design:** Enhances maneuverability and ease of use.



Image: Vacuum and Mop in One Step. The Eureka NEW400 cleans wet and dry messes simultaneously.



Image: One-Touch Self-Clean. Press and hold the self-cleaning button for 3 seconds to activate.



Image: Hard Floor Multi-Surface Cleaning. Effective on hardwood, tile, laminate, vinyl, and marble.



Image: Up to 30 Minutes of Runtime. The durable battery provides ample cordless cleaning power.



Image: Fast, Streak-Free Drying. Leaves floors completely dry and streak-free in minutes.

What's in the Box

The Eureka NEW400 package includes all necessary components for immediate use and maintenance:

- Cordless Hard Floor Vacuum Mop Cleaner (Main Unit)
- Accessory Rack
- Roller Brush
- Cleaning Solution (1 bottle)
- Base (Self-cleaning storage tray)
- Filter Assembly (includes 2 sponges)
- Charger Adapter
- Cleaning Brush
- User Manual

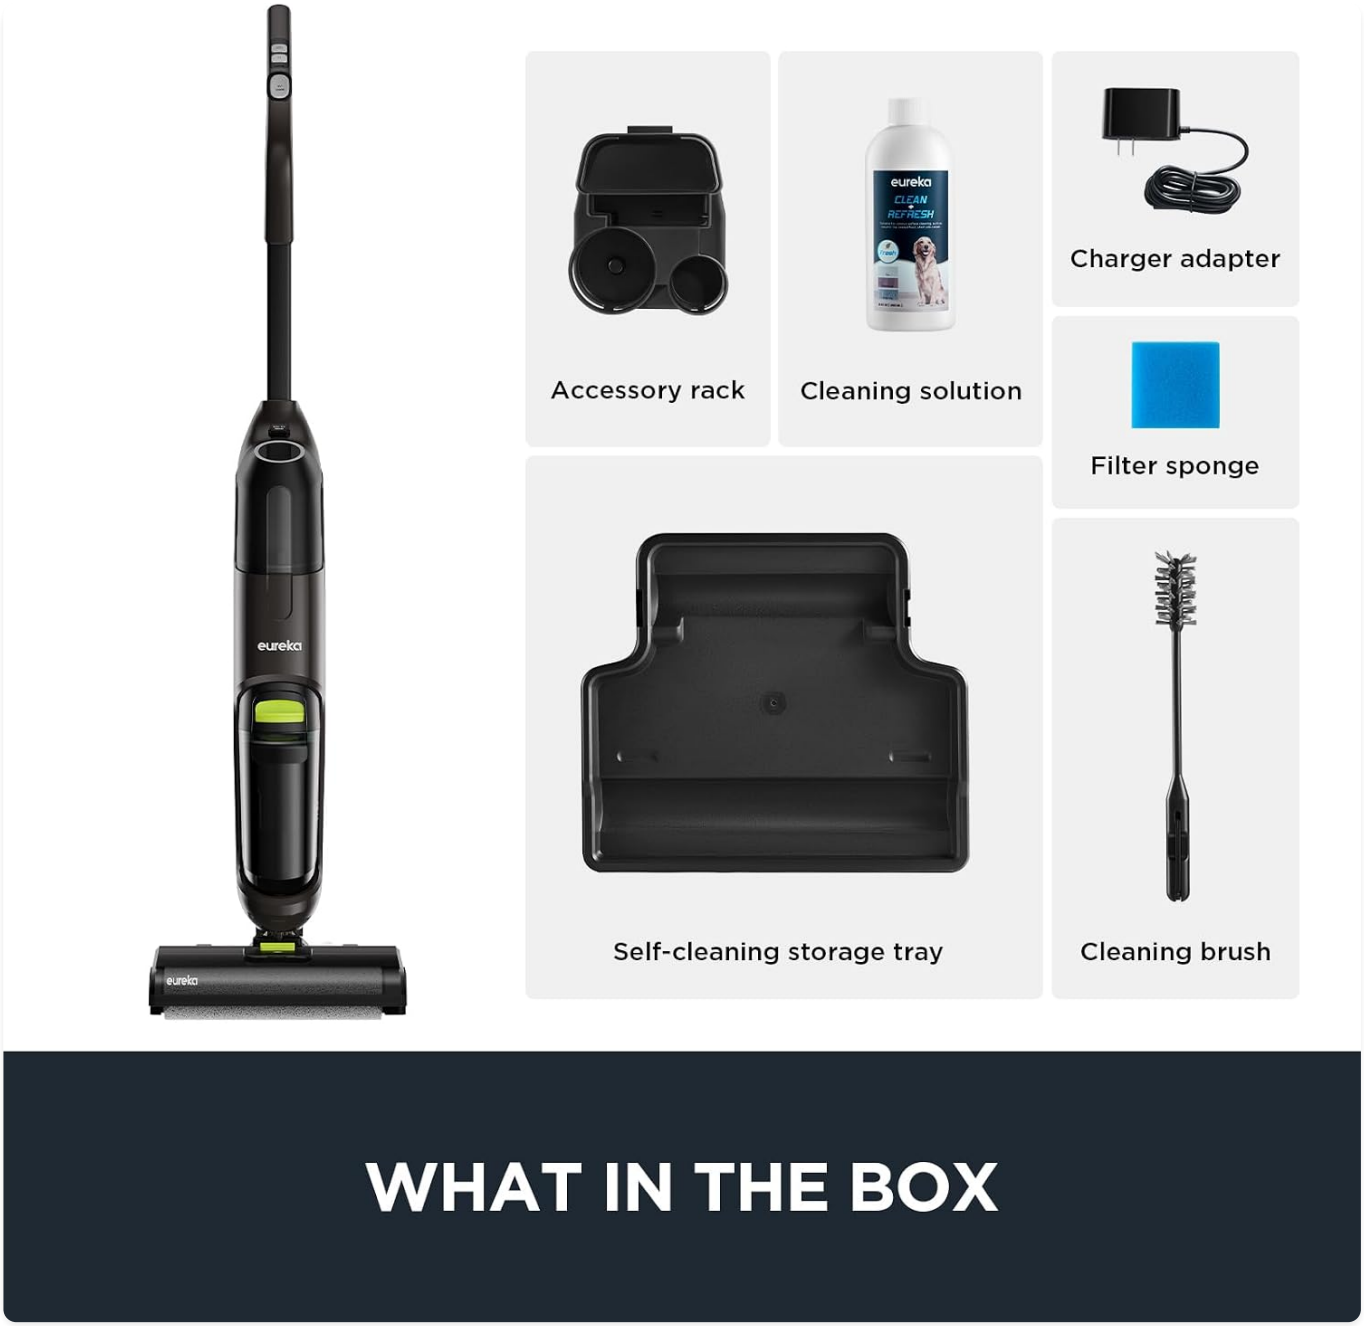

Image: All components included in the Eureka NEW400 packaging.

Setup Guide

Unpacking

Carefully remove all components from the packaging. Ensure all listed items in the 'What's in the Box' section are present. Retain packaging for future storage or transport.

Assembly

1. Insert the handle into the main body of the vacuum until it clicks securely into place.
2. Ensure the clean water tank and dirty water tank are correctly installed.
3. Verify the brush roller is properly seated in its compartment.

Charging

Before first use, fully charge the vacuum. Place the main unit on the charging base and connect the charger adapter to a power outlet. The battery indicator lights on the handle will show charging status. A full charge takes approximately 6 hours.

Operating Instructions

Filling the Clean Water Tank

1. Press the water tank release button located on the top of the main unit and remove the clean water tank.
2. Open the tank cap and fill with warm water up to the MAX line.
3. Add one or two capfuls of the provided Eureka cleaning solution. Note: The Eureka cleaning solution is highly concentrated.
4. Securely close the tank cap and reinsert the tank into the main unit until it clicks.

Powering On and Selecting Mode

- Press the power button on the handle to turn on the vacuum.
- Press the mode button (Low/High) to switch between cleaning intensities based on your floor's needs.

Cleaning Process

Tilt the vacuum back to engage the brush roller and begin cleaning. The self-propelled function will assist in moving the unit forward, making cleaning effortless. Guide the vacuum across your sealed hard floors to vacuum and mop simultaneously. For optimal results, move the vacuum in a steady, overlapping pattern.

Your browser does not support the video tag.

Video: Learn about the great uses of Eureka NEW400 vacuum in cafes! This video demonstrates the Eureka NEW400's effectiveness in a commercial setting, showcasing its ability to clean various spills and debris on hard floors with ease.

Maintenance

Self-Cleaning Function

After each use, it is recommended to run the self-cleaning cycle to maintain optimal performance and hygiene:

1. Place the vacuum on its self-cleaning storage tray.
2. Ensure there is sufficient clean water in the clean water tank.
3. Press and hold the 'SELF CLEANING' button on the handle for 3 seconds. The self-cleaning cycle will begin, flushing the inner tubing and brush roller.
4. Once the cycle is complete, proceed to empty the dirty water tank.

Emptying the Dirty Water Tank

Regularly empty the dirty water tank to prevent odors and maintain suction power:

1. Press the dirty water tank release button and remove the tank.
2. Carefully open the tank and dispose of the dirty water and collected debris.
3. Rinse the dirty water tank thoroughly with clean water.
4. Reinstall the empty and clean dirty water tank.

Cleaning the Brush Roller and Filter

For deeper cleaning or if the self-cleaning function isn't sufficient:

- Remove the brush roller cover and then the brush roller itself.
- Use the provided cleaning brush to remove any tangled hair or debris from the brush roller. Rinse under running

water if necessary.

- Remove the filter assembly from the dirty water tank. Rinse the filter sponges under running water until clean.
- Allow the brush roller and filter components to air dry completely before reassembling.

Troubleshooting Common Issues

Problem	Possible Cause	Solution
No Power	Battery is depleted.	Charge the vacuum fully (approx. 6 hours).
Poor Suction	Dirty water tank is full or clogged.	Empty and clean the dirty water tank and filter.
Poor Suction	Brush roller is tangled or dirty.	Clean the brush roller. Run self-cleaning cycle.
Streaks on Floor	Dirty water tank is full or solution is too concentrated.	Empty dirty water tank. Use recommended amount of cleaning solution.
Unpleasant Odor	Dirty water tank or brush roller not cleaned.	Empty and thoroughly clean dirty water tank and brush roller after each use.

Product Specifications

Feature	Specification
Brand	Eureka
Model Name	Wet Dry Vacuum Cleaner Cordless
Model Number	NEW400
Special Feature	Portable, Wet/Dry, Lightweight, Cordless, Self-Propelled
Filter Type	Sponge
Is Cordless?	Yes
Capacity	600 Milliliters
Wattage	120 watts
Runtime	30 minutes
Charging Time	6 Hours
Recommended Uses	Hard floor, Indoor
Color	Black
Product Dimensions	9.45"L x 11.42"W x 46.85"H

Feature	Specification
Item Weight	8.7 pounds
Noise Level	80 dB
UPC	840296503867

Warranty and Support

The Eureka NEW400 Wet Dry Vacuum Cleaner comes with a 2-year limited vacuum cleaner warranty and a 12-month limited battery warranty. For detailed warranty information, troubleshooting assistance, or to contact customer support, please refer to the official user manual PDF or visit the Eureka website.

You can also access the User Guide (PDF) here.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question