Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Orbegozo WF 0247

Orbegozo WF 0247 Wall Fan User Manual

Model: WF 0247 | Brand: Orbegozo

1. Product Overview

The Orbegozo WF 0247 wall fan is designed to provide efficient air circulation and cooling for various indoor spaces. With its powerful motor and versatile features, it ensures a comfortable environment during warmer days. This manual provides essential information for the safe and effective operation, installation, and maintenance of your fan.

Key Features:

- Power: 60 W
- Blade Diameter: 45 cm with 5 blades
- 3 Ventilation Speeds
- Oscillating Movement for wide air distribution
- Tiltable Head for directional airflow
- Timer function: 0.5 to 7.5 hours
- 3 Operating Modes: Normal, Nature, and Sleep
- Remote Control for convenient operation
- LED indicator lights
- Protective grille for safety

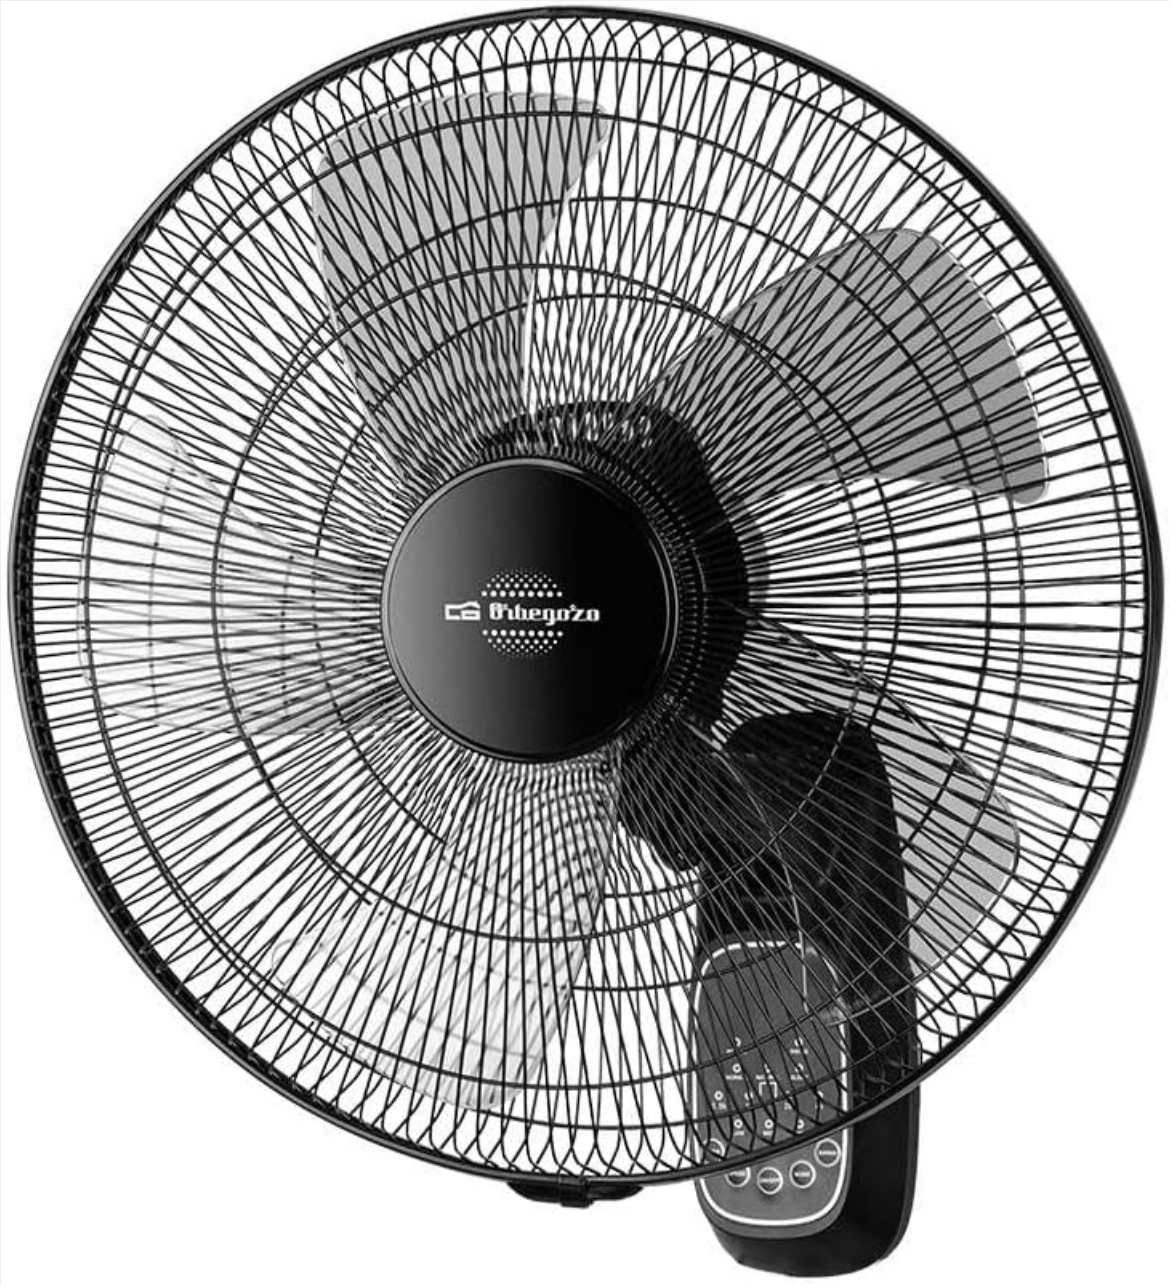

Figure 1: Front view of the Orbegozo WF 0247 Wall Fan.

2. Safety Instructions

- Always unplug the fan from the power outlet before cleaning, maintenance, or relocation.
- Do not insert fingers or any objects through the grille when the fan is operating.
- Ensure the power cord is not damaged or pinched.
- Keep the fan away from water or excessive humidity. Do not use in bathrooms or wet areas.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the fan outdoors.
- Place the fan on a stable, flat surface or mount securely to a wall as instructed.

3. Setup and Installation

The Orbegozo WF 0247 is a wall-mounted fan. Proper installation is crucial for safety and optimal performance.

3.1 Unpacking

1. Carefully remove all packaging materials.
2. Check that all components are present: fan unit, protective grilles, blades, mounting bracket, remote control, and user manual.
3. Inspect the fan for any signs of damage during transit. Do not operate if damaged.

3.2 Wall Mounting

Choose a suitable location on a sturdy wall, ensuring it is within reach of a power outlet and provides optimal airflow for the room.

1. Identify the mounting points on the fan's bracket.
2. Mark the drilling locations on the wall using the bracket as a template.
3. Drill holes and insert appropriate wall anchors (not included, depending on wall type).
4. Secure the mounting bracket to the wall using screws.
5. Attach the fan unit securely to the mounted bracket, ensuring it clicks into place or is fastened according to the design.



Figure 2: Side view illustrating the wall mounting mechanism.

3.3 Assembly of Blades and Grilles

1. Attach the rear protective grille to the motor housing.
2. Mount the fan blades onto the motor shaft, ensuring they are securely fastened.
3. Attach the front protective grille, aligning it with the rear grille and securing it with the provided clips or screws.



Figure 3: Detail of the protective grille and handle for adjustment.

4. Operating Instructions

The Orbegozo WF 0247 can be operated using the control panel on the fan unit or the included remote control.

4.1 Control Panel



Figure 4: Fan Control Panel.

- **ON/OFF:** Press to turn the fan on or off.
- **SPEED:** Cycles through Low, Medium, and High fan speeds.
- **MODE:** Selects between Normal, Nature, and Sleep modes.
    - **Normal:** Constant airflow at the selected speed.
    - **Nature:** Simulates natural breeze by varying fan speed.
    - **Sleep:** Gradually decreases fan speed over time for quiet operation during sleep.
- **TIMER:** Sets the operating time before the fan automatically turns off. Options include 0.5, 1, 2, and 4 hours, which can be combined for up to 7.5 hours (e.g., 0.5h + 1h + 2h + 4h).
- **SWING:** Activates or deactivates the oscillating movement of the fan head for wider air distribution.

4.2 Remote Control



Figure 5: Remote Control.

The remote control provides convenient access to all fan functions from a distance. Ensure batteries are correctly inserted (batteries not included). The buttons on the remote control correspond to the functions on the fan's control panel.

- **ON/OFF:** Power on/off.
- **SPEED:** Adjust fan speed.
- **MODE:** Change operating mode.
- **TIMER:** Set the auto-off timer.
- **SWING:** Control oscillation.

4.3 Adjusting Fan Head Tilt

The fan head can be manually tilted up or down to direct airflow to a specific area. Gently adjust the head to the desired angle.

5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and efficient operation of your fan.

- **Always unplug the fan** from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the plastic parts.
- To clean the fan blades, remove the front protective grille. Carefully wipe the blades with a damp cloth. Ensure blades are completely dry before reassembling the grille.
- Do not immerse the fan in water or allow water to drip into the motor housing.
- For storage, clean the fan thoroughly and store it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

6. Troubleshooting

If you encounter issues with your Orbegozo WF 0247 fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; power cord not plugged in; power outlet faulty.	Ensure the fan is properly plugged into a working power outlet. Check circuit breaker.
Weak airflow.	Fan blades or grilles are dirty; fan is too far from the area needing cooling.	Clean the fan blades and grilles. Reposition the fan closer to the desired area.
Fan is noisy.	Loose parts; fan not mounted securely; foreign object in grille.	Check for loose screws or components. Ensure the fan is securely mounted. Inspect and remove any obstructions from the grilles or blades.
Remote control not working.	Dead batteries; remote not pointed at receiver; obstruction.	Replace batteries. Ensure direct line of sight to the fan's receiver. Remove any obstructions.

7. Specifications

Feature	Detail
Brand	Orbegozo
Model	WF 0247
Power	60 W
Voltage	230 V ~ 50 Hz
Blade Diameter	45 cm (5 blades)
Speed Settings	3 (Low, Medium, High)
Operating Modes	Normal, Nature, Sleep
Timer	0.5 to 7.5 hours

Feature	Detail
Special Features	Oscillating movement, Tiltable head, Remote control, LED indicators
Dimensions (approx.)	20f. x 45an. x 45al. cm (Depth x Width x Height)

8. Warranty and Support

Orbegozo products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Orbegozo website. In case of technical issues or for customer support, please contact Orbegozo customer service through the contact details provided in your product documentation or on their official website.
For further assistance, you may visit the Orbegozo store on Amazon:Orbegozo Store

© 2024 Orbegozo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C7MVKZT7

More documents and user manuals: **https://manuals.plus/**