Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AGARO 34025

AGARO Regency Vintage Kettle 1.8L Instruction Manual

Model: 34025

1. Introduction

Thank you for choosing the AGARO Regency Vintage Kettle. This 1.8-liter electric kettle is designed for efficient water heating with a classic aesthetic. It features a temperature gauge, automatic shut-off, and boil-dry protection for safe and convenient use. Please read this manual thoroughly before operating the appliance and retain it for future reference.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The kettle is for household use only.

- Ensure the lid is securely closed before operating.
- Do not fill above the MAX line or below the MIN line.
- This appliance is equipped with boil-dry protection. If the kettle is accidentally switched on without water, it will automatically shut off. Allow it to cool down before refilling.

3. Product Components

Familiarize yourself with the parts of your AGARO Regency Vintage Kettle:

- Kettle Body (Stainless Steel)
- Lid with Handle
- Curved Cool-Touch Handle
- Spout with Filter
- Water Level Indicator with MAX/MIN markings
- Analog Temperature Gauge
- Power Switch (ON/OFF)
- LED Indicator Light
- 360° Rotational Power Base with Cord Storage



Figure 1: Main view of the AGARO Regency Vintage Kettle, showcasing its classic design and key features.



Figure 2: Close-up of the analog temperature gauge, indicating water temperature.



Figure 3: Illustration of the 360° rotational base and the ergonomic curved handle.



Figure 4: Detail of the visible water level indicator with minimum and maximum fill lines.

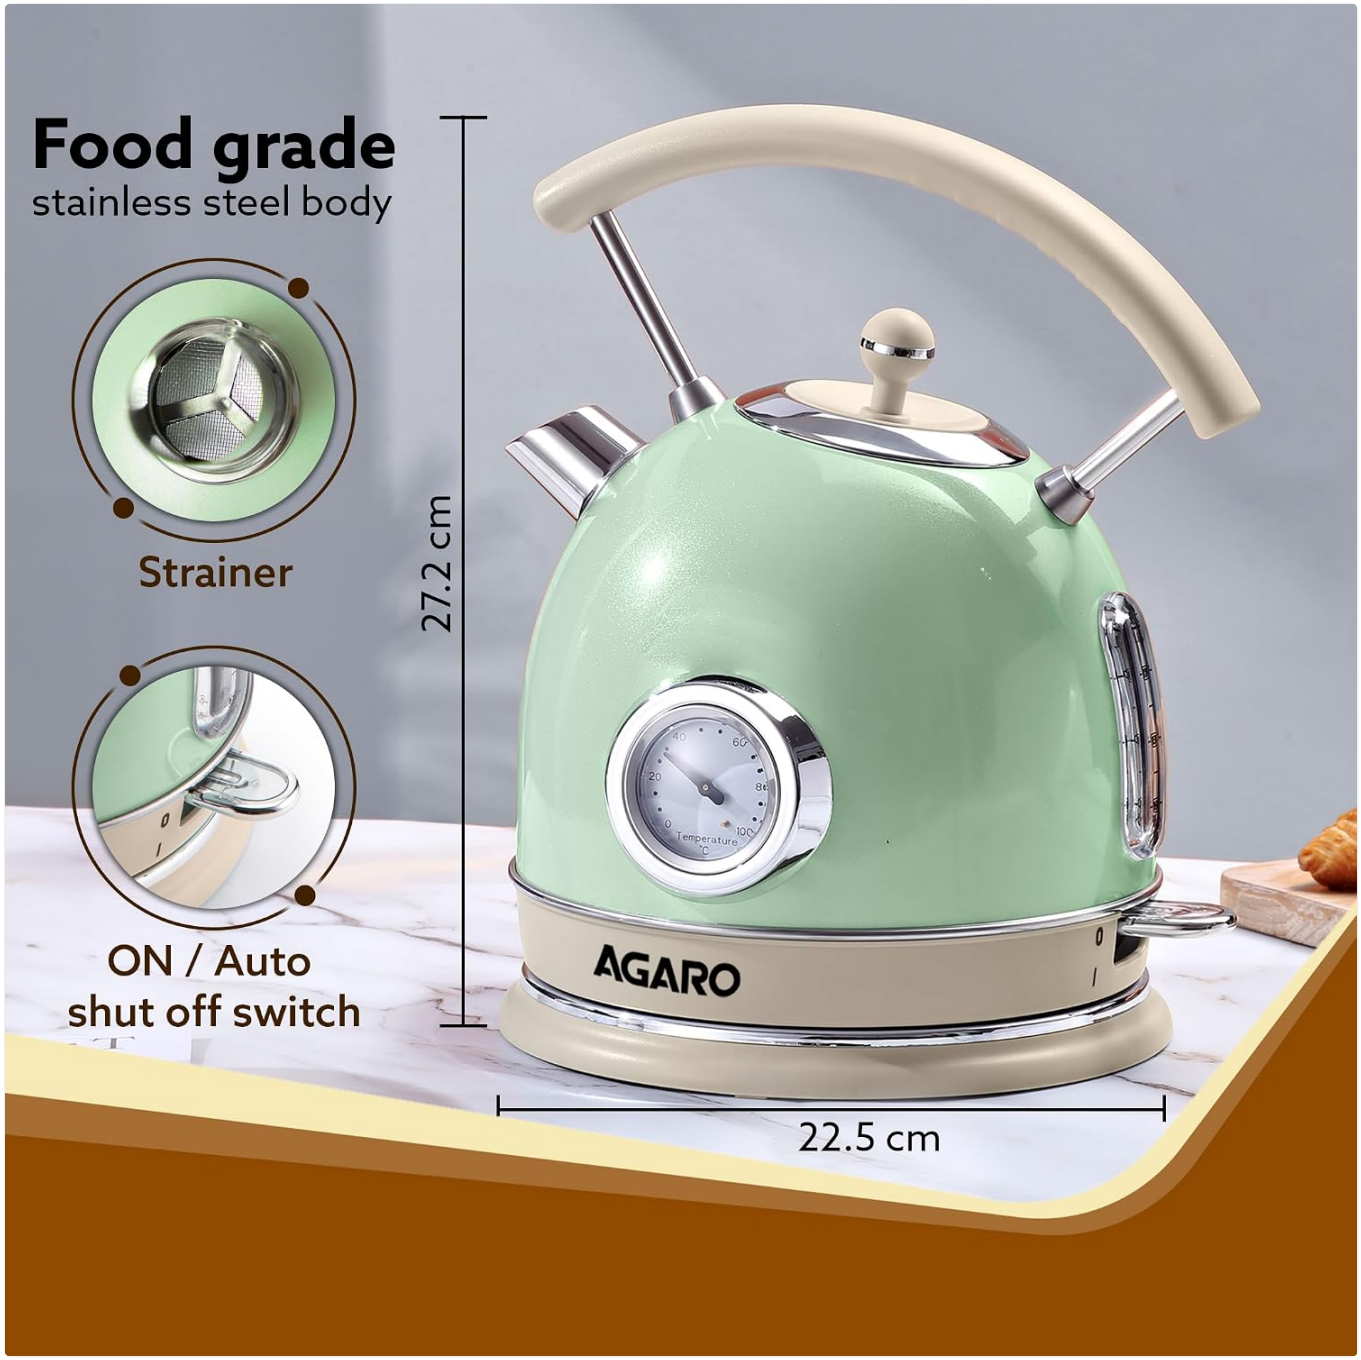

Figure 5: View of the integrated strainer inside the kettle and the ON/Auto shut-off switch.

4. Setup and First Use

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water up to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the countertop. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Power Connection:** Plug the power base into a grounded 220V AC electrical outlet.

5. Operating Instructions

1. **Filling the Kettle:**
    - Remove the kettle from its power base.

- Open the lid.
- Fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark (0.5L) or above the MAX mark (1.8L) indicated on the water level indicator. Overfilling may cause boiling water to spill out.
- Close the lid securely.

2. **Placing on Base:** Place the kettle back onto its power base. The 360° rotational base allows for easy placement from any angle.
3. **Boiling Water:**
   - Press the ON/OFF switch downwards. The LED indicator light will illuminate, signifying that the kettle is heating.
   - The analog temperature gauge will show the rising water temperature.
   - Once the water reaches boiling point, the kettle will automatically shut off, and the LED indicator light will extinguish.
4. **Pouring Water:** Carefully lift the kettle from the base and pour the hot water. The curved handle is designed for comfortable and safe pouring.
5. **Re-boiling:** If the kettle has just boiled, allow a few moments for the internal thermostat to reset before attempting to re-boil.

6. Maintenance and Cleaning

Regular cleaning and maintenance will prolong the life of your kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface. Never immerse the kettle body or power base in water or any other liquid.
- **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can affect performance and taste.
  - Fill the kettle with 1 part white vinegar and 2 parts water.
  - Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy scale.
  - Empty the kettle and rinse thoroughly with fresh water several times.
  - For stubborn deposits, a non-abrasive descaling solution designed for kettles can be used following the product's instructions.
- **Spout Filter:** The spout filter can be removed for cleaning if necessary. Rinse it under running water and gently brush away any deposits. Ensure it is properly re-inserted before use.
- **Storage:** When not in use, store the kettle in a clean, dry place. The power cord can be wrapped around the cord storage area under the base.

7. Troubleshooting

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in. Power switch not pressed. No power at the outlet. Kettle has boil-dry protection activated.	Ensure the kettle is securely plugged into a working outlet. Press the ON/OFF switch down. Check the circuit breaker or try another outlet. Allow the kettle to cool down for 10-15 minutes before refilling and restarting.
Water takes too long to boil.	Limescale buildup. Kettle is overfilled.	Descale the kettle as per cleaning instructions. Do not fill above the MAX line.

Problem	Possible Cause	Solution
Kettle leaks from the spout or lid.	Kettle is overfilled. Lid not properly closed.	Do not fill above the MAX line. Ensure the lid is securely closed before boiling.
Kettle switches off before boiling.	Limescale buildup affecting the thermostat.	Descale the kettle as per cleaning instructions.

If the problem persists, please contact customer support.

8. Specifications

Brand	AGARO
Model Name	Regency Vintage Kettle
Model Number	34025
Capacity	1.8 Liters
Material	Stainless Steel
Color	Green
Wattage	2150 Watts
Voltage	220 Volts
Product Dimensions (L x W x H)	22.5L x 22.5W x 27.2H Centimeters
Item Weight	1240 Grams
Special Features	Automatic Shut-Off, Water Level Indicator, Temperature Gauge, Boil-Dry Protection, LED Light
Included Components	Electric Water Boiler

9. Warranty and Customer Support

AGARO products are manufactured with high-quality standards. For warranty information, please refer to the warranty card included with your product or visit the official AGARO website.
For any product-related queries, technical assistance, or service requests, please contact:

Manufacturer: Universal Corporation Limited

Customer Care No: 9821486487

Email Id: info@uclindia.com

Importer: Universal Corporation Limited, 4/1 Middleton street, Sikkim Commerce House, Kolkata-71

Please have your model number (34025) and purchase details ready when contacting customer support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C89775H3

More documents and user manuals: **https://manuals.plus/**