Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR JY-MY-YKW36-ZD

VEVOR X-Marks Fire Pit Grill Grate - 36 Inch Round Foldable Instruction Manual

Model: JY-MY-YKW36-ZD | Brand: VEVOR

1. Introduction

Thank you for choosing the VEVOR X-Marks Fire Pit Grill Grate. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new grill grate. Designed for outdoor cooking over an open fire, this 36-inch round foldable grate offers a convenient solution for preparing meals during camping, picnics, and other outdoor activities.

Package Contents:

- 1 x Foldable Fire Pit Grate
- 2 x Handles
- 4 x Bolts
- 1 x User Manual

2. Safety Information

Always prioritize safety when using any fire-related product. Failure to follow these safety guidelines may result in injury or property damage.

- **Maintain Proper Clearance:** Ensure the grill grate is placed at a safe distance from all combustible materials, including tents, dry vegetation, and structures.
- **Use Approved Fuel Types:** Only use charcoal or natural wood as fuel. Do not use gasoline, kerosene, or other volatile liquids to start or rekindle a fire.
- **Adequate Ventilation:** Use the grill grate in well-ventilated outdoor areas only. Never use indoors or in enclosed spaces.
- **Supervision:** Never leave a lit fire pit or hot grill grate unattended, especially around children and pets.
- **Hot Surfaces:** The grill grate will become extremely hot during use. Always use heat-resistant gloves or appropriate tools when handling the grate or adding/removing food.
- **Food Safety Warning:** The grill grate is coated with paint. While designed for high temperatures, some users have reported the paint bubbling or peeling after initial use. It is recommended to season the grate thoroughly before first use and inspect for any peeling paint. If paint peels, it is advisable to avoid direct food contact with the

affected areas to ensure food safety.

- **Extinguish Fire Completely:** Before leaving the area or storing the grate, ensure the fire is completely extinguished and the grate has cooled down.

3. Product Features

- **Large Cooking Area:** The 36-inch diameter provides ample space for cooking for families or groups, accommodating up to 25 pounds of food.
- **Foldable & Portable Design:** The grate features a foldable design for easy transport and compact storage. It can be folded in approximately 5 seconds and weighs 12 lbs (5.6 kg).
- **High-Quality Steel Construction:** Made from premium Q235 steel with a high-temperature resistant paint coating, ensuring durability, rust-proof properties, and heat resistance up to 572°F (300°C).
- **Diamond-Shaped Mesh:** The high-density mesh grill design ensures efficient and even heat transfer, preventing smaller food items from falling through.
- **Multi-Purpose Use:** Suitable for various outdoor cooking needs, including grilling meats, vegetables, and supporting cookware like frying pans and skillets over an open fire.

4. Specifications

Model	JY-MY-YKW36-ZD
Color	Black
Material	Premium Q235 Steel (Alloy Steel)
Load Capacity	44 lbs / 20 kg
High Temp Resistance	572°F / 300°C
Net Weight	12 lbs / 5.6 kg
Product Dimensions (D x W x H)	36"D x 36"W x 1"H (Φ910x25 mm)
Shape	Round
Fuel Type	Charcoal

5. Setup

The VEVOR X-Marks Fire Pit Grill Grate requires minimal assembly. Follow these steps for initial setup:

1. **Unpack Components:** Carefully remove the foldable grill grate, two handles, and four bolts from the packaging.
2. **Attach Handles:** The two handles twist into designated slots on the sides of the grate. Secure them firmly using the provided bolts. Some users have noted that adding washers (not included) can help keep the handles more securely in place.
3. **Unfold Grate:** Gently unfold the grate to its full 36-inch round diameter.
4. **Placement:** Position the grate securely over your fire pit or heat source. Ensure it is stable and level before starting a fire or placing food on it. For optimal stability, consider using cinder blocks or a sturdy fire pit rim to support the grate.



Image: The foldable design allows for easy charcoal addition and compact storage.

6. Operation

Using your VEVOR X-Marks Fire Pit Grill Grate for cooking is straightforward:

1. **Prepare Fire:** Build your fire in the fire pit using charcoal or wood. Allow the flames to die down and hot coals to form for optimal grilling temperature.
2. **Position Grate:** Place the unfolded grill grate securely over the fire pit. Ensure it is stable and does not wobble.
3. **Preheat:** Allow the grate to preheat over the coals for several minutes. This helps to create a non-stick surface and ensures even cooking.
4. **Place Food:** Carefully place food directly onto the diamond-shaped mesh. The high-density mesh is designed to prevent small items from falling through.
5. **Monitor Cooking:** Use the foldable halves to easily access the fire for adding more fuel or adjusting heat without

removing the entire grate.

6. **Remove Food:** Once cooked, remove food using appropriate grilling tools.



Image: The large cooking area of the VEVOR X-Marks Fire Pit Grill Grate is ideal for family and friend gatherings.

▶ **Watch video online**

Fire Pit Grate Safety Guard, Steel Cooking Surface, Foldable

Video: Demonstration of the VEVOR Fire Pit Grate's safety guard and steel cooking surface, highlighting its foldable nature.

▶ **Watch video online**

Works on a fire ball too!!

Video: A user demonstrating how the VEVOR Fire Pit Grill Grate can be used effectively with a fire bowl.

7. Maintenance

Proper maintenance ensures the longevity and performance of your grill grate:

- **Cleaning:** After each use, allow the grate to cool completely. Scrape off any food residue with a grill brush. For stubborn grime, wash with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry immediately to prevent rust.
- **Seasoning:** To maintain its non-stick properties and protect against rust, it is recommended to season the grate periodically. Apply a thin layer of high-heat cooking oil (e.g., vegetable oil, flaxseed oil) to the entire surface and heat it over a low fire until it smokes. Repeat this process a few times.
- **Storage:** Once clean and dry, fold the grate and store it in a cool, dry place away from direct moisture. Its compact design makes it easy to store in a shed or camper.

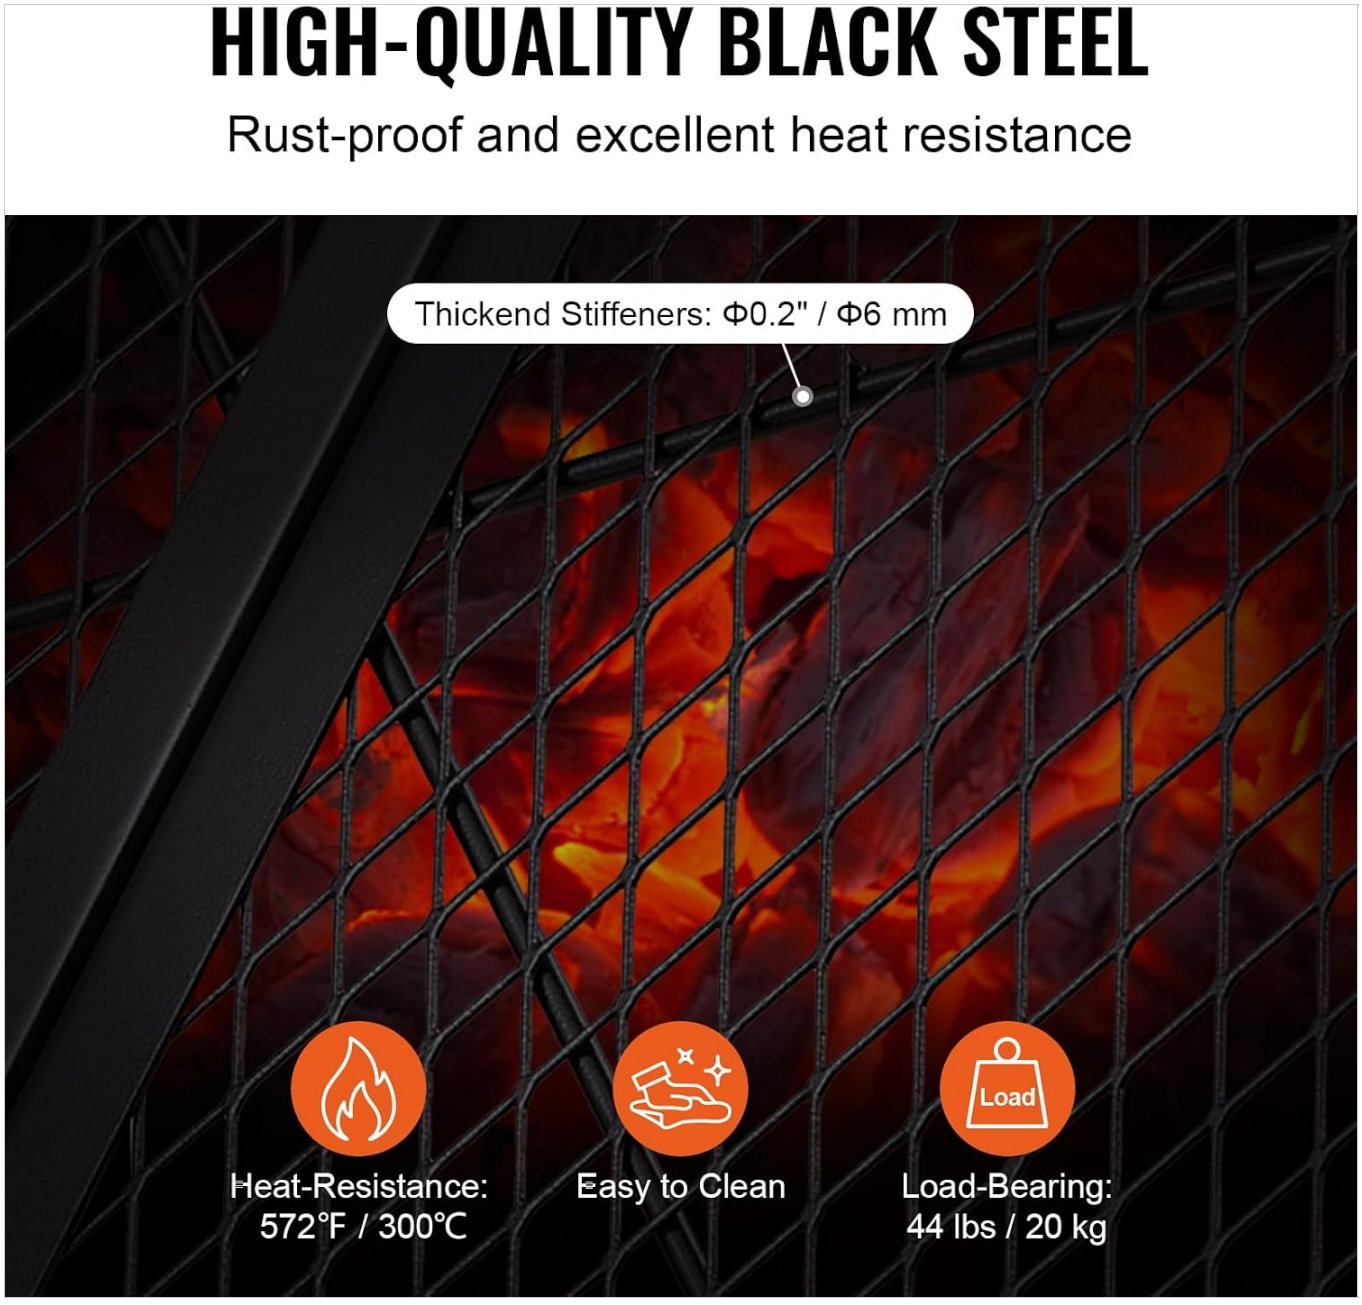


Image: The high-quality steel construction is designed for durability and easy cleaning.

8. Troubleshooting

- **Paint Peeling/Bubbling:** If the paint coating on the grate begins to bubble or peel, especially after initial high-heat exposure, it indicates that the coating is not food-safe for direct contact. In such cases, it is strongly advised to avoid placing food directly on the affected areas. Consider using aluminum foil or other food-safe barriers, or re-season the grate with cooking oil to create a protective layer.
- **Wobbly Grate:** Ensure the grate is placed on a stable, level surface. If using cinder blocks or a fire pit rim, verify

they are evenly positioned. The reinforced design should minimize wobbling.

- **Handles Loosening:** If the twist-in handles become loose, re-tighten the bolts. For enhanced stability, consider adding washers (not included) between the handle and the grate frame during assembly.
- **Food Sticking:** Ensure the grate is properly preheated and seasoned before placing food. Applying a thin layer of cooking oil to the grate before each use can help prevent sticking.

9. Warranty and Support

For warranty information, technical support, or any questions regarding your VEVOR X-Marks Fire Pit Grill Grate, please refer to the contact details provided on the product packaging or visit the official VEVOR website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C89Z3S1B

More documents and user manuals: **https://manuals.plus/**