Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR ZZ 507

VEVOR Folding Shopping Cart (Model ZZ 507) Instruction Manual

Model: ZZ 507 | Brand: VEVOR

1. Product Overview

The VEVOR Folding Shopping Cart is a versatile, heavy-duty utility cart designed for transporting a wide range of items, including groceries, laundry, and luggage. It features a robust metal frame, double baskets for ample storage, and 360° swivel wheels for easy maneuverability. Its collapsible design allows for convenient storage and transport.

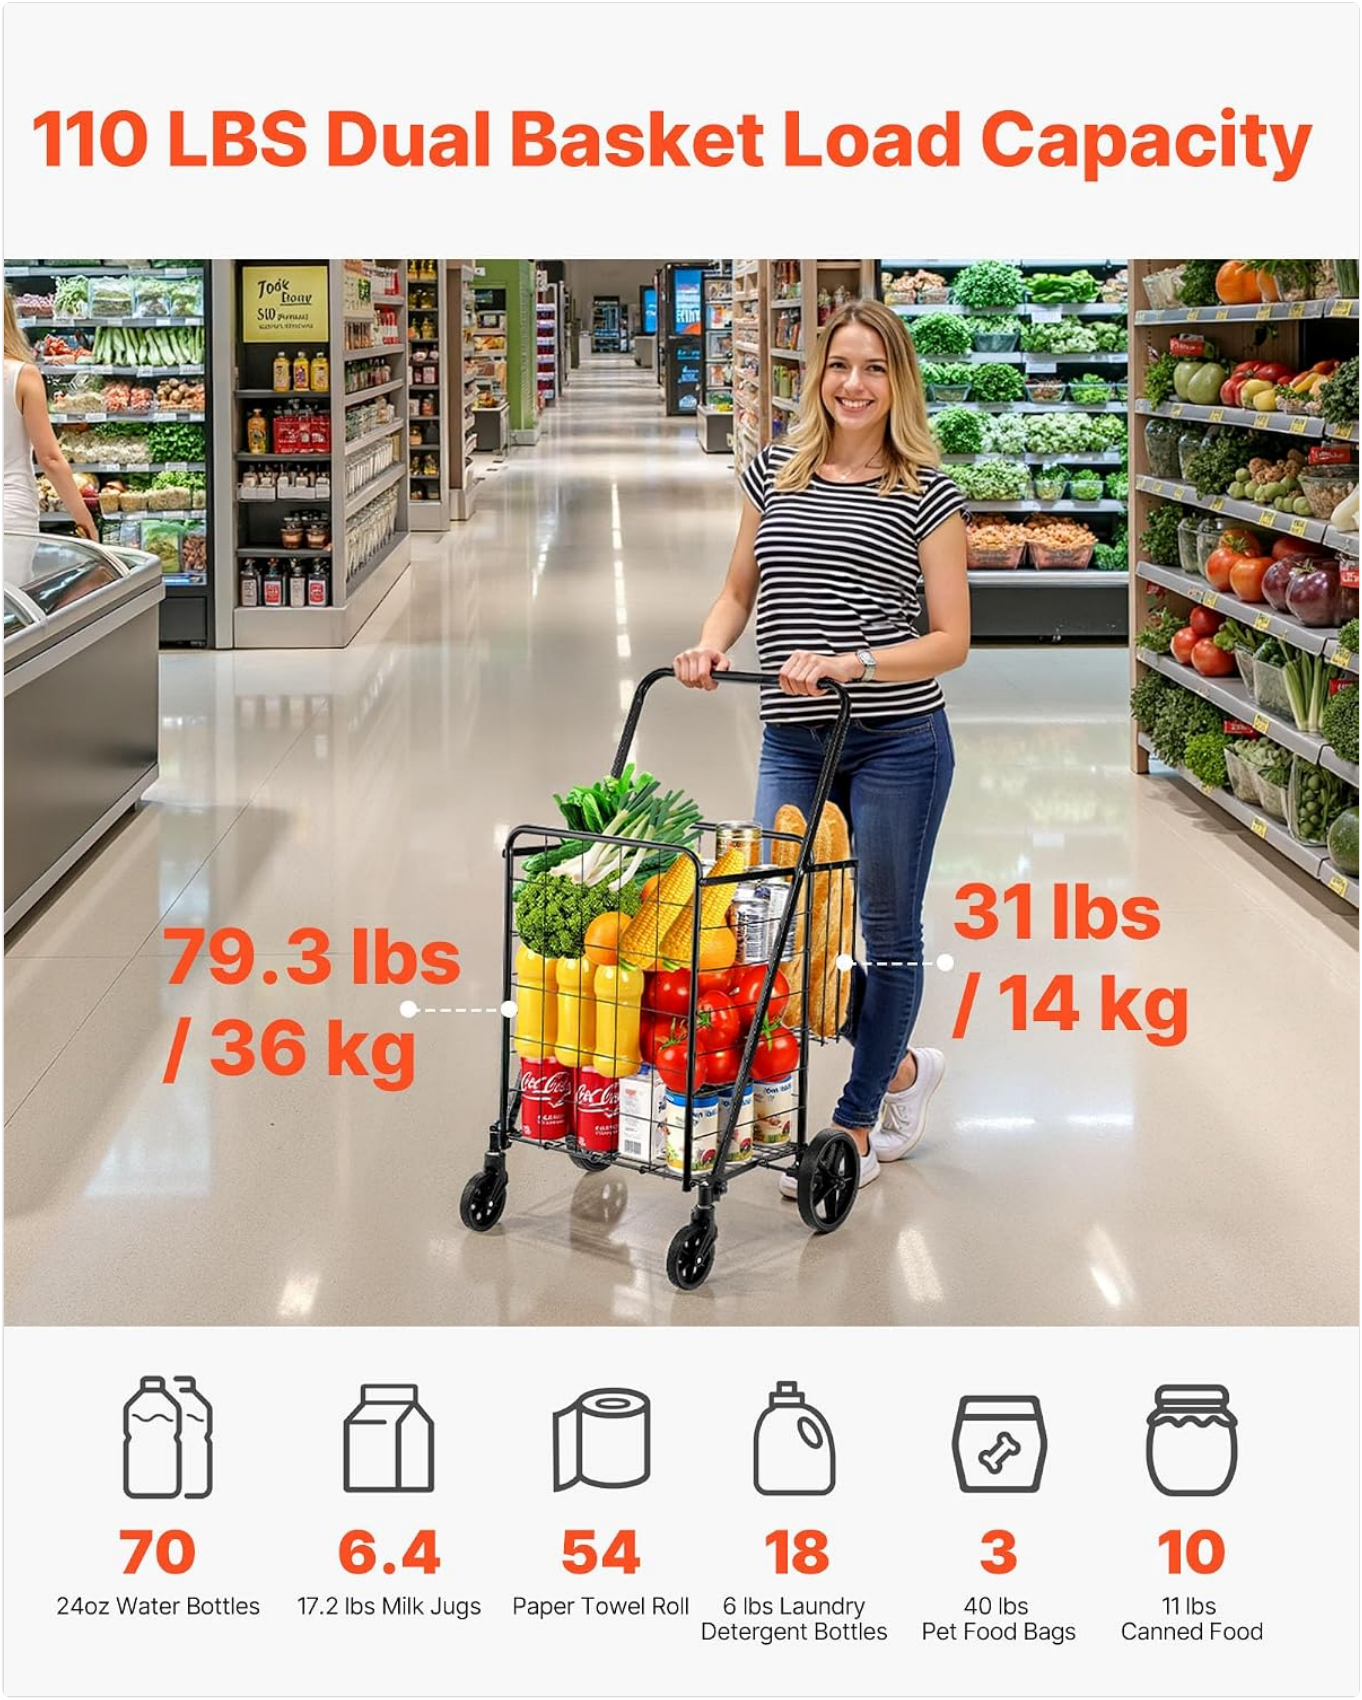

Figure 1: VEVOR Folding Shopping Cart demonstrating its 110 LBS dual basket load capacity.

Key Features:

- **Durable Frame:** Heavy-duty thickened metal frame with powder coating for anti-scratch and anti-rust properties, supporting up to 110 lbs.
- **Dual Baskets:** Features a large front basket (17.4"x14.4"x21.7") and an additional back basket (17.4"x5.6"x12") for organized storage.
- **4 Durable Wheels:** Industrial PP swivel wheels ensure smooth movement. 360° rotating front wheels for easy direction changes and 7.3" diameter rear wheels for effortless gliding.

- **Compact & Collapsible Design:** Folds flat in seconds for convenient transportation and storage in trunks, garages, closets, or under beds.
- **Versatile Use:** Ideal for laundry, groceries, camping gear, and various other transport needs.

2. Safety Information

Please read and understand all safety instructions before assembling and operating the VEVOR Folding Shopping Cart. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Capacity:** Do not exceed the maximum load capacity of 110 lbs (50 kg). Overloading can cause instability and damage.
- **Proper Loading:** Distribute weight evenly within the baskets. Place heavier items at the bottom of the main basket to maintain stability.
- **Maneuvering:** Exercise caution when navigating uneven surfaces, inclines, or stairs. Avoid sudden turns or movements when heavily loaded.
- **Folding/Unfolding:** Ensure hands and fingers are clear of pinch points during folding and unfolding operations.
- **Children:** Keep children away from the cart during assembly and operation. This cart is not a toy and should not be used for transporting children.
- **Storage:** Store the cart in a dry, secure location when not in use. Ensure it is fully folded and latched to prevent accidental unfolding.
- **Maintenance:** Regularly inspect wheels, frame, and fasteners for wear or damage. Do not use the cart if any components are damaged.

3. Setup and Assembly

The VEVOR Folding Shopping Cart comes pre-assembled, requiring only the attachment of the wheels. All necessary hardware and a user manual are included.

Assembly Steps:

1. **Unfold the Cart Body:** Carefully unfold the main frame of the cart until it locks into its open position.
2. **Attach Rear Wheels:** Insert the axle rod through the designated holes at the rear of the cart frame. Slide a washer onto each end of the axle, then attach the larger rear wheels. Secure them with the provided end caps and cotter pins.
3. **Attach Front Swivel Wheels:** Insert the stem of each front swivel wheel into the corresponding sockets at the front of the cart frame. Ensure they are fully inserted and secured with the provided nuts and washers. Use the included wrench to tighten the nuts.
4. **Install Liner (Optional):** If your model includes a fabric liner, place it inside the main basket and secure it using the attached straps or Velcro fasteners.

▶ **Watch video online**
Folding Shopping Cart Installation video

Video 1: Step-by-step guide for installing the wheels on the VEVOR Folding Shopping Cart.



Figure 2: Visual guide for the assembly process of the VEVOR Folding Shopping Cart.

4. Operating Instructions

Unfolding the Cart:

- Hold the handle and pull the cart outwards until the frame fully extends and locks into place.
- Ensure all locking mechanisms are engaged before loading the cart.

Loading the Cart:

- Place heavier items in the bottom of the main basket.
- Utilize the rear basket for smaller, lighter items or personal belongings.
- Do not exceed the 110 lbs (50 kg) weight limit.



Figure 3: VEVOR Folding Shopping Cart being used for grocery shopping.

Maneuvering:

- The 360° swivel front wheels allow for easy steering and navigation in tight spaces.
- The large rear wheels provide stability and smooth rolling over various surfaces.
- Push the cart forward using the padded handle.

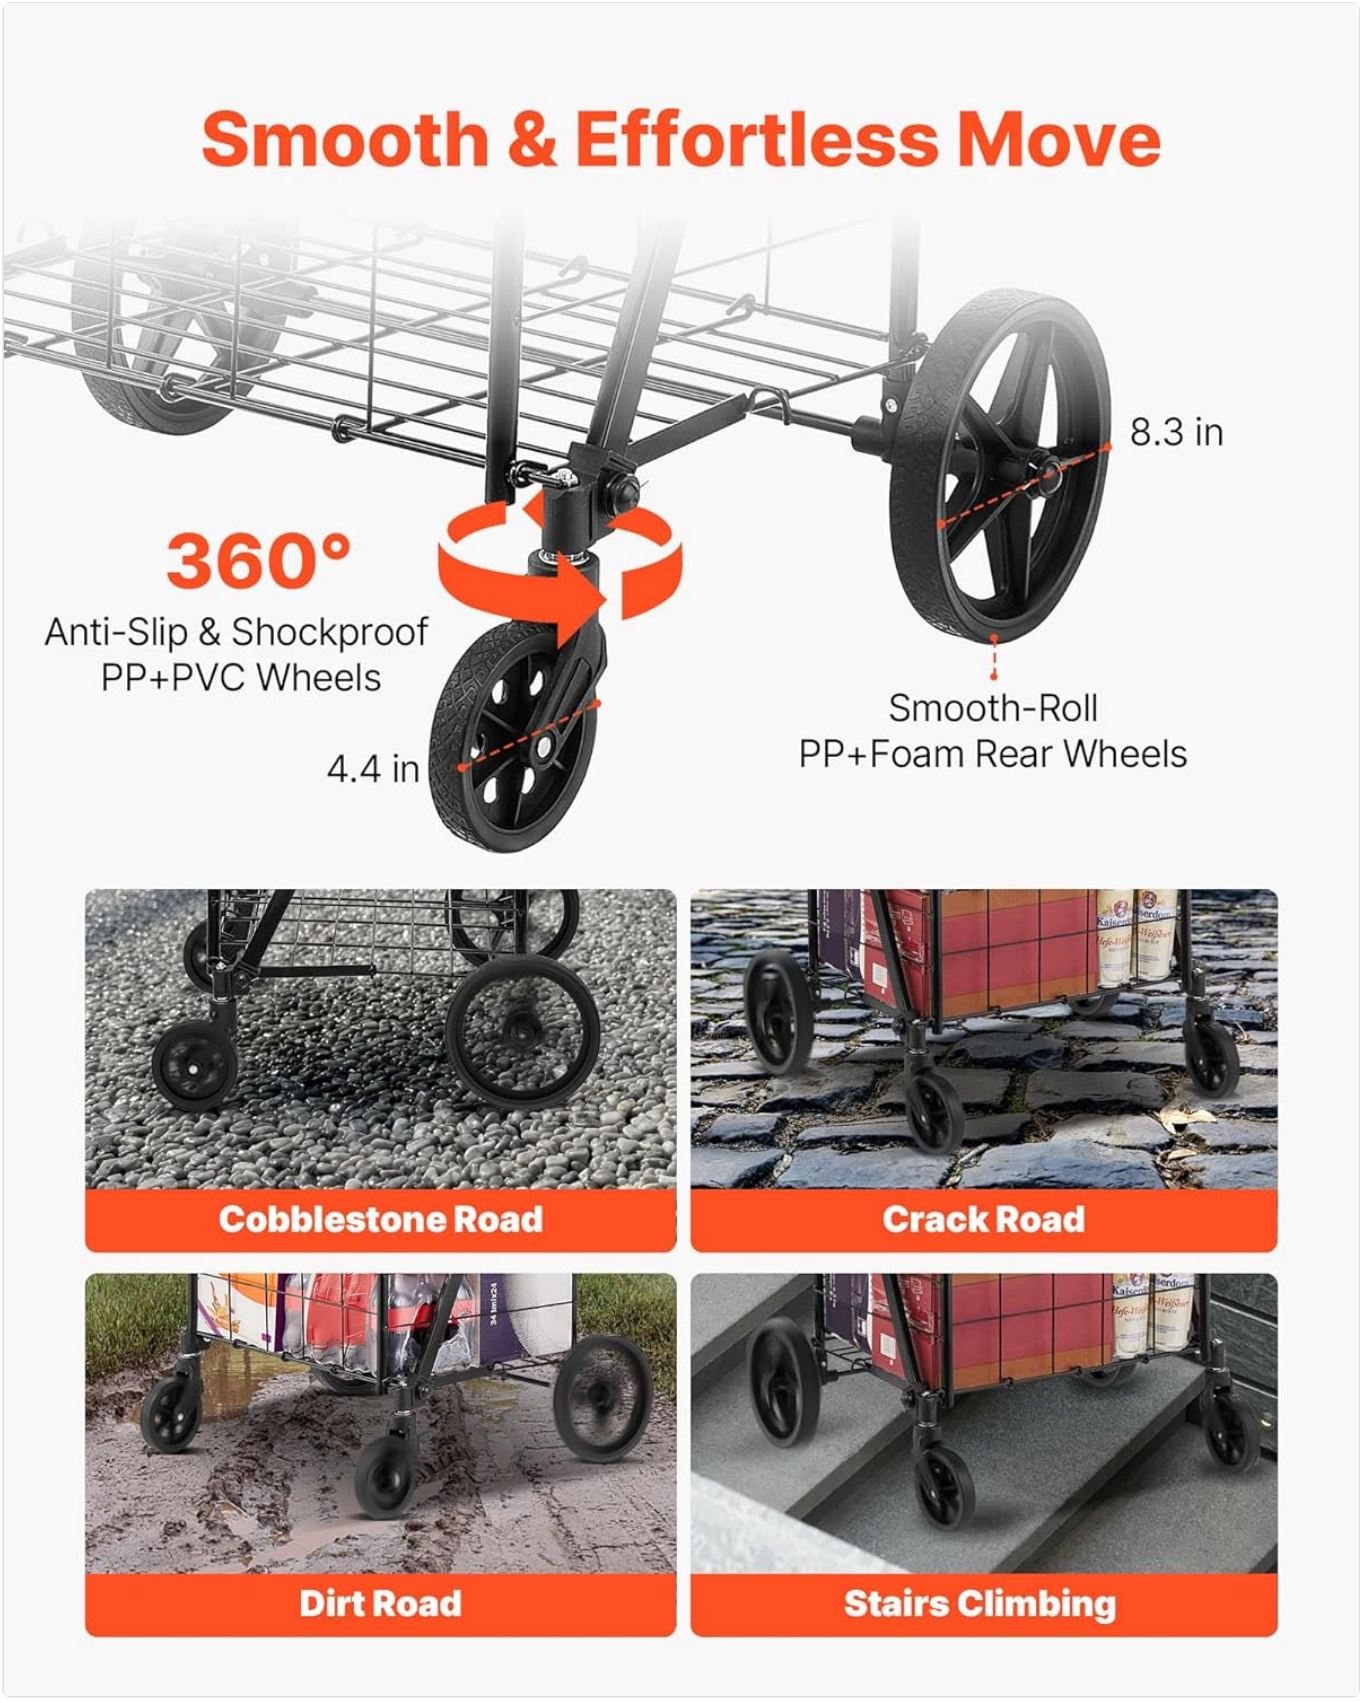

Figure 4: Illustration of the cart's durable wheels and smooth movement across different terrains.

Folding the Cart for Storage:

- Ensure the cart is empty.
- Locate the folding mechanism (usually a latch or lever) and disengage it.
- Gently push the sides of the cart inwards until it collapses flat.
- Secure the folded cart with any integrated locking clips to prevent accidental unfolding.

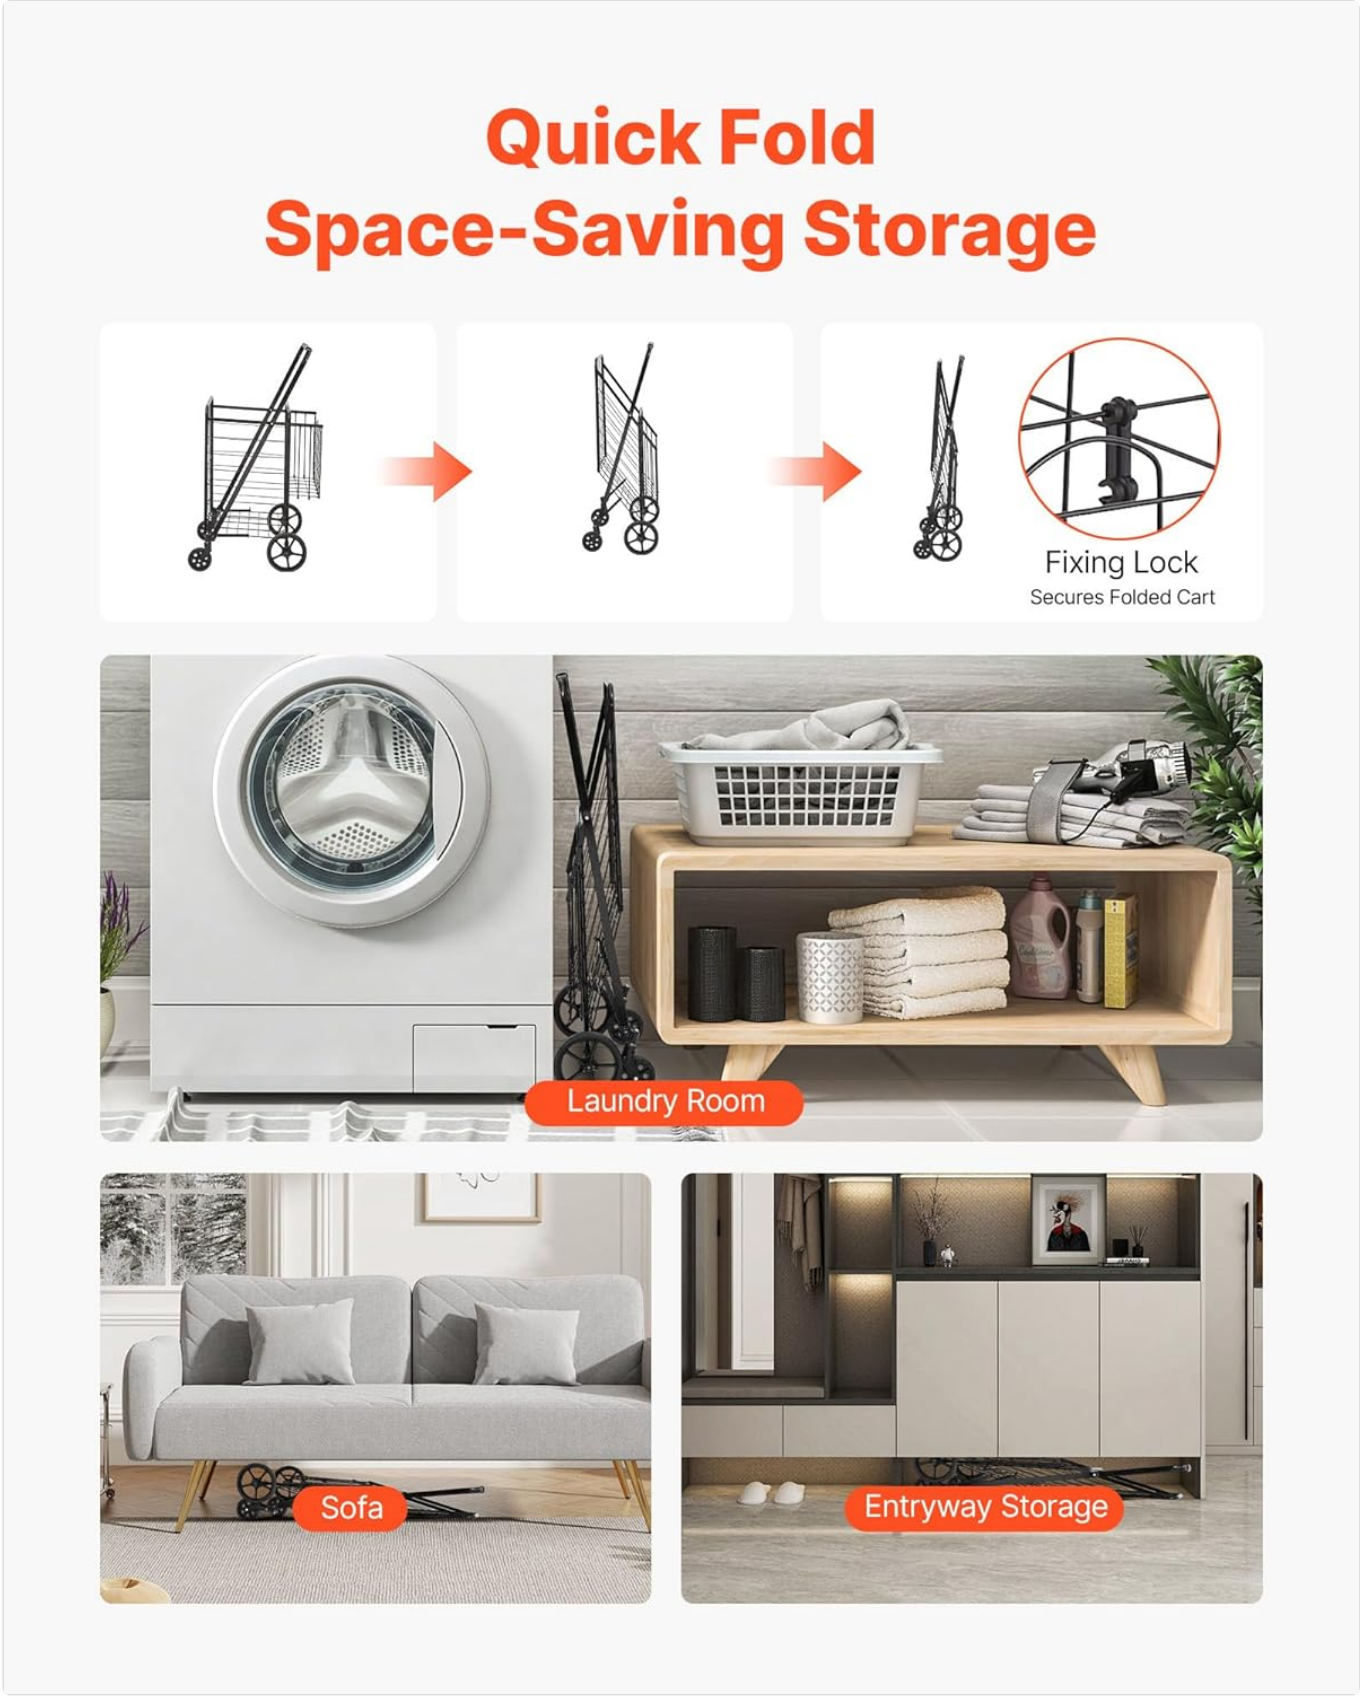

Figure 5: Steps for folding the cart and examples of compact storage.

5. Maintenance

Regular maintenance will ensure the longevity and optimal performance of your VEVOR Folding Shopping Cart.

- **Cleaning:** Wipe the metal frame with a damp cloth and mild detergent. Dry thoroughly to prevent rust. If a fabric liner is used, clean it according to its care instructions.
- **Lubrication:** Periodically apply a small amount of silicone-based lubricant to the wheel axles and swivel mechanisms to

ensure smooth operation.

- **Inspection:** Regularly check all nuts, bolts, and fasteners to ensure they are tight. Inspect the frame for any signs of bending, cracks, or corrosion. Check wheels for wear or damage.
- **Storage:** Store the cart in a dry environment to prevent rust and material degradation.

6. Troubleshooting

Common Issues and Solutions:

- **Wheels not rolling smoothly:**
  - Check for debris (hair, lint, dirt) caught in the wheel axles. Clean as necessary.
  - Apply lubricant to the wheel axles and swivel points.
  - Ensure wheels are securely attached and not loose.
- **Cart is unstable or wobbly:**
  - Verify that the cart is not overloaded and weight is distributed evenly.
  - Check all frame connections and fasteners for tightness.
  - Inspect the frame for any signs of damage or bending.
- **Folding mechanism is stiff:**
  - Ensure no items are obstructing the folding joints.
  - Apply a small amount of lubricant to the pivot points of the folding mechanism.

7. Specifications



Figure 6: Detailed dimensions of the VEVOR Folding Shopping Cart.

Feature	Detail
Model Number	ZZ 507
Brand	VEVOR
Product Dimensions (Unfolded)	25.59"D x 41.34"W x 24.41"H (65cm D x 105cm W x 62cm H)

Main Frame Material	Iron, Metal, Polypropylene, Polyvinyl Chloride
Color	Black
Weight Capacity (Maximum)	110 lbs (50 kg)
Item Weight	13.7 lbs (6.21 kg)
Number of Wheels	4
Caster Type	Swivel (Front)
Included Components	1 x Shopping Cart, Assembly Hardware, User Manual

8. Warranty and Support

For warranty information, technical support, or to inquire about replacement parts, please refer to the official VEVOR website or contact VEVOR customer service directly. Keep your purchase receipt for warranty claims.

- **Return Policy:** This product typically comes with a 30-day refund/replacement policy. Please check with your retailer for specific return terms.
- **Manufacturer:** VEVOR
- **UPC:** 840349927756

© 2026 VEVOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CB8SJ9JP

More documents and user manuals: **https://manuals.plus/**