Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FANGOR F-CD-143

FANGOR Portable CD Player with Bluetooth Speaker Base

Model: F-CD-143

Brand: FANGOR

Product Overview

The FANGOR Portable CD Player with Bluetooth Speaker Base offers a versatile 2-in-1 audio solution for home and on-the-go use. This device combines a portable CD player with a detachable Bluetooth speaker base, providing multiple listening options. It features anti-shock protection for uninterrupted playback, a backlit LCD display for clear visibility, and wide compatibility with various CD and audio formats. The integrated Bluetooth speaker delivers clear and loud stereo sound, enhancing the listening experience.



Image: The FANGOR Portable CD Player with its Bluetooth speaker base, showcasing its compact design and integrated speakers.

What's in the Box

- 1 x Portable CD Player
- 1 x Bluetooth Speaker
- 1 x Wired Headphone
- 1 x AUX Cable
- 1 x Type-C Charging Cable
- 1 x User Manual



Image: All components included in the FANGOR Portable CD Player package, neatly arranged.

Setup Guide

1. Initial Charging

Before first use, ensure both the portable CD player and the Bluetooth speaker base are fully charged. Use the provided Type-C charging cable to connect the devices to a compatible USB power adapter (not included).



Image: The portable CD player connected to a power source via its Type-C charging cable.

2. Assembling the 2-in-1 Unit

To use the CD player with the Bluetooth speaker base as a combined unit, align the four circular points on the bottom of the portable CD player with the corresponding slots on the speaker base. Gently press down until it clicks into place. Connect the portable CD player to the speaker base using the Type-C port located on the speaker base.



Image: Diagram showing the portable CD player connected to the Bluetooth speaker base, highlighting its dual functionality.

Operating Instructions

Power On/Off

To power on the Bluetooth speaker base, press and hold the power/mode button (M) located on the speaker base. To power off, press and hold the same button for approximately 3-5 seconds. For the portable CD player, use the dedicated power button on its interface.

Switching Modes

Press the 'M' (Mode) button on the Bluetooth speaker base to cycle through available modes: Bluetooth, CD, and AUX. The portable CD player has its own mode selection for playback features.

CD Playback

Open the CD compartment by sliding the 'OPEN' switch on the portable CD player. Insert a CD (compatible formats include CD, MP3, CD-R, CD-RW, CD-DA, WMA). Close the compartment. Use the play/pause, skip forward/backward buttons on the CD player for control. Adjust playback speed using the SP+ and SP- buttons. Select sound effects (BBS, POP, JAZZ, ROCK, Original Sound) and play modes (A-B Repeat, Repeat Single Track, Repeat All, Shuffle) using the EQ and M buttons respectively.

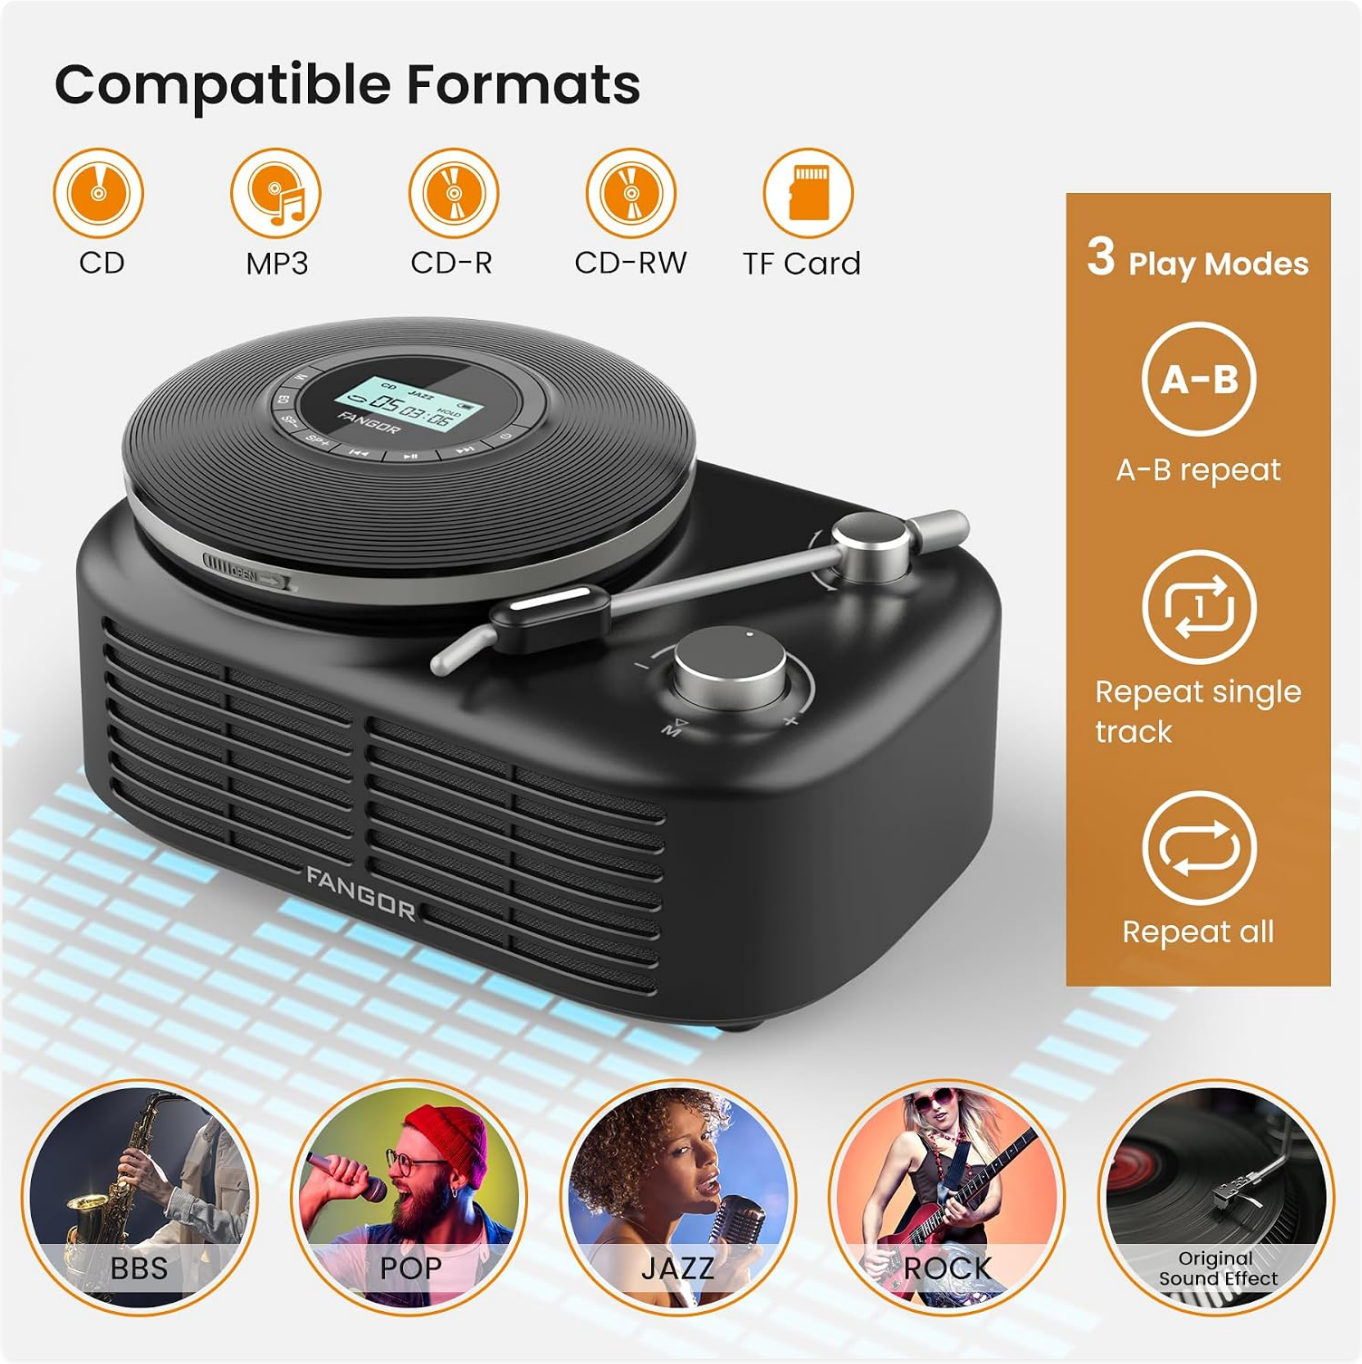

Image: Visual representation of compatible CD formats and various play modes available on the device.

Bluetooth Speaker Mode

When the Bluetooth speaker base is powered on, it will automatically enter Bluetooth pairing mode. On your mobile device or computer, search for "FANGOR" in the Bluetooth settings and connect. The speaker will indicate a successful connection. You can then stream audio wirelessly.



Image: The Bluetooth speaker base connected wirelessly to a smartphone, illustrating its HIFI stereo sound capabilities.

AUX Mode

Connect an external audio device (e.g., MP3 player, car audio system) to the AUX port on the speaker base using the provided 3.5mm AUX cable. Switch the speaker to AUX mode using the 'M' button.

TF Card Playback

Insert a TF card (Max FAT 32GB) containing audio files into the designated slot on the portable CD player. The player will automatically detect and begin playback from the TF card.

Headphone Usage

For private listening, plug the wired headphones into the 3.5mm headphone jack on the portable CD player. Note that the portable CD player's built-in speaker and Bluetooth function are disabled when headphones are connected.

Maintenance and Care

- Keep the device away from water, moisture, and direct sunlight.

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Handle CDs by the edges to avoid fingerprints and scratches. Clean CDs with a soft, lint-free cloth from the center outwards.
- Store the device in a cool, dry place when not in use.

Troubleshooting

No Power

- Ensure the device is fully charged.
- Check if the power cable is securely connected.
- Verify the power adapter is functioning correctly.

No Sound

- Adjust the volume on both the device and the connected audio source (if applicable).
- Ensure the correct playback mode (CD, Bluetooth, AUX) is selected.
- If using headphones, ensure they are fully plugged in and functional.
- For CD playback, check if the CD is clean and free from scratches.

CD Skipping/Not Playing

- Ensure the CD is clean and free from scratches or dust.
- Verify the CD is inserted correctly with the label side facing up.
- The anti-shock protection works for up to 60 seconds; excessive movement may still cause skipping.

Bluetooth Pairing Issues

- Ensure the Bluetooth speaker base is in pairing mode.
- Disable and re-enable Bluetooth on your connecting device.
- Move the speaker closer to your connecting device.
- Clear previous Bluetooth connections on your device and try pairing again.

Product Specifications

Product Dimensions	8.66 x 5.9 x 3.14 inches
Item Weight	2.61 pounds
Item Model Number	F-CD-143
Batteries	1 Lithium Polymer batteries required
Connectivity Technology	Bluetooth
Color	Dark Gray
Speaker Type	Stereo
Date First Available	July 17, 2023

Warranty and Support

FANGOR offers a 365-Day No-Reason Replacement policy and lifetime technical support for this product. For any issues or inquiries, please contact FANGOR customer service. Refer to the included User Manual for detailed contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CC22DJFL

More documents and user manuals: **https://manuals.plus/**