Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NUASI U8

NUASI U8 Bluetooth Sport Headphones User Manual

Model: U8

Introduction

Thank you for choosing the NUASI U8 Bluetooth Sport Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

What's in the Box

Verify that all items listed below are included in your package:

- NUASI U8 Bluetooth Sport Headphones
- Charging Cable (USB)
- Multiple Pairs of Ear Tips (various sizes)
- User Manual
- Carrying Case



Image: NUASI U8 Bluetooth Sport Headphones with included accessories: charging cable, multiple ear tips, and a carrying case. This image highlights the complete package contents.

Setup

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the provided USB charging cable to the charging port on the headphones and a compatible USB power source. The LED indicator will show charging status. A full charge takes approximately 1.5 hours and provides up to 16 hours of music playback.

2. Pairing with a Bluetooth Device

1. Ensure the headphones are turned off.
2. Press and hold the Power button for approximately 3-5 seconds until the LED indicator flashes red and blue, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "NUASI U8" (or similar name) from the list of devices.
5. Once connected, the LED indicator will flash blue slowly or turn off, depending on the model.
6. The headphones can connect to two devices simultaneously.

3. Wearing the Headphones

The NUASI U8 headphones feature an ergonomic ear-hook design for a secure and comfortable fit, especially during physical activity.

- **Choose the Right Ear Tips:** Select the ear tips that best fit your ear canal from the included sizes. A proper seal enhances sound quality and noise isolation.
- **Position the Ear Hooks:** Gently place the earbuds into your ears and adjust the flexible ear hooks around your ears for stability.
- **Adjust the Neckband:** Use the cable clothing clip to adjust the length of the neckband for a snug fit that prevents movement during exercise.



Image: A person wearing the NUASI U8 headphones, illustrating the secure and comfortable fit provided by the ear-hook design.

Operating Instructions

The headphones feature intuitive controls for managing audio playback and calls.



Image: Operational instructions for the headphones, detailing button functions for power, track control, call management, and voice assistant activation.

Headphone Control Functions

Action	Button Press
Power On/Off	Press and hold Power button for 3 seconds
Play/Pause Music	Single tap Power button
Next Track	Press and hold '+' button for 2 seconds
Previous Track	Press and hold '-' button for 2 seconds
Volume Up	Single tap '+' button
Volume Down	Single tap '-' button
Answer Call	Single tap Power button

Action	Button Press
Reject Call	Press and hold Power button for 1 second
Activate Voice Assistant (Siri, Google Assistant)	Double tap Power button

Maintenance

Cleaning

- Regularly clean the ear tips and headphone surfaces with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth with mild soap, then wipe dry immediately.
- Do not use harsh chemicals or abrasive materials, as these can damage the headphones.

Storage

- When not in use, store the headphones in their provided carrying case to protect them from dust, scratches, and impacts.
- Avoid storing in extreme temperatures or high humidity.

Water Resistance (IPX7)

The NUASI U8 headphones are IPX7 waterproof, meaning they are protected against temporary immersion in water up to 1 meter for 30 minutes. They are resistant to sweat, rain, and splashes, making them ideal for sports and outdoor activities.

- **Do NOT use for swimming or bathing.**
- Ensure the charging port cover is securely closed before exposure to water.
- After exposure to water, wipe the headphones dry before charging.



Image: The NUASI U8 headphones covered in water droplets, demonstrating their IPX7 waterproof capability, suitable for sweat and light rain.

Troubleshooting

If you encounter any issues with your NUASI U8 headphones, please refer to the following common solutions:

Common Issues and Solutions

Problem	Possible Solution
Headphones won't turn on	Ensure the headphones are fully charged. Press and hold the Power button for 3-5 seconds.
Cannot pair with device	Ensure headphones are in pairing mode (flashing red/blue LED). Turn off and on Bluetooth on your device. Move headphones closer to your device (within 10 meters). Clear previous Bluetooth connections on your device.

Problem	Possible Solution
No sound or low volume	Check volume levels on both headphones and your connected device. Ensure headphones are properly paired. Try re-pairing the headphones.
Sound cutting in/out	Move closer to your device. Avoid obstacles between headphones and device. Check for interference from other wireless devices.
Microphone not working	Ensure the headphones are connected as an audio input device on your phone settings. Check for any obstructions on the microphone.

Specifications

Detailed technical specifications for the NUASI U8 Bluetooth Sport Headphones:

Technical Specifications

Feature	Detail
Brand	NUASI
Model Number	U8
Connectivity Technology	Bluetooth 5.3
Bluetooth Range	Up to 30 meters (open space)
Ear Placement	In-ear with Ear Hooks
Noise Control	Acoustic Isolation
Water Resistance Level	IPX7 (Waterproof)
Audio Driver Size	11 mm
Frequency Range	20 Hz - 20,000 Hz
Impedance	32 Ohm
Battery Life (Average)	16 Hours
Battery Charge Time	1.5 Hours
Control Type	Media Control (Remote/Touch)
Compatible Devices	Phones (iOS, Android)
Color	Red

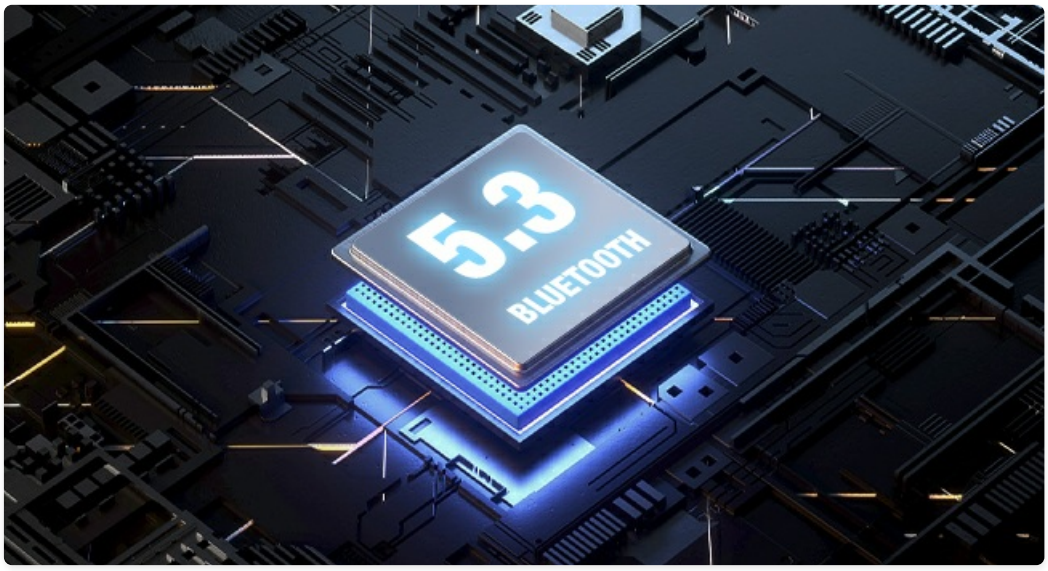


Image: A microchip labeled 'Bluetooth 5.3', highlighting the advanced Bluetooth connectivity technology integrated into the headphones.

Warranty and Support

NUASI products are designed for durability and performance. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact information provided on the product packaging or the official NUASI website. Keep your purchase receipt as proof of purchase for warranty claims.

© 2026 NUASI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CCYG3QHH

More documents and user manuals: **https://manuals.plus/**