Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LESHP 13703202A12

LESHP 140W Deformable LED Shop Light User Manual

Model: 13703202A12

Introduction

Thank you for choosing the LESHP 140W Deformable LED Shop Light. This high-performance lighting fixture is designed to provide super bright illumination for various environments such as garages, workshops, basements, and more. Featuring a unique deformable design with adjustable LED panels, it ensures comprehensive lighting coverage. Please read this manual carefully before installation and operation to ensure safe and optimal performance.



Figure 1: LESHP 140W Deformable LED Shop Light in operation.

Safety Information

Please observe the following safety precautions to prevent injury or damage to the product:

- Do not place the light fixture near high-temperature conditions.
- Do not dispose of the light fixture in fire.
- Ensure the power is turned off before installation, removal, or maintenance.
- This product is designed for indoor use in dry environments. It is not water resistant.
- Do not disassemble the product beyond what is described in this manual.

Product Features

- **Unique Appearance:** Features a distinctive flying saucer-type design.
- **Durable Material:** Constructed with die-cast aluminum, ABS plastic, and a PC lens lamp holder for efficient heat dissipation and longevity.
- **Adjustable Lighting:** Equipped with 4+1 styling, allowing for multi-environment use and up to 180° adjustable lighting angle for no dead-angle illumination.
- **Detachable Blades:** The 4-blade design allows for individual blade removal, offering flexibility for lighting specific blind spots.
- **High Brightness:** Delivers 18500LM of super bright LED light, ideal for illuminating large areas.

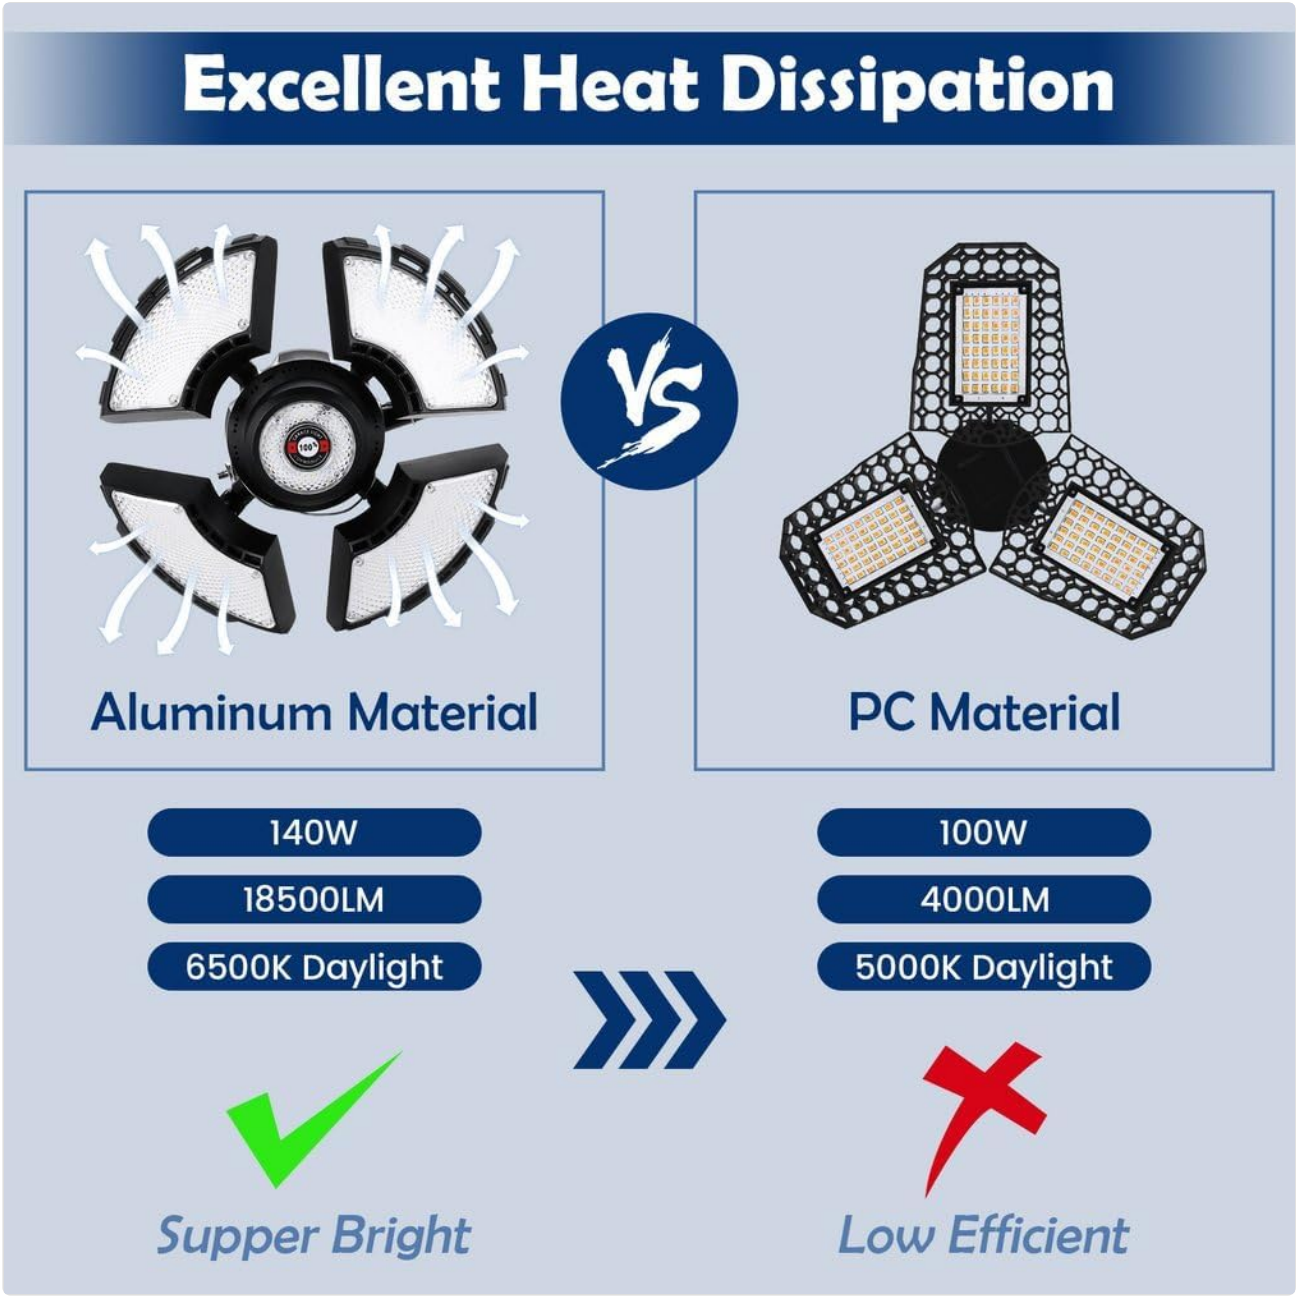


Figure 2: Excellent Heat Dissipation provided by the aluminum material.

Specifications

Specification	Value
Brand	LESHP
Model Number	13703202A12
Power	140W ±5%
Brightness	18500LM ±2%
Color Temperature	6000-6500K (Daylight White)
Voltage	85-265VAC
Lamp Beads Type	2835 SMD LED

Specification	Value
Number of Lamp Beads	204 (48*4 + 12)
Beam Angle	180° (Adjustable)
Socket Base	E26
Material	Die-cast aluminum + ABS plastic + PC lens
Product Dimensions	Diameter: 24cm (9.44in), Height: 10.5cm (4.13in)
Item Weight	1.06 Kilograms (2.33 pounds)
Control Method	Push Button (via wall switch)
Water Resistance Level	Not Water Resistant



Figure 3: Product Specifications and Dimensions.

Setup and Installation

The LESHP 140W Deformable LED Shop Light is designed for easy installation into any standard E26/E27 screw-in socket. No special tools are required.

1. **Turn off Power:** Before beginning installation, ensure the power to the light fixture socket is completely turned off at the circuit breaker to prevent electrical shock.
2. **Screw in the Light:** Carefully screw the LESHP LED Shop Light into the E26/E27 base socket. Turn clockwise until it is securely tightened. Do not overtighten.
3. **Adjust Panels:** Once securely installed, you can adjust the four LED panels to your desired angle to optimize light distribution. The panels can be adjusted up to 180 degrees.
4. **Restore Power:** Turn the power back on at the circuit breaker.



Figure 4: Simple Installation Steps.

Operating Instructions

Operating the LESHP 140W Deformable LED Shop Light is straightforward:

- **Power On/Off:** Use your existing wall switch to turn the light fixture on or off.

- **Adjusting Light Coverage:** The four LED panels are independently adjustable. Gently pivot each panel to direct light precisely where it is needed. The maximum adjustable angle for each panel is 180 degrees, allowing for wide-angle or focused illumination.
- **Detachable Panels:** For specific lighting needs or to illuminate very tight spaces, individual panels can be carefully detached. Reattach by aligning and snapping them back into place.



Figure 5: Deformation Design and Adjustable Lighting Angles.

Maintenance

The LESHP 140W Deformable LED Shop Light requires minimal maintenance to ensure its longevity and performance.

- **Cleaning:** Ensure the power is off before cleaning. Use a soft, dry cloth to wipe down the light fixture. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the product.
- **Inspection:** Periodically inspect the light for any signs of damage or loose connections. If any issues are found, turn off the power and consult a qualified electrician if necessary.
- **Heat Dissipation:** Ensure adequate airflow around the fixture. Do not cover the light or obstruct its ventilation, as this can lead to overheating and reduced lifespan.

Troubleshooting

If you encounter any issues with your LESHP 140W Deformable LED Shop Light, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the socket. Light not screwed in properly. Faulty light fixture.	Check circuit breaker and wall switch. Ensure light is securely screwed into the E26 socket. If still not working, contact customer support.
Light flickers.	Loose connection. Incompatible dimmer switch (if applicable).	Turn off power, re-tighten the light in the socket. This light is not dimmable. Ensure it is connected to a standard on/off switch.
Light is not bright enough.	Panels not adjusted correctly. Dust accumulation.	Adjust the LED panels to direct light to the desired area. Clean the light fixture as per maintenance instructions.

Warranty and Support

Specific warranty details are not provided in the product information. For any warranty claims or technical support, please refer to the retailer or the official LESHP website where the product was purchased. Keep your purchase receipt as proof of purchase.
No official product videos are available for this model at this time.

© 2023 LESHP. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CD7V8PPS

More documents and user manuals: **https://manuals.plus/**