Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SelfieShow L13D

SelfieShow Selfie Stick Tripod with 2 Lights User Manual

Model: L13D
Brand: SelfieShow

1. Product Overview

The SelfieShow Selfie Stick Tripod with 2 Lights (Model L13D) is a versatile accessory designed for capturing photos and videos with your smartphone. It functions as both an extendable selfie stick and a stable tripod, featuring integrated dimmable fill lights and a wireless remote control for enhanced functionality.

1.1. What's in the Box

- Selfie Stick Tripod
- Wireless Remote Control
- Spare Battery for Remote
- USB Charging Cable (for fill lights)

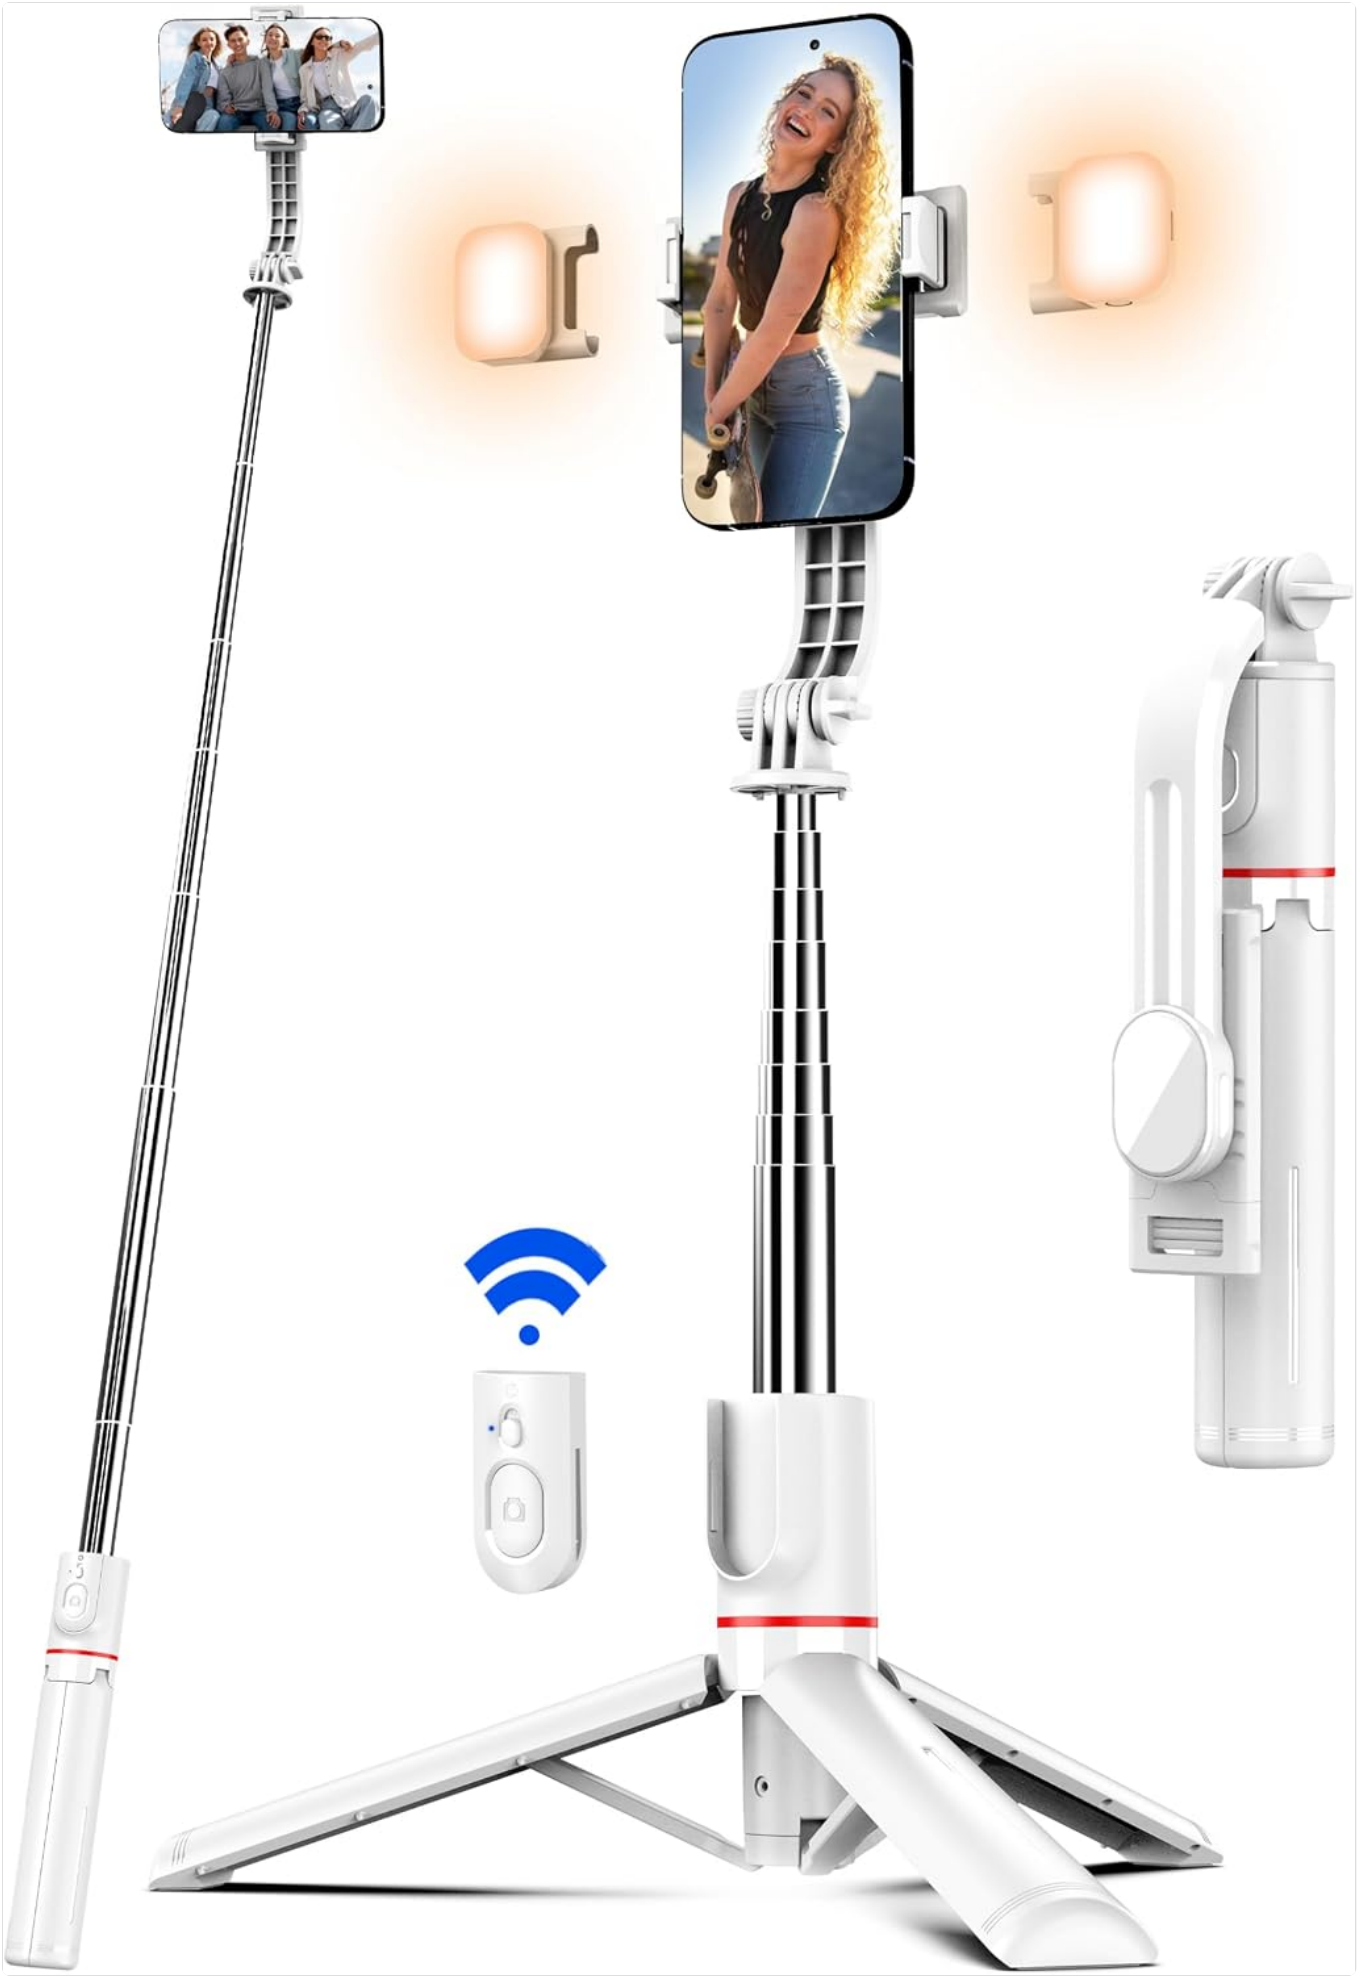


Figure 1: The SelfieShow Selfie Stick Tripod in various configurations, including extended selfie stick, tripod mode with phone and lights, and folded state. A wireless remote is also shown.



Figure 2: Illustration of the phone clip's compatibility, showing it can hold smartphones between 6.4-10 cm (2.5-3.9 inches) wide.

2. Setup

2.1. Unfolding the Tripod

1. Gently pull the bottom part of the handle downwards to release the tripod legs.
2. Spread the three legs outwards until they form a stable base. The built-in umbrella structure provides enhanced stability.
3. Ensure the tripod is placed on a flat, stable surface before mounting your device.

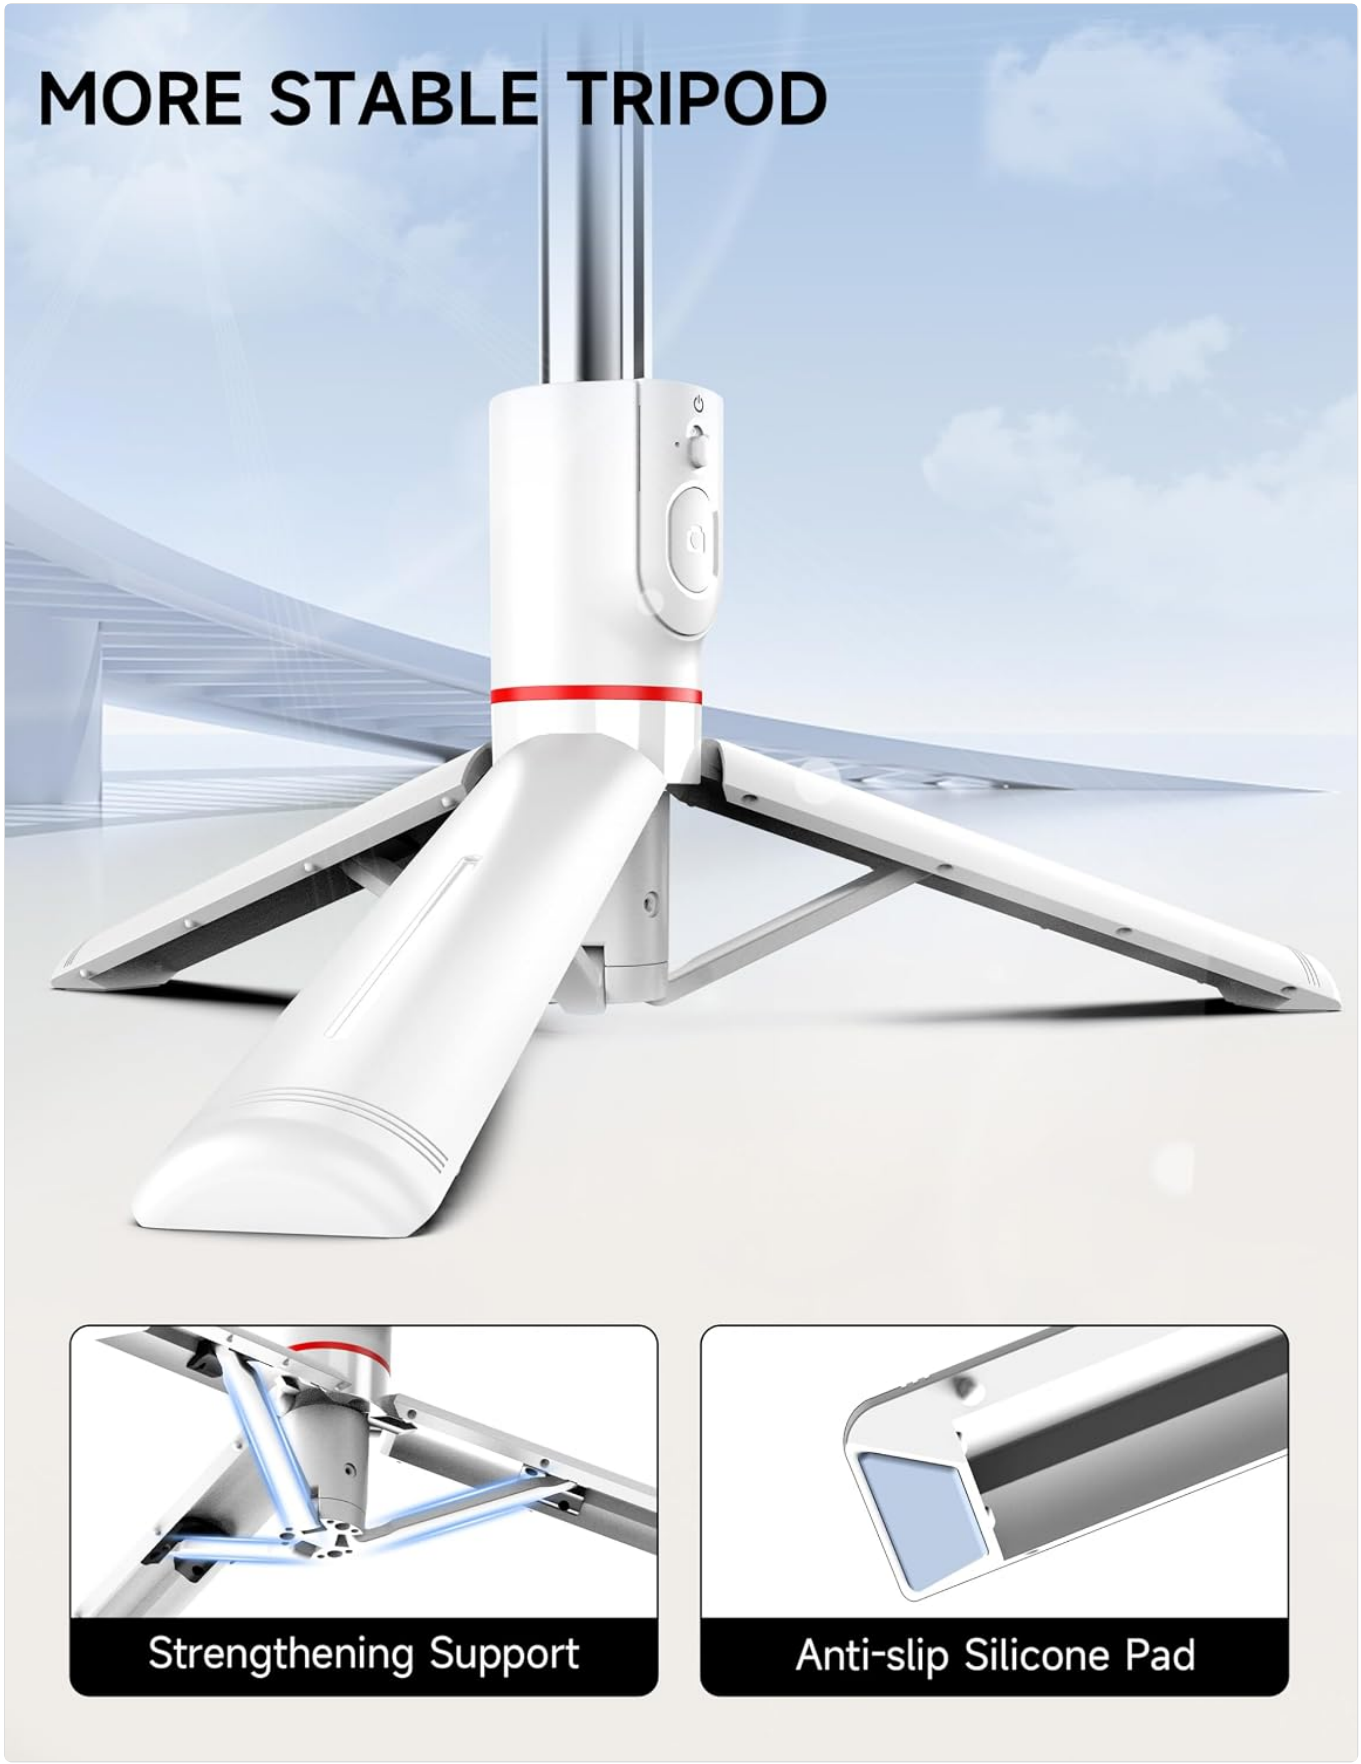


Figure 3: Close-up view of the reinforced tripod base with strengthening support and anti-slip silicone pads for enhanced stability.

2.2. Attaching Your Smartphone

1. Extend the phone clamp at the top of the stick.
2. Carefully place your smartphone into the clamp, ensuring it is securely held. The clamp is compatible with smartphones between 4 and 7 inches.

2.3. Pairing the Wireless Remote

1. Locate the wireless remote control, which is typically embedded in the handle of the selfie stick. Slide it out.
2. Flip the toggle power switch on the remote to the 'ON' position. The indicator light will begin to flash, indicating it's in pairing mode.
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "SelfieShow" from the list of devices to pair. The indicator light on the remote will stop flashing and remain solid once successfully paired.
5. The remote is now ready to use for taking photos or starting/stopping video recording.



Figure 4: Demonstrates the process of pairing the detachable wireless remote control with a smartphone via Bluetooth. The remote is shown connected to a device named "SelfieShow".

3. Operating Instructions

3.1. Extending and Retracting the Stick

- To extend: Hold the base firmly and pull the top section upwards. The stick has 7 telescopic sections and can extend from 8.3 inches (21 cm) to 45.3 inches (115 cm).
- To retract: Gently push the extended sections back into the handle until fully collapsed.



Figure 5: The selfie stick tripod fully extended to 113 cm, demonstrating its long reach for capturing wider shots or group photos.

3.2. Adjusting Angles and Rotation

- **Neck Rotation:** The neck of the phone holder can be rotated 180 degrees to adjust the vertical angle of your phone.
- **Head Rotation:** The phone clamp itself allows for a full 360-degree rotation, enabling you to switch between portrait and landscape modes or find the perfect horizontal angle.

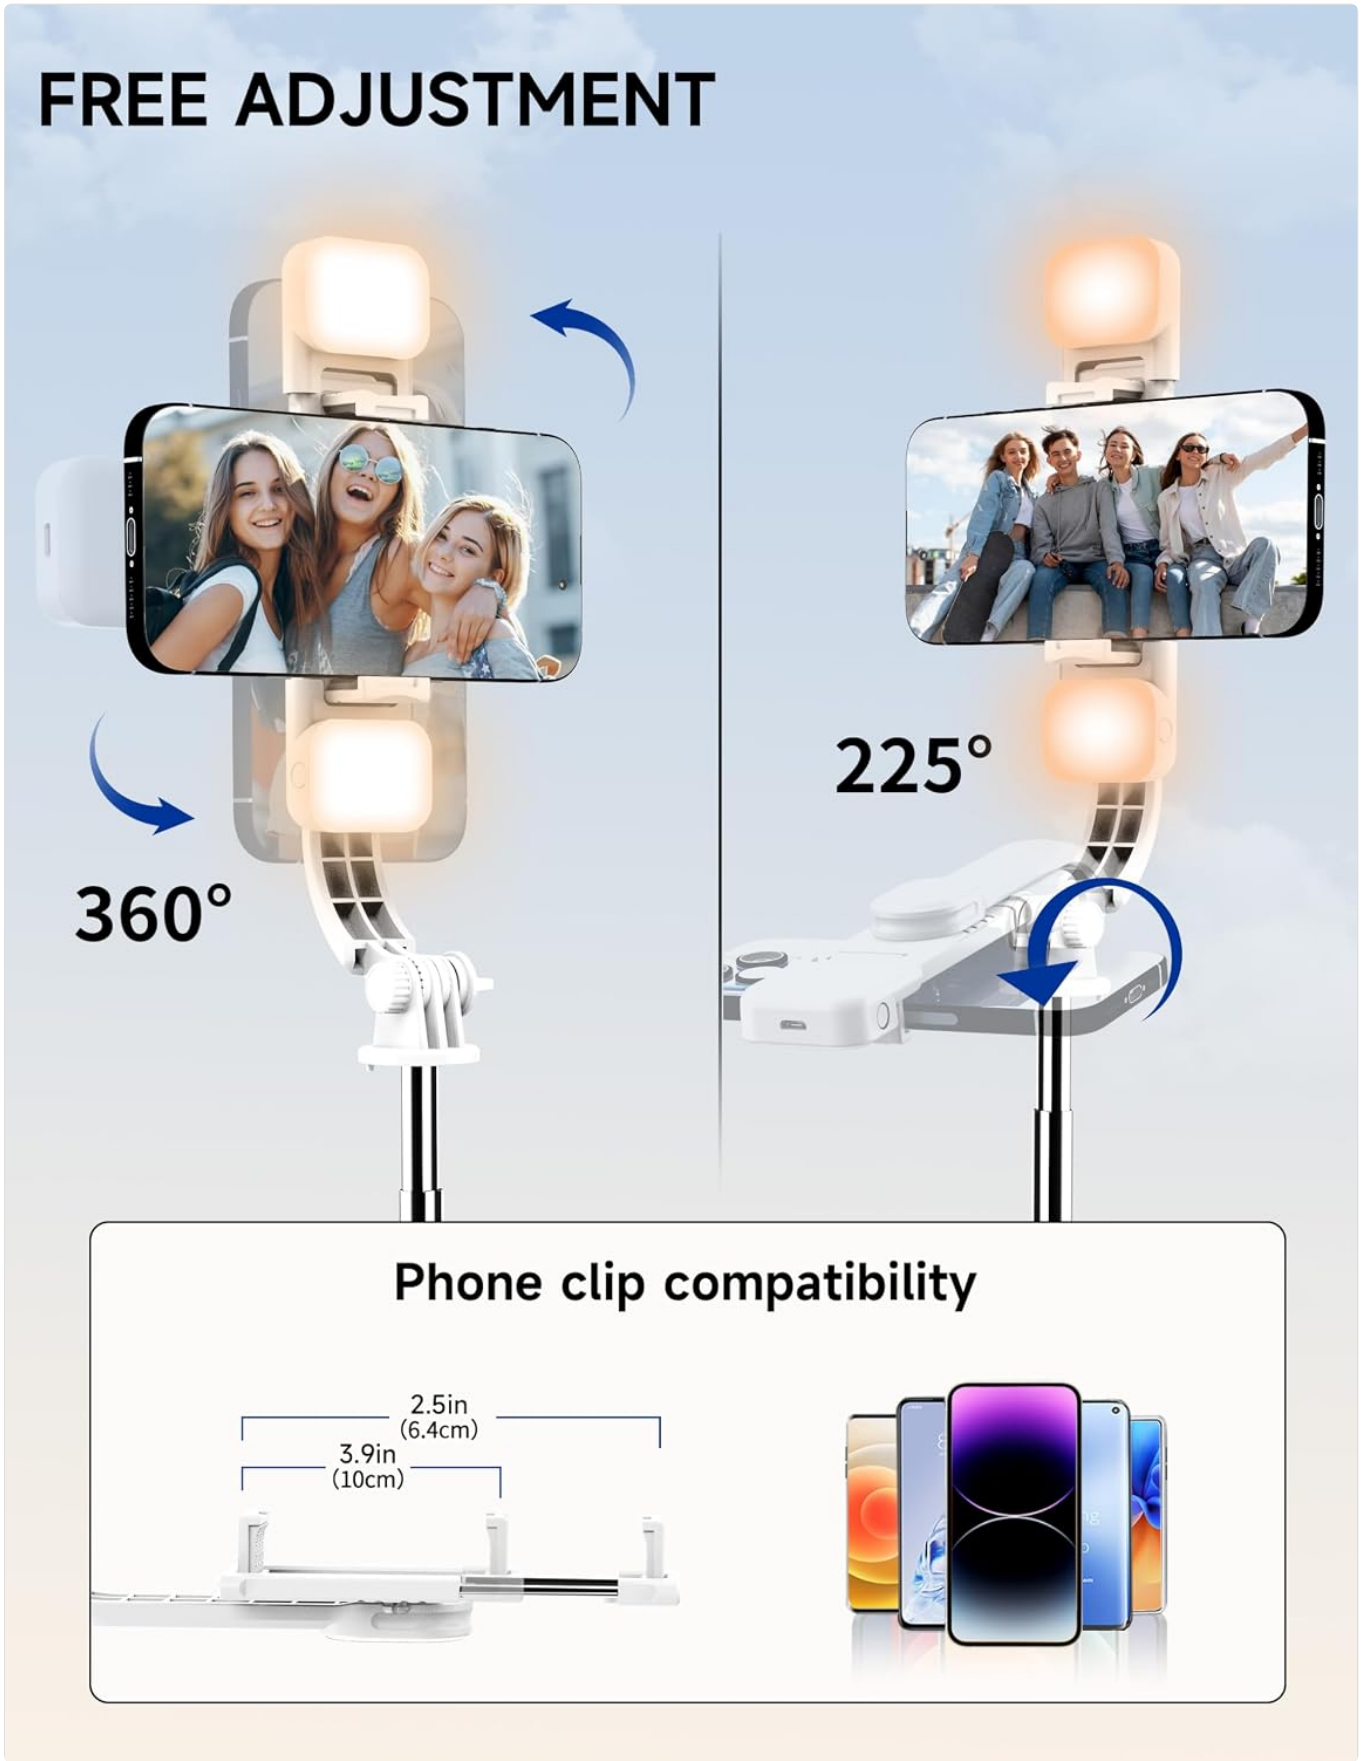


Figure 6: Illustrates the 360-degree rotation capability of the phone holder and the 180-degree neck adjustment for flexible positioning.

3.3. Using the Dimmable Fill Lights

- The selfie stick features two detachable fill lights. To activate, press the power button on each light.
- Each light offers 3 color modes: warm light, natural light, and white light. Press the power button repeatedly to cycle through these modes.
- Each color mode has two brightness levels. A short press typically changes the color mode, while a long press or a second button (if present) adjusts brightness. Refer to the specific light unit for exact operation.
- The lights are rechargeable via the included USB cable.



Figure 7: Demonstrates the two detachable fill lights, showcasing their ability to produce white, natural, and warm light, each with adjustable brightness.



Figure 8: Shows one of the fill lights connected to a USB charging cable, with a red indicator light signifying charging. The light turns off when fully charged.

4. Maintenance

- **Cleaning:** Wipe the selfie stick and lights with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, fold the selfie stick to its compact size and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement (Remote):** The remote control uses a replaceable battery. If the remote stops responding, carefully open the battery compartment and replace the battery with the spare provided or a compatible type.
- **Charging Fill Lights:** Recharge the fill lights using the provided USB cable when their brightness diminishes. A red light indicates charging, and it turns off when fully charged.

5. Troubleshooting

- **Remote Not Pairing:**
  - Ensure the remote is turned ON and within range (up to 10m).
  - Check if the remote's battery needs replacement.
  - Turn off and on your phone's Bluetooth, then try pairing again.
  - Forget the device "SelfieShow" in your phone's Bluetooth settings and re-pair.
- **Fill Lights Not Turning On/Dim:**
  - Ensure the lights are charged. Connect them to the USB charging cable.
  - Press the power button firmly.
- **Selfie Stick Unstable:**
  - Ensure the tripod legs are fully spread and locked into position.
  - Place the tripod on a flat, level surface.

- Do not overload the stick with accessories beyond its intended use.

6. Specifications

Model Number	L13D
Brand	SelfieShow
Folded Length	21 cm (8.3 inches)
Maximum Extended Length	115 cm (45.3 inches)
Weight	220 grams (7.8 ounces)
Number of Leg Sections	7
Compatible Devices	Smartphones (4-7 inches), GoPro
Fill Lights	2 detachable, dimmable LED lights (3 color modes, 2 brightness levels each)
Remote Control	Wireless Bluetooth, up to 10m range, replaceable Lithium Metal battery
Rotation Capability	180° neck rotation, 360° head rotation

7. Warranty and Support

For warranty information and customer support, please refer to the official SelfieShow website or contact their customer service directly. Details are typically provided on the product packaging or through the retailer where the product was purchased.
Manufacturer: SelfieShow
Date First Available: November 10, 2023

© 2023 SelfieShow. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CGND1GWZ

More documents and user manuals: **https://manuals.plus/**