Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK S160BB

LEXIBOOK Barbie S160BB Light Up Speaker Stand Instruction Manual

Model: S160BB

Introduction

This manual provides essential instructions for the safe and proper use of your LEXIBOOK Barbie S160BB Light Up Speaker Stand. Please read this manual thoroughly before operating the device and retain it for future reference.

Safety Information

Always follow basic safety precautions when using this product to reduce the risk of injury. This product is designed for children and should be used under adult supervision. Keep small parts away from young children to prevent choking hazards. Do not expose the device to water or excessive moisture. Use only the recommended power source (batteries).
The adjustable height feature allows the stand to grow with your child, ensuring a comfortable and safe experience. Ensure the stand is stable on a flat surface before use.

Package Contents

Please check that all items are present in the package:

- 1 x Speaker on Stand
- 2 x Microphones
- 1 x User Manual
- 1 x Aux-in Cable
- 1 x Phone Holder

Setup

1. Assembly

Assemble the stand components by securely connecting the base to the main pole, and then attaching the speaker unit to the top of the pole. Ensure all connections are firm and stable.




LEXIBOOK
LIMITED EDITION
BARBIE

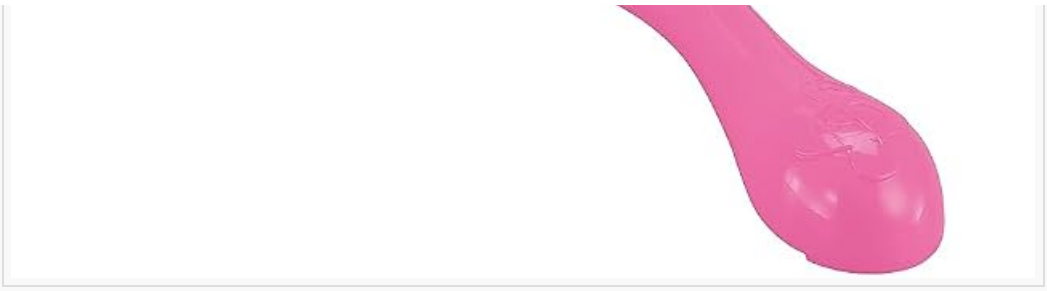


Image: Fully assembled LEXIBOOK Barbie S160BB Light Up Speaker Stand, showing the pink stand, speaker unit with Barbie graphics, and two microphones.

2. Battery Installation

Locate the battery compartment, typically on the underside or back of the speaker unit. Insert 3 AA batteries, ensuring correct polarity (+/-). Close the compartment securely.

Note: Batteries are not included and must be purchased separately.

3. Adjusting Stand Height

The stand's height is adjustable from 60 cm to 95 cm. Loosen the locking mechanism on the stand pole, adjust to the desired height, and then securely tighten the mechanism to fix the stand in place.

4. Attaching Microphones

Connect the two microphones to the designated ports on the speaker unit. Ensure they are securely plugged in.



Image: A close-up view of the pink speaker unit, showing the control panel, Barbie graphics, and the two microphones connected to their respective ports.

5. Phone Holder Installation

Attach the phone holder to the designated slot on the speaker unit. This holder allows you to place a smartphone or tablet for displaying lyrics or recording performances.



Image: The LEXIBOOK Barbie S160BB speaker unit with a smartphone securely placed in its holder, demonstrating its use for displaying content.

Operating Instructions

1. Power On/Off

Press the power button, usually located on the speaker unit's control panel, to turn the device on or off. The light effects will activate upon powering on.

2. Connecting External Audio (Aux-in)

Use the provided Aux-in cable to connect your smartphone, MP3 player, or other audio device to the Aux-in port on the speaker unit. This allows you to play your favorite music through the speaker.

Tip: Adjust the volume on your connected audio device for optimal sound balance with the microphones.

3. Microphone Usage

Speak or sing into the microphones. The speaker unit will amplify your voice. Some models may include a recording function; refer to the control panel for specific buttons (e.g., a record button) to activate this feature.



Image: A detailed view of one of the pink microphones, showing its design and on/off switch.

4. Light Effects

The speaker unit features dynamic light effects that activate when the device is powered on, enhancing the performance experience.

Maintenance

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the speaker stand in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the device will not be used for an extended period to prevent leakage.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Batteries are dead or incorrectly inserted.	Replace batteries with new AA batteries, ensuring correct polarity.
No sound from speaker.	Volume too low on connected device or speaker. Aux-in cable not fully connected.	Increase volume on both the speaker and the connected audio device. Ensure Aux-in cable is securely plugged into both devices.
Microphone volume is low.	Microphone switch is off. Volume settings.	Ensure microphone switch is in the 'ON' position. Adjust volume controls on the speaker unit if available. Reduce external music volume to hear microphone more clearly.

Problem	Possible Cause	Solution
Stand is unstable.	Locking mechanism not tightened. Uneven surface.	Ensure the height adjustment locking mechanism is fully tightened. Place the stand on a flat, stable surface.

Specifications

Feature	Detail
Model Number	S160BB
Brand	LEXiBOOK
Item Weight	1.25 pounds
Product Dimensions	22.44 x 11.42 x 4.92 inches
Batteries Required	3 AA batteries
Material Type	Plastic
Connector Type	3.5 mm Jack (Aux-in)
Compatible Devices	Smartphone, Personal Computer, Tablet
Speaker Count	1
Media Format	MP3 Audio
Power Source	Battery Powered
Voltage	5 Volts
Special Features	Adjustable Height, Dynamic Light Effects, Aux-in Cable for Audio Player Connection, Built-in Recording Function, Phone Holder

Warranty and Support

Information regarding product warranty and customer support contact details is not provided within this manual. Please refer to the product packaging or the manufacturer's official website for warranty terms and support options.

© 2023 LEXiBOOK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CH7NR644

More documents and user manuals: **https://manuals.plus/**