Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Eureka AK10 Pet

Eureka AK10 Pet Cordless Stick Vacuum Cleaner

User Manual

Model: AK10 Pet

1. Introduction

Thank you for choosing the Eureka AK10 Pet Cordless Stick Vacuum Cleaner. This powerful and versatile vacuum is designed to provide efficient cleaning for your home, especially for households with pets. Featuring a 450W BLDC motor, a 60-minute runtime, and a multi-functional design, the AK10 Pet is engineered for deep cleaning on various surfaces. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance.

2. Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Store the appliance indoors. Put away after use to prevent accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.

3. Package Contents

Carefully unpack your Eureka AK10 Pet vacuum cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Main Motor Unit
- Extension Wand
- Motorized Floor Brush
- Removable Battery Pack
- Mini Power Brush (for pet hair)
- 2-in-1 Crevice Tool
- Extension Hose
- Wall Mount Bracket
- Power Adapter/Charger
- User Manual



Image: All components of the Eureka AK10 Pet Cordless Stick Vacuum Cleaner, including the main unit, extension wand, floor brush, and various attachments.

4. Assembly and Setup

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Wand:** Insert the top end of the extension wand into the main motor unit until it clicks securely into place.
2. **Attach the Floor Brush:** Insert the bottom end of the extension wand into the motorized floor brush until it clicks securely into place.
3. **Install the Battery:** Align the removable battery pack with the slot on the main motor unit and slide it in until it clicks. Ensure it is firmly seated.
4. **Charge the Battery:** Before first use, fully charge the battery. Connect the power adapter to the charging port on the battery or the main unit, then plug it into a wall outlet. The LED display will indicate charging status.
5. **Install Wall Mount (Optional):** Choose a suitable location near a power outlet. Secure the wall mount bracket

to the wall using the provided screws and anchors. This allows for convenient storage and charging.



Image: The removable battery pack can be easily detached for charging, either while connected to the vacuum or independently.

5. Operation

Powering On/Off and Mode Selection

To turn on the vacuum, press the power button. The vacuum will start in Eco mode. To cycle through the cleaning modes (Eco, Standard, Boost), press the mode selection button. Press the power button again to turn off the vacuum.



Image: The intelligent LED display provides real-time information on the selected cleaning mode and battery status, allowing for full control during operation.

Cleaning Modes and Suction Power

The Eureka AK10 Pet offers three distinct cleaning modes to suit various cleaning needs:

- **Eco Mode (7kPa):** Ideal for light cleaning and extending battery life.
- **Standard Mode (12kPa):** Suitable for everyday cleaning tasks.
- **Boost Mode (29kPa):** Provides maximum suction for stubborn dirt and deep cleaning.

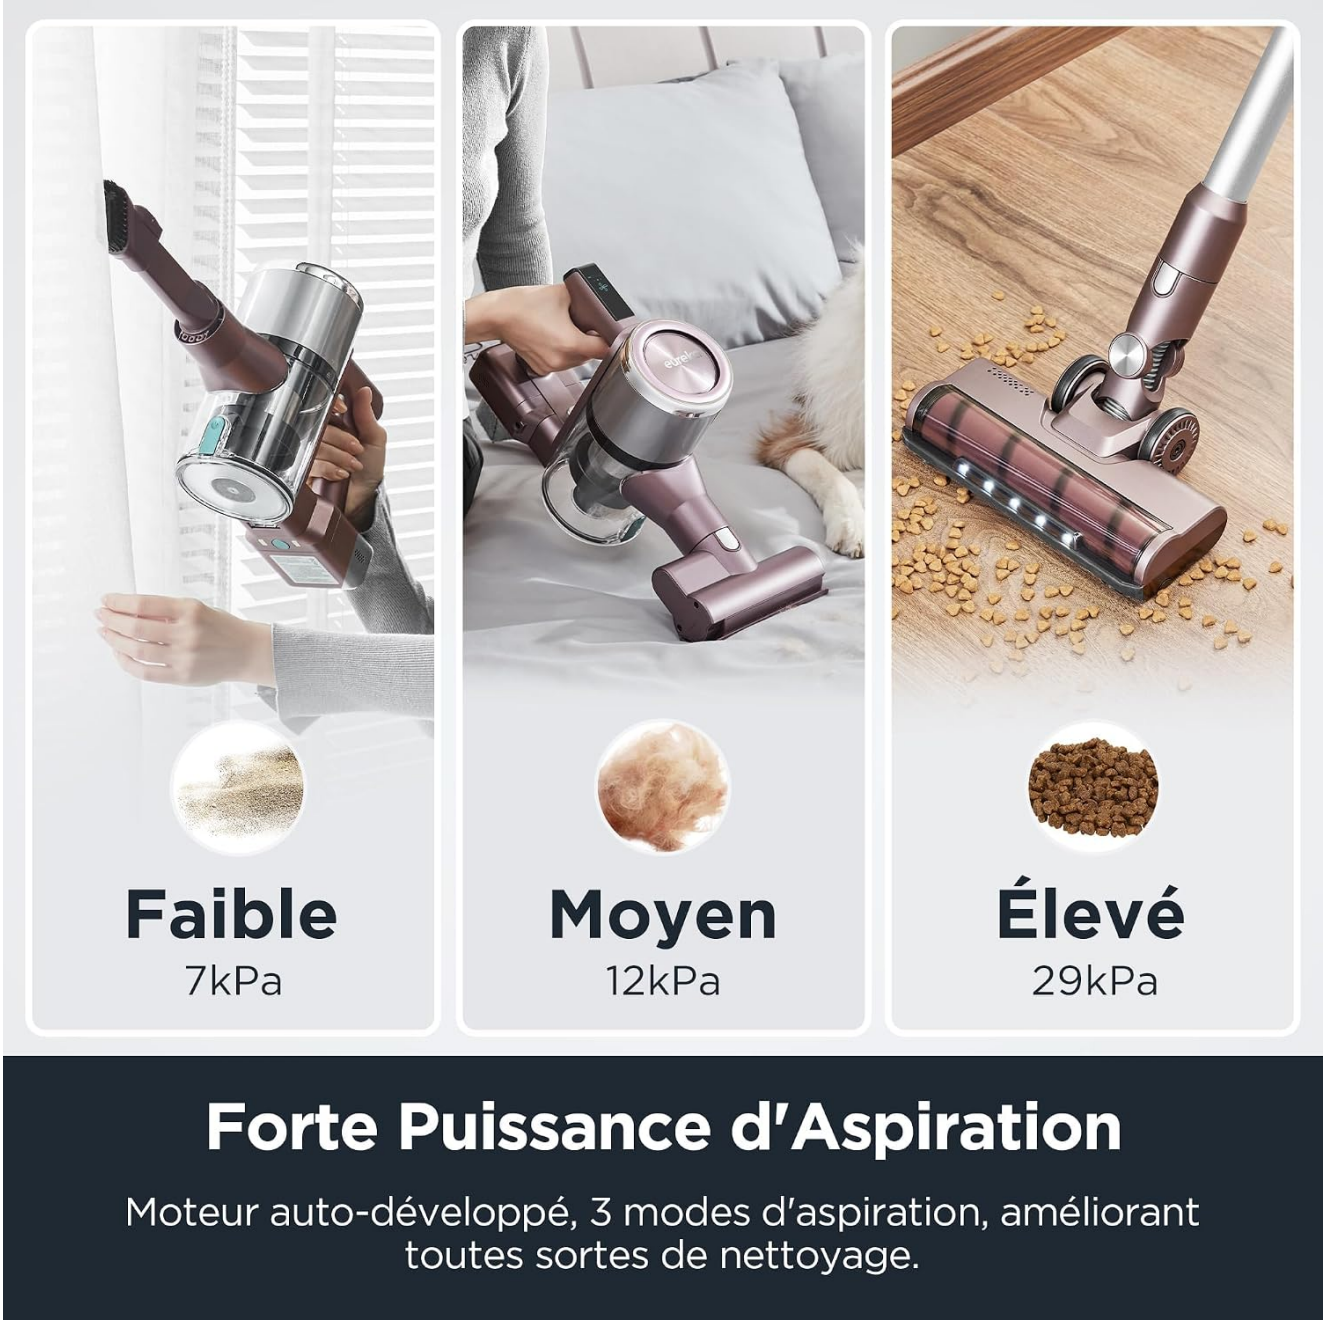


Image: Visual representation of the three suction power levels (Low, Medium, High) available on the Eureka AK10 Pet, demonstrating its versatility for different cleaning challenges.

Using Attachments

The AK10 Pet comes with a variety of accessories for comprehensive cleaning:

- **Motorized Floor Brush:** Best for hard floors, tiles, carpets, and rugs. Features an integrated LED headlight to illuminate dark areas under furniture.
- **Mini Power Brush:** Specifically designed for pet hair removal from upholstery, pet beds, and stairs, effectively eliminating pet dander and dust mites.
- **2-in-1 Crevice Tool:** Perfect for cleaning tight corners, crevices, and hard-to-reach areas.
- **Extension Hose:** Provides added flexibility and reach for cleaning high surfaces or inside vehicles.



Image: The Eureka AK10 Pet with its versatile accessories, including the crevice tool for tight spaces, the main brush for floors, and the handheld configuration for upholstery and car interiors.



Image: The specialized mini power brush attachment is highly effective for removing pet hair and dander from various surfaces, making it ideal for pet owners.

LED Headlight

The motorized floor brush features an integrated LED headlight that illuminates dark areas, such as under beds, sofas, and furniture, ensuring no dust or debris is missed during cleaning.

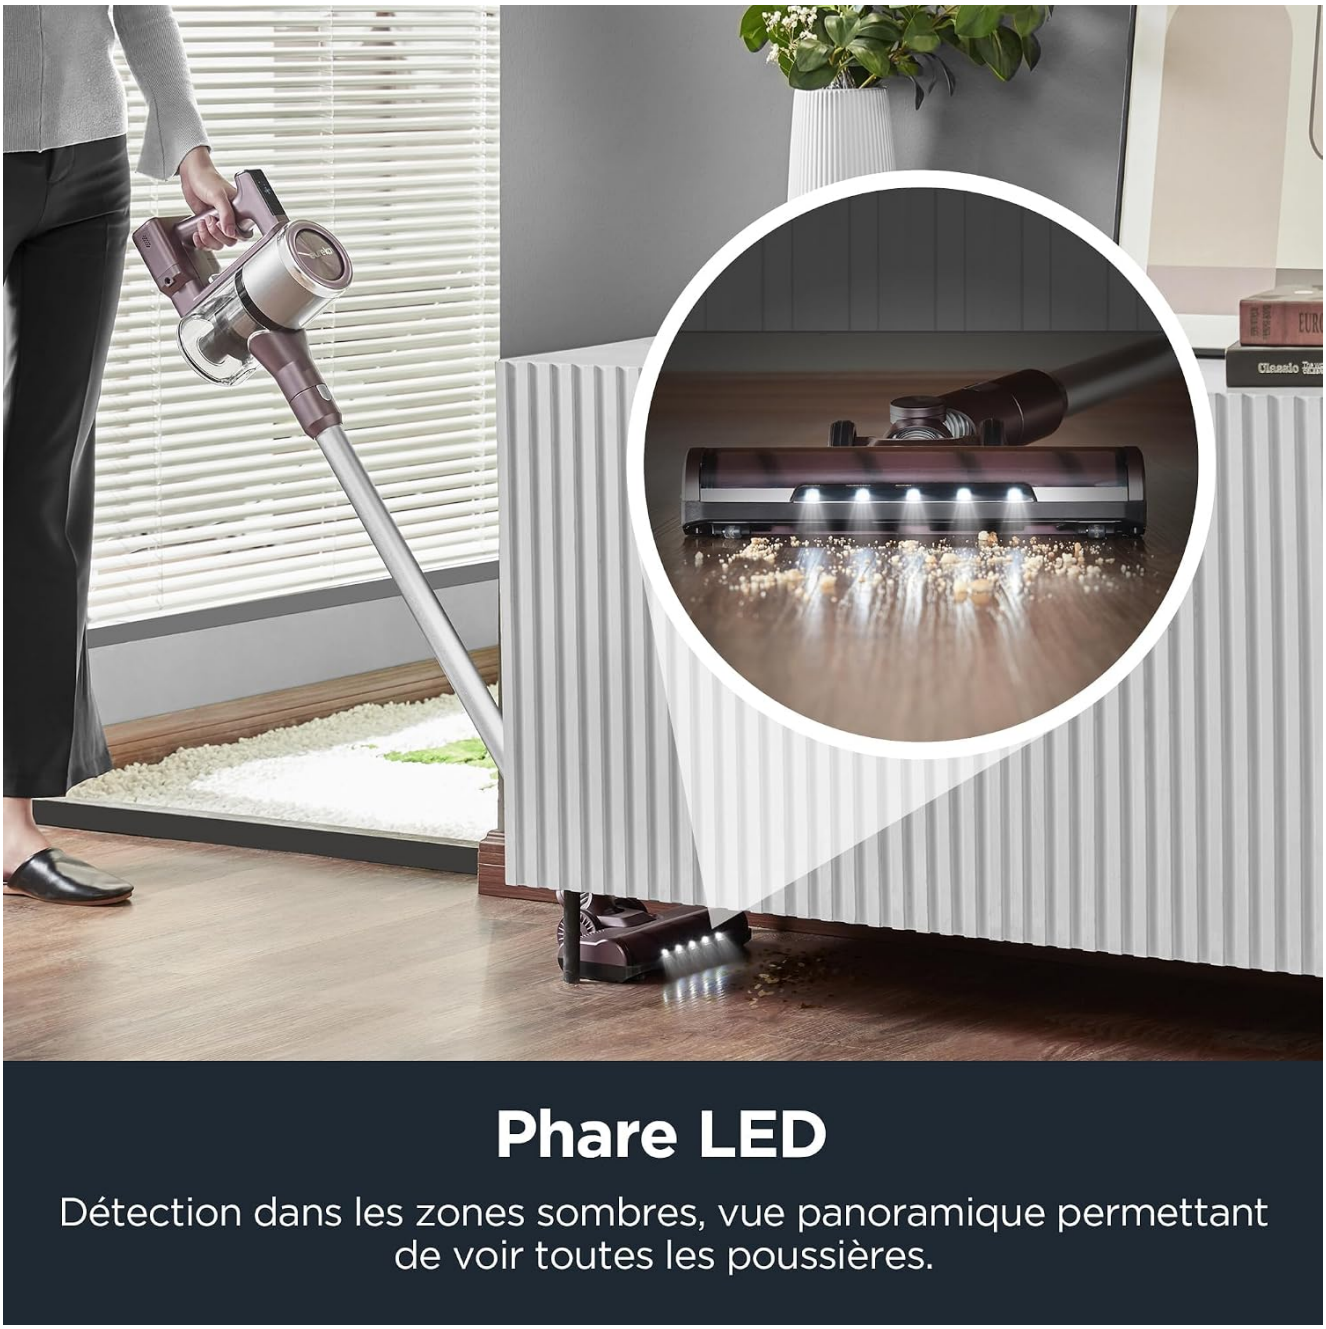


Image: The LED headlight on the floor brush effectively illuminates hidden dust and debris in dark corners and under furniture, ensuring thorough cleaning.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

Emptying the Dustbin

Empty the dustbin regularly, especially when the debris reaches the MAX fill line. To empty, detach the dustbin from the main unit and press the release button to open the bottom flap, allowing contents to fall into a trash can.

Cleaning Filters

The Eureka AK10 Pet features a 5-level filtration system, including a HEPA filter. For best performance, clean the filters regularly:

- **Pre-Motor Filters:** Remove the pre-motor filters from the dustbin. Tap off loose dirt. Rinse under cold water until water runs clear. Allow to air dry completely for at least 24 hours before reinserting.
- **HEPA Filter:** The HEPA filter should be cleaned periodically. Tap off loose dirt. Do not wash the HEPA filter

with water. Replace if heavily soiled or damaged.

Note: Ensure all filters are completely dry before reassembling the vacuum to prevent damage and maintain suction power.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. To clean, remove the brush roll from the floor brush head. Use scissors to cut away any tangled hair or threads, then remove them. Reinsert the brush roll securely.

7. Troubleshooting

If you encounter any issues with your Eureka AK10 Pet, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged Battery not properly installed Power button not pressed	Charge the battery fully Ensure battery is clicked into place Press the power button firmly
Low suction power	Dustbin full Filters clogged Brush roll tangled Nozzle/hose blocked	Empty dustbin Clean or replace filters Clean brush roll Check for and remove blockages
Brush roll not spinning	Brush roll tangled Floor brush head blocked Connection issue	Clean brush roll Remove any blockages from floor brush head Ensure floor brush is securely attached to wand
Short battery runtime	Using Boost mode frequently Battery not fully charged Aging battery	Use Eco or Standard mode for longer runtime Ensure battery is fully charged before use Consider purchasing a replacement battery
Unusual noise	Blockage in vacuum Damaged component	Check for and remove any blockages Contact customer support if noise persists

If the problem persists after trying these solutions, please contact Eureka customer support for assistance.

8. Specifications

Feature	Specification
Model Number	AK10 Pet
Power	450 Watts
Voltage	29.6 Volts
Suction Power (Max)	29 KPa (150 AW)

Feature	Specification
Number of Speeds	3 (Eco, Standard, Boost)
Noise Level	82 dB
Runtime (Max)	60 minutes
Battery Type	Lithium-ion (8 cells included)
Filter Type	HEPA Filter, 5-level filtration system
Product Dimensions (L x W x H)	20 x 20 x 110 cm
Item Weight	3.2 Kilograms
Special Features	One-touch control, Multi-purpose handheld vacuum, Removable battery, LED headlights, Touch control, Washable dustbin and filters, Large dustbin, Easy emptying, Wall mount, High performance, Smart LED screen

9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Eureka website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Eureka. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CHM29YSP

More documents and user manuals: **https://manuals.plus/**