Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lexibook DM10

Lexibook Electronic Dance Mat DM10 User Manual

Model: DM10

1. Introduction

The Lexibook Electronic Dance Mat DM10 is an interactive dance mat designed to provide an engaging and active play experience. It features light-up keys, an integrated speaker with Bluetooth connectivity, and multiple game modes to encourage coordination, creativity, and motor skills development.

2. Safety Information

WARNING! Not suitable for children under 3 years. Choking hazard due to small parts.
WARNING! This toy produces flashes that may trigger epilepsy in sensitive individuals.
Always supervise children during use. Ensure the play area is clear of obstacles to prevent falls. Do not expose the mat to water or extreme temperatures. Use only the recommended battery type.

3. Package Contents

Please check that all items are present in the package:

- 1 Electronic Dance Mat
- 1 USB-C cable
- 1 User Manual

4. Setup

4.1 Battery Installation

The dance mat requires 3 AA batteries (not included).

1. Locate the battery compartment on the control panel.
2. Using a screwdriver, open the battery compartment cover.

3. Insert 3 AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

4.2 Placement

Place the dance mat on a flat, dry, and clear surface. Ensure there is enough space around the mat for safe movement during play.



Image 4.2.1: The Lexibook Electronic Dance Mat ready for use, featuring star-shaped buttons and a central control unit.

5. Operating Instructions

5.1 Power On/Off

Press the power button located on the control panel to turn the dance mat on or off.

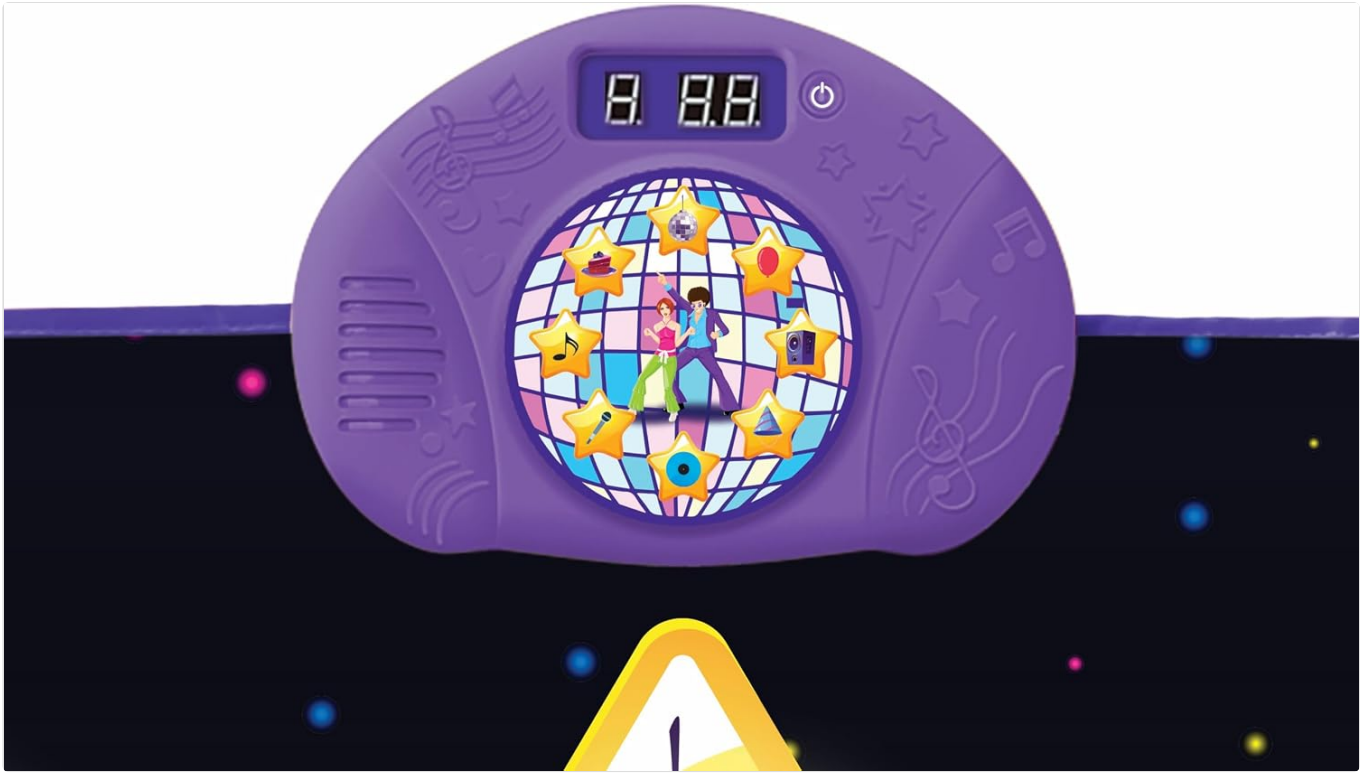

Image 5.1.1: Detail of the control panel, highlighting the power button and digital display.

5.2 Game Modes

The dance mat offers 6 dynamic game modes. Refer to the included user manual for detailed instructions on how to select and play each mode. The light-up keys will guide players through the steps.

5.3 Bluetooth Connectivity

The integrated speaker allows connection via Bluetooth to play your favorite music. Follow these steps to connect:

1. Ensure the dance mat is powered on.
2. Activate Bluetooth on your external audio device (e.g., smartphone, tablet).
3. Search for available devices and select "Lexibook DM10" (or similar name) to pair.
4. Once connected, audio from your device will play through the mat's speaker.

5.4 Volume Control

The mat features 5 sound levels. Use the volume control buttons (typically marked with '+' and '-') on the control panel to adjust the audio output to a comfortable level.

5.5 Score Counter

An integrated score counter tracks performance during game modes. The digital display on the control panel will show your score, encouraging improvement and friendly competition.

6. Maintenance

6.1 Cleaning

To clean the dance mat, gently wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the mat in water. Ensure the mat is completely dry before storage or next use.

6.2 Storage

When not in use, store the dance mat in a dry place away from direct sunlight and extreme temperatures. Remove batteries if the mat will not be used for an extended period to prevent leakage.

7. Troubleshooting

- **Mat does not power on:** Check if batteries are correctly installed and not depleted. Replace with new AA batteries if necessary.
- **No sound:** Ensure the volume is turned up. Check Bluetooth connection if playing external music.
- **Buttons not responding:** Ensure the mat is on a flat surface. Check for any debris obstructing the buttons.
- **Bluetooth connection issues:** Ensure the mat is in pairing mode and within range of your device. Try restarting both the mat and your device.

8. Specifications

Feature	Detail
Model Number	DM10
Dimensions (L x W x H)	85.5 x 98 x 4 cm
Weight	512 grams
Recommended Age	3 years and up
Educational Value	Develops creativity, coordination, and imagination
Number of Players	1
Batteries Required	Yes (3 AA batteries)
Batteries Included	No
Main Material	Plastic
Color	Purple / Yellow
ASIN	B0CJ2HR63H
First Available Date	September 14, 2023

9. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or visit the official Lexibook website. You can also contact Lexibook customer service directly for assistance with product issues or inquiries.
Lexibook Brand Store: https://www.amazon.fr/stores/Lexibook/page/5FEDF63A-FC1E-4CCC-A405-DAAE6B900C55

© 2024 Lexibook. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CJ2HR63H

More documents and user manuals: **https://manuals.plus/**