Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BC26B

Braun Classic Analogue Wall Clock

Model: BC26B | Brand: Braun

Visit Braun Store

1. Product Overview

The Braun Classic Analogue Wall Clock, Model BC26B, is designed for clear and precise timekeeping with a minimalist aesthetic. It features a silent sweeping quartz movement, ensuring a quiet environment, and an easy-to-read dial with luminous hands for optimal legibility.



Figure 1.1: Front view of the Braun Classic Analogue Wall Clock.

Key Features:

- **Simple Timekeeping:** Clean and easy-to-read dial with contrasting hour and minute hands, featuring luminescent tips for visibility in low light.
- **Quiet Precision:** Equipped with a precision quartz movement and a silent sweeping second hand, eliminating audible ticking sounds.
- **Classic Braun Design:** Embodies the Braun design ethos of 'less but better' with its clean matte black case and clear dial.
- **Compact Dimensions:** Measures W23cm x H23cm x D3.5cm (approximately 9.05"W x 9.05"H x 1.38"D).
- **Battery Operated:** Requires 1 x AA battery (not included) for operation.

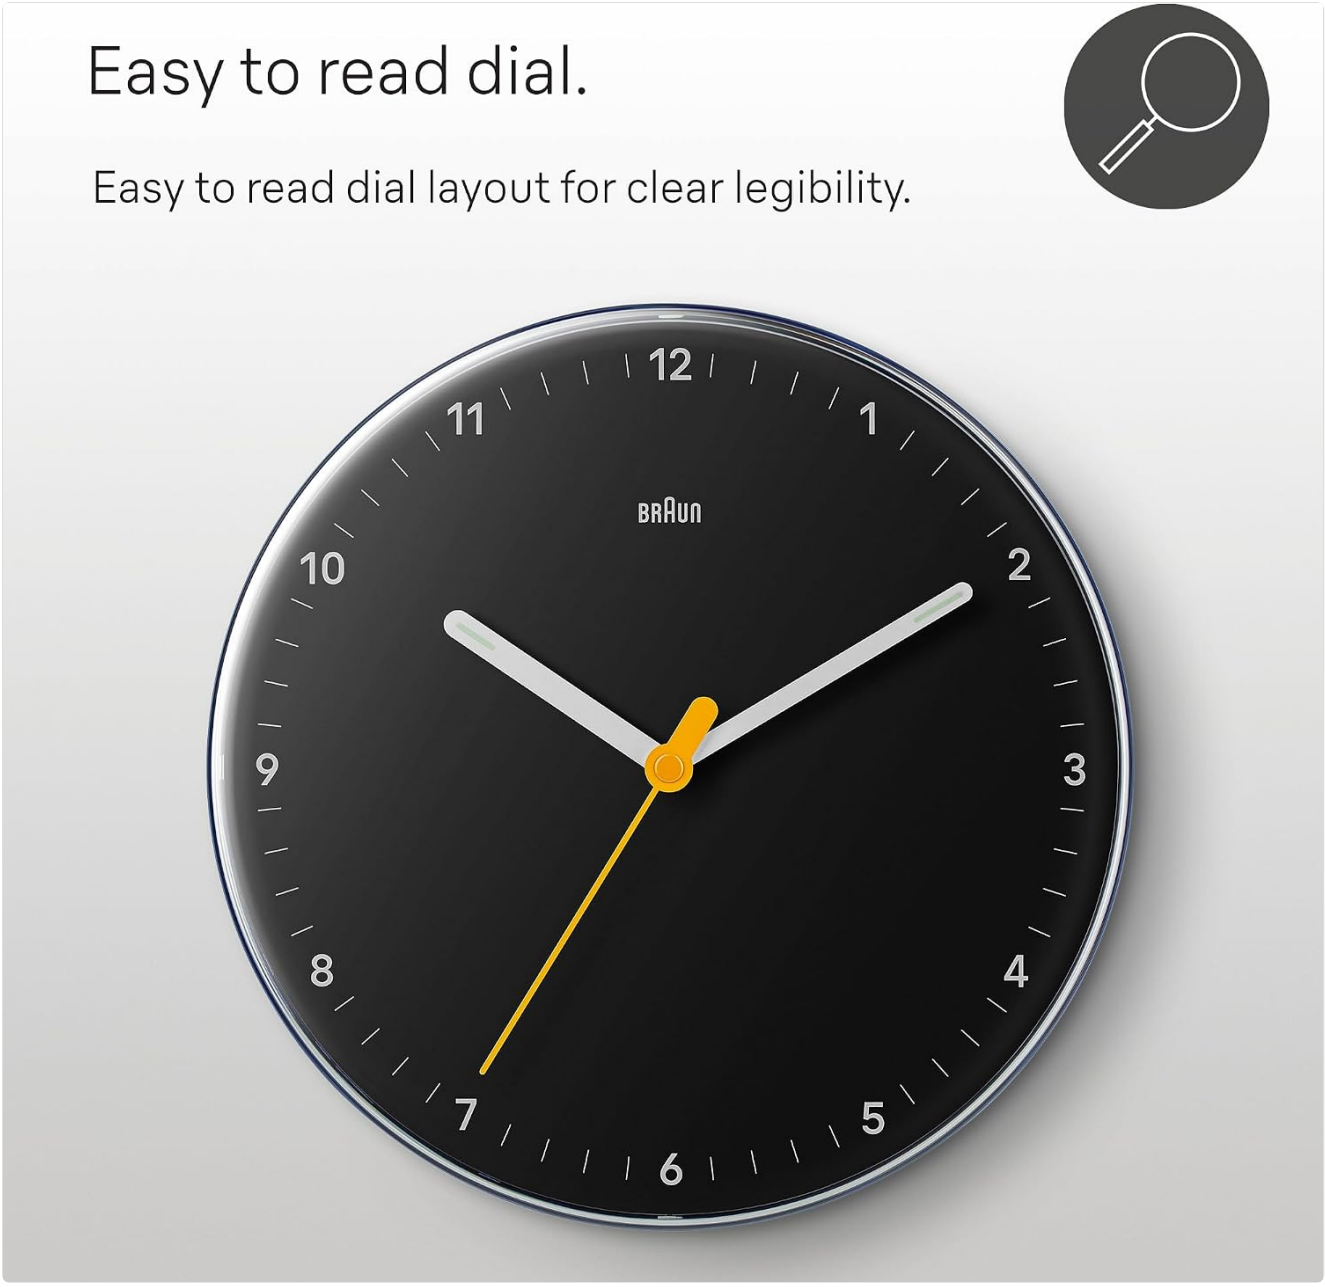

Figure 1.2: Easy-to-read dial layout for clear legibility.



Figure 1.3: Silent sweeping second hand for quiet operation.



Figure 1.4: Luminous tipped hour and minute hands for low-light visibility.

2. Setup and Installation

2.1 Battery Installation

The clock requires one (1) AA battery (not included). For optimal performance, use a new alkaline battery.

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.



Figure 2.1: Rear view of the clock, highlighting the battery compartment and setting knob.

2.2 Wall Mounting

The clock is designed for wall mounting. Ensure you use appropriate hardware for your wall type.

1. Choose a suitable location on a wall where the clock will be easily visible and accessible.
2. Install a screw or hook into the wall at the desired height. Ensure the screw head is small enough to fit into the hanging slot on the back of the clock but large enough to securely hold the clock's weight.
3. Align the hanging slot on the back of the clock with the installed screw/hook.

4. Carefully lower the clock onto the screw/hook until it is securely seated and level.

3. Operation

3.1 Setting the Time

Once the battery is installed, you can set the correct time.

1. Locate the time setting knob on the back of the clock (refer to Figure 2.1).
2. Gently rotate the knob in either direction to move the hour and minute hands to the desired time.
3. Ensure the time is set accurately. The sweeping second hand will begin to move once the battery is properly installed and the time is set.

4. Care and Maintenance

4.1 Battery Replacement

Replace the battery annually or when the clock's movement becomes erratic or stops. Follow the battery installation steps in Section 2.1.

4.2 Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

5. Troubleshooting

If you encounter issues with your Braun Wall Clock, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Clock is not running or stops intermittently.	Battery is dead, incorrectly installed, or low on power.	Replace with a new AA alkaline battery, ensuring correct polarity (+/-).
Time is inaccurate.	Low battery power or external interference.	Replace the battery. Ensure the clock is not near strong magnetic fields or extreme temperature fluctuations.
Audible ticking sound.	This model features a silent sweeping second hand. If ticking is heard, it may indicate a defect or a non-genuine product.	Contact customer support if the clock is genuinely ticking.
Hands are not luminous.	Insufficient exposure to light.	Ensure the clock is exposed to sufficient ambient light during the day to charge the luminous material.

6. Technical Specifications

Feature	Detail
Brand	Braun
Model Number	BC26B
Color	Black
Display Type	Analog
Special Feature	Silent Clock (Sweeping Second Hand)
Product Dimensions	23cm W x 23cm H x 3.5cm D (9.05"W x 9.05"H)
Power Source	Battery Powered
Battery Requirement	1 x AA battery (not included)
Mounting Type	Wall Mount
Material	Metal frame, Crystal lens
Item Weight	313 Grams (11 ounces)
Indoor/Outdoor Usage	Indoor

7. Warranty and Support

7.1 Warranty Information

This Braun Classic Analogue Wall Clock comes with a **Full Warranty**. For specific terms and conditions, please refer to the warranty card included with your product or visit the official Braun website.

7.2 Customer Support

For further assistance, technical support, or warranty claims, please contact Braun customer service through their official website or the contact information provided in your product packaging. You can also visit the **Braun Store on Amazon** for more product information and support resources.

© 2023 Braun. All rights reserved. Information subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CJFVLY5C

More documents and user manuals: **https://manuals.plus/**