Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JOYROOM JOYROOM

JOYROOM MagSafe Airplane Phone Holder Instruction Manual

Model: JOYROOM

Introduction

Thank you for choosing the JOYROOM MagSafe Airplane Phone Holder. This versatile accessory is designed to provide a hands-free viewing experience for your smartphone in various settings, including airplanes, cars, and home environments. Its strong magnetic attachment and adjustable clamp ensure secure and flexible positioning.

Product Overview

The JOYROOM MagSafe Airplane Phone Holder features a foldable design for portability, a strong magnetic ring for MagSafe compatible devices, and an adjustable clamp for secure attachment to various surfaces.



Figure 1: JOYROOM MagSafe Airplane Phone Holder in use on an airplane seat.

Package Contents

- JOYROOM MagSafe Airplane Phone Holder
- Metal Magnetic Ring (for non-MagSafe devices)
- Wet and Dry Wipes (for metal ring application)



Figure 2: Included accessories: holder, magnetic ring, and cleaning wipes.

Setup

Attaching the Metal Magnetic Ring (for non-MagSafe devices)

1. Clean the back of your phone case or phone with the provided wet and dry wipes.
2. Use the magnetic positioning card (if included) to find the optimal center for the magnetic ring on your device.
3. Peel off the adhesive backing from the metal magnetic ring.
4. Carefully align and press the magnetic ring onto the cleaned surface of your phone case or phone. Ensure it is firmly attached.

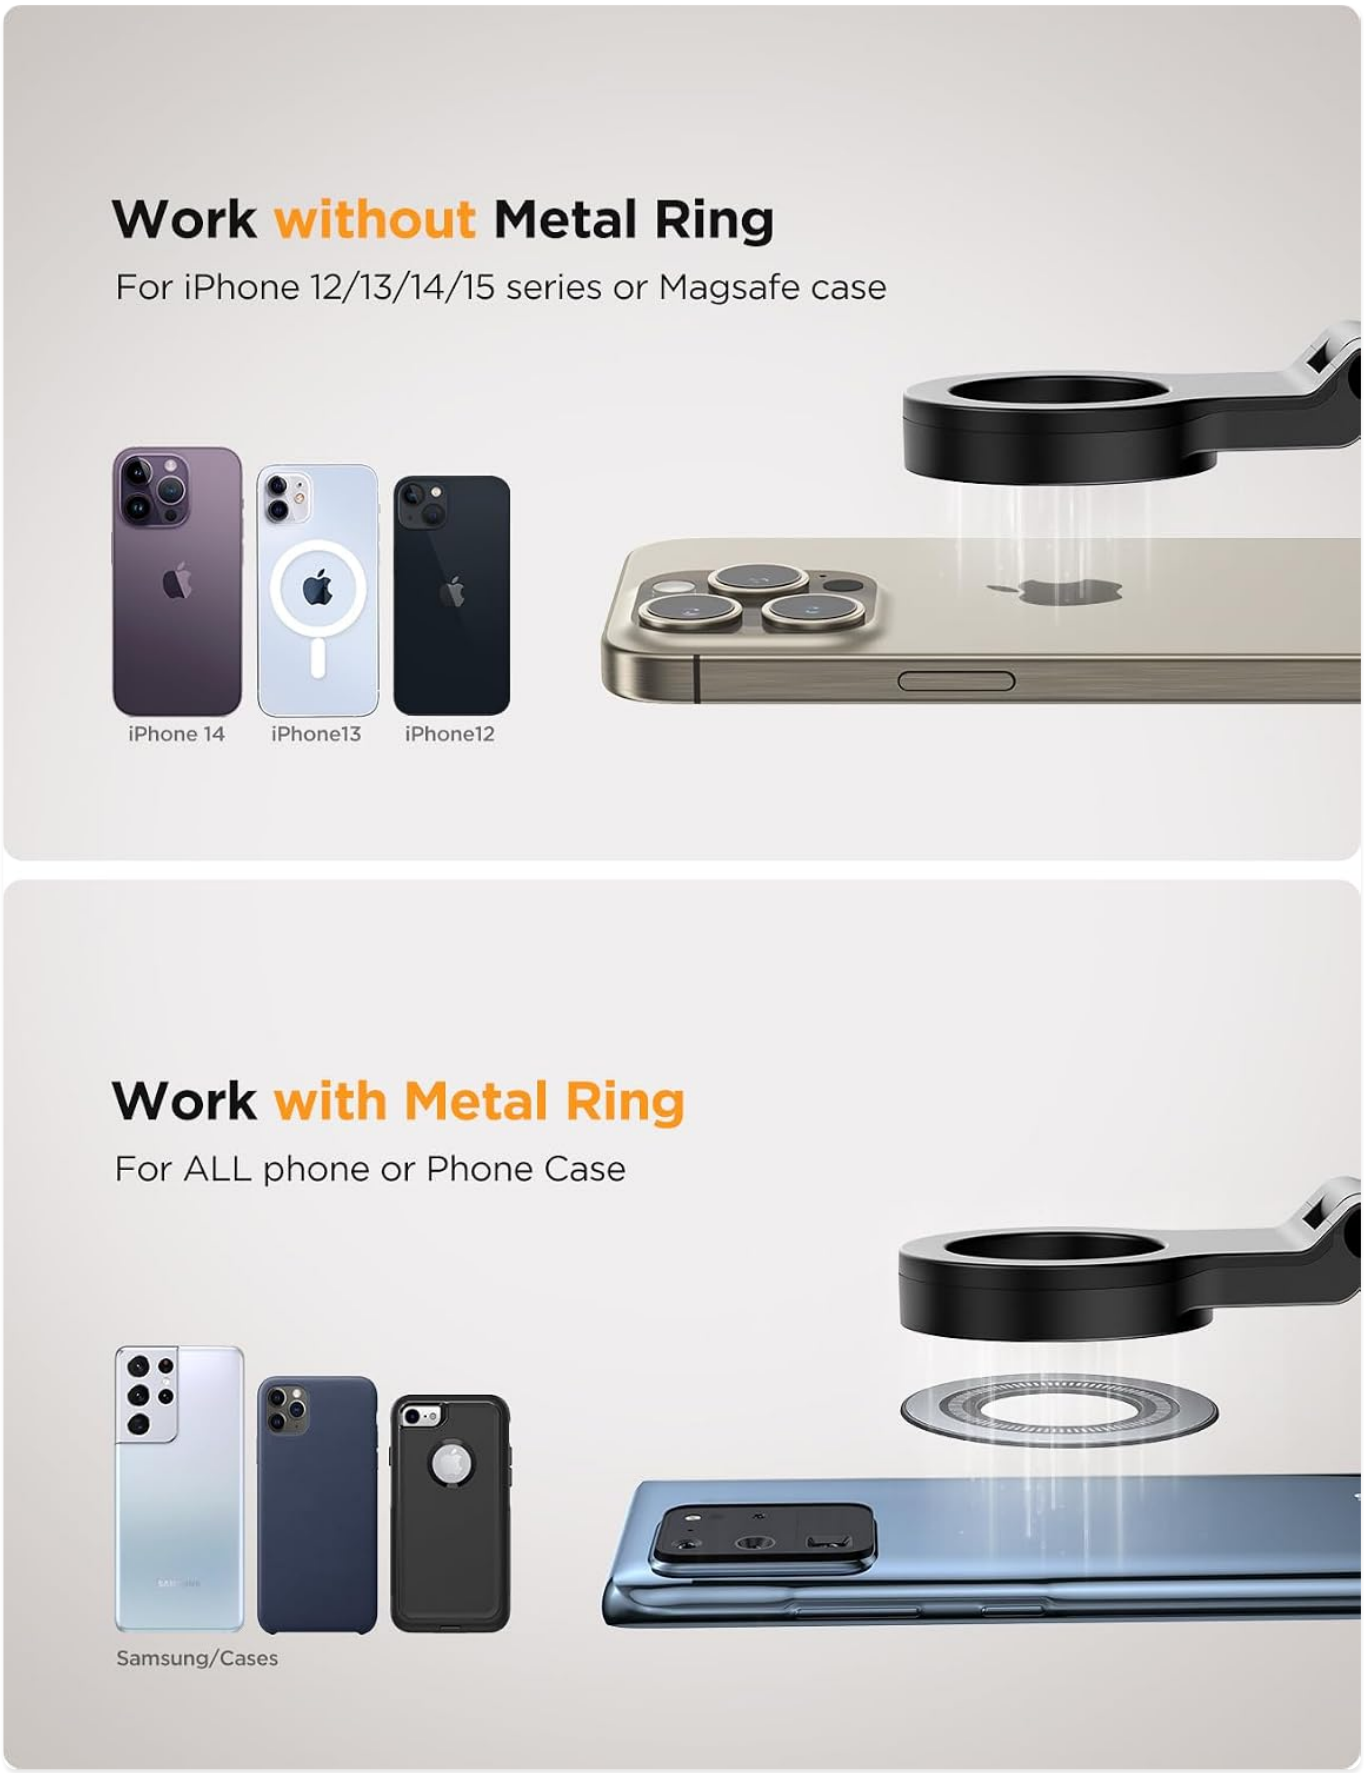

Figure 3: Applying the metal magnetic ring for non-MagSafe compatibility.

Operating Instructions

1. Attaching the Holder to a Surface

- **Adjusting the Clamp:** Locate the adjustment knob on the holder. Slide it to open the clamp to the desired width. The clamp can accommodate surfaces up to 1.5 inches thick.
- **Secure Placement:** Position the clamp firmly onto a stable surface such as an airplane tray table, desk, kitchen cabinet, or luggage handle. Ensure the clamp is tight to prevent movement.



Figure 4: Adjusting the clamp for various surface thicknesses.

2. Attaching Your Phone

- **MagSafe Compatibility:** For iPhone 12/13/14/15/16/17 series or MagSafe cases, simply bring your phone close to the magnetic ring on the holder. The strong magnets will securely attach your device.
- **Non-MagSafe Devices:** If you have applied the metal magnetic ring to your device, align it with the holder's magnetic ring for a secure connection.

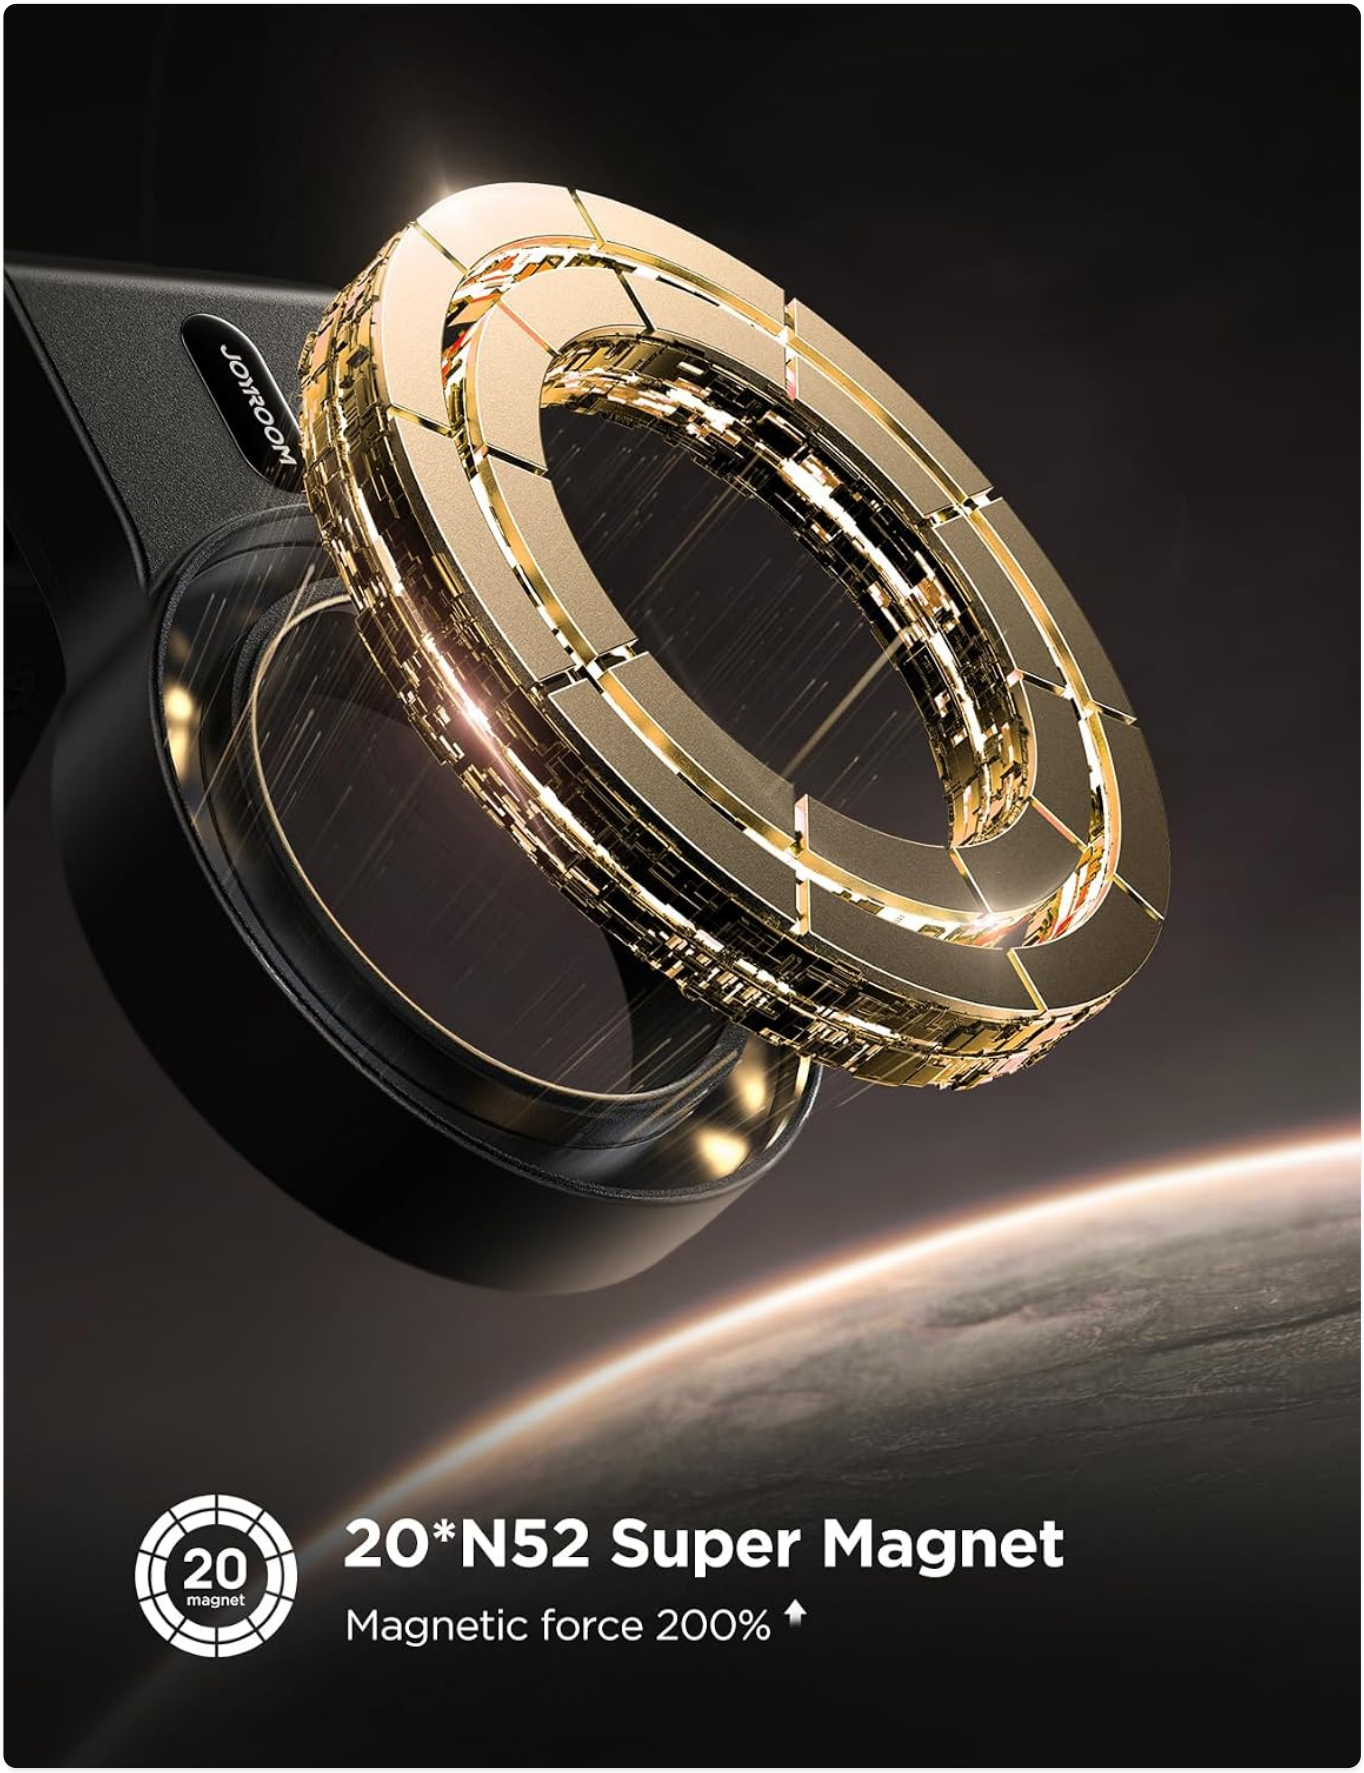

Figure 5: Securely attaching a MagSafe compatible phone to the holder.

3. Adjusting Viewing Angle

- The holder features a 360° rotatable ball head and a swivel design. Adjust the phone's position to achieve your preferred horizontal or vertical viewing angle.
- The rotating mechanism is designed with silicone dampers for smooth and silent adjustments.



Figure 6: Demonstrating the flexible viewing angles of the phone holder.

Maintenance

- Keep the magnetic surface clean and free of debris to ensure optimal magnetic strength.

- Wipe the holder with a soft, damp cloth as needed. Avoid harsh chemicals.
- Store the holder in its folded, compact form when not in use to protect its mechanisms.

Troubleshooting

Phone Not Attaching Securely:

- Ensure your phone or case is MagSafe compatible or has the provided metal magnetic ring correctly installed.
- Check for any obstructions (e.g., thick cases, pop sockets) between the phone and the holder's magnetic surface.
- Clean the magnetic surfaces on both the holder and your phone/case.

Holder Not Clamping Firmly:

- Verify that the surface you are clamping to is within the 1.5-inch thickness limit.
- Ensure the adjustment knob is tightened sufficiently after positioning the clamp.
- Avoid clamping to rounded or uneven surfaces that may reduce grip.

Specifications

Feature	Detail
Product Dimensions	4.1 x 2.2 x 2 inches
Item Weight	5.3 ounces
Model Number	JOYROOM
Brand	JOYROOM
Color	Black
Compatible Devices	iPhone 17/16/15/14/13/12, and ALL MagSafe Case; All Android models with Metal Magnetic Ring
Mounting Type	Clip

Warranty and Support

For warranty information or customer support, please refer to the product packaging or contact JOYROOM customer service directly. Keep your purchase receipt for warranty claims.

Helpful Product Videos

Official Product Overview

Your browser does not support the video tag.

This video provides an official overview of the JOYROOM MagSafe Airplane Phone Holder, demonstrating its features and various uses.

JOYROOM MagSafe Airplane Phone Holder Demonstration

Your browser does not support the video tag.

A detailed demonstration of the JOYROOM MagSafe Airplane Phone Holder, showcasing its functionality and ease of use.

© 2026 JOYROOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CJTVX54B

More documents and user manuals: **https://manuals.plus/**